



This product consists of a solar cell, rechargeable battery and LED light. During the day, sunlight charges the battery. At night, the energy stored in the battery is used to power the light. No other power or connections are required. The length of time the light will stay on for depends on how much sunlight has been received during the day.


The solar panel should be located where sunlight can fall directly on it – avoid shadows from buildings, trees, walls, hedges and similar objects, as these will reduce performance.

Please read and follow all instructions before operating your lights. Save this manual for future reference.

BEFORE FIRST USE

- To maximize battery capacity, the solar light should be fully charged by sunlight for 24-28 hours before use.
- Do not place the solar panel near lit objects such as street lamps, because at night the device may mistake lit objects for daytime and may not turn on properly.

PARTS LIST

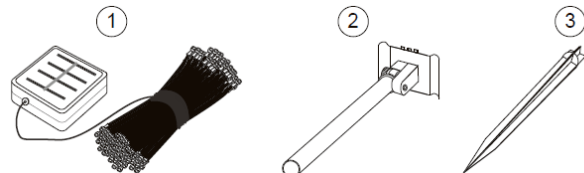

- ① 1 x electronic control box with LED strand
- ② 1 x ground tube
- ③ 1 x pointed ground stake

OPERATION

- Choose a location where the ground is soft.
- Secure the solar panel to the tube; attach the spike to the end of the tube.
- Push the spike containing the solar panel securely into the ground.
- Adjust the angle of the solar panel so it directly faces the sun.

- There are two switches on the back. One is ON/OFF and POWER. Another is MODE.
- Be sure the switch is in the "ON" position for the light to work properly.
- Test in the dark - the unit does not turn on during the day or when in lit areas.
- Arrange the chain lights as desired.
- Use the 'Mode' button to switch between the 8 display modes (1. Combination 2. In wave 3. Sequential 4. Slow Glow 5. Chasing/Flash 6. Slow Fade 7. Twinkle/Flash 8. Steady on).

MAINTENANCE

- Clean with a soft damp cloth.
- Do NOT use abrasives or solvents.
- Do NOT disassemble or attempt to repair the solar marker housing other than to replace the rechargeable battery.
- Clean regularly as a build up of dirt on the solar panel will reduce performance.

REPLACING THE BATTERY

- Requires 1x AA Ni-MH 600MAH rechargeable battery.
- Turn the switch to OFF.
- Unscrew the 4 screws and remove the bottom plate from the control box very carefully as internal wires will still be joining the two pieces - take care not to pull hard as the connection will break.
- Observe correct polarity when inserting replacement battery.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

