 


HYDROBREEZE

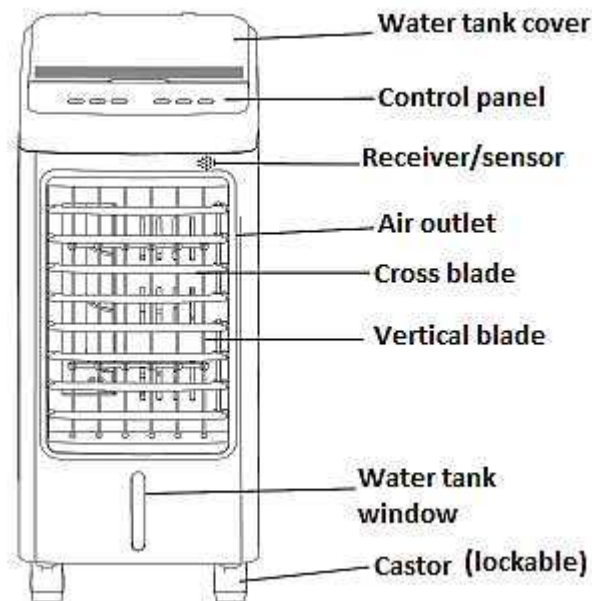

Power Details: 220-240V
65W
50/60Hz
Max water injection rate: 4L

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Air Cooler.

FUNCTIONS

- **Principle of Cooling:** Water is pumped from the water tank to the top, then the water drops into the paper evaporator. When the water in the paper evaporator evaporates to water vapour, the air is cooled. People will feel cool air delivered by the fan.
- **Electronics control:** Safe and durable, attractive appearance.
- **Adjustable speed and fan mode:** There are three speeds and fan modes. Cool air is blown at a wide oscillation angle.
- **Cool:** With the technology of ice crystal cooling and air humidifying, the cool temperature from the air vent raises relative humidity and prevents air drying. To increase the cooling effect, ice boxes can be placed into the top and lower tank.
- **Deliver cool air at a wide angle:** The blades oscillate automatically emitting cold air at a wide horizontal range. The blades can be manually swung transversely.
- **Far-range remote control:** The range of the remote control is 6 metres at a 60 degree wide angle.
- **Buzzer:** Audible alert when operating the keypad.

ASSEMBLING AND FILLING WITH WATER

1. **Assembling castors:** Put the appliance on a flat surface. Using the wrench (supplied) assemble the castors.
2. **Filling with water:** Pull out water tank by 1/3 and add clean water (Fig 1).

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

*Calls cost 7 pence per minute plus your telephone company's network access charge

Attention:

- Check the level of water tank in the water tank before adding water.(Fig 2)
- The level of water should not exceed the "MAX" mark on the scale at any time. When humidifying, the total level of water should not be below the "MIN" scale.
- Put ice cubes or frozen ice box into the water tank if you want to lower the temperature further. The total level of the water should never exceed "MAX" mark on the scale.
- IMPORTANT:** Adding water to the top tank (Fig 3): Please add water slowly. Do not fill water above the top plane when adding water. Ensure the level of water does not exceed the "MAX" scale of the bottom water tank.

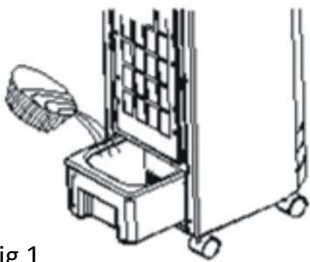 


Fig 1

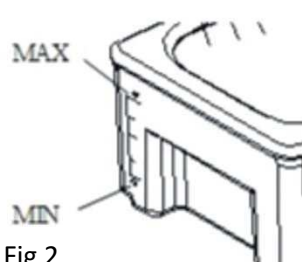 


Fig 2

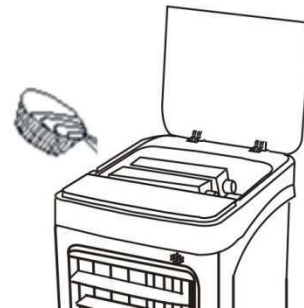 



Fig 3

OPERATION

- ON/OFF** on the back of the unit: Locate this key. Press ON to set cooler to stand-by mode.
- POWER on control panel** : Press this key to turn on the appliance, press again to shut it down .
- SPEED**: Press this key after starting the appliance. Settings are LOW-MEDIUM-HIGH-LOW in sequence.
- COOL**: Press this key to start the cooling system. To cancel the function press key again.
IMPORTANT: Please be sure there is enough water in the water tank before pressing this key.
- TIME**: Press this key to set timer from 0.5 to 7.5 hours options in 0.5 hours steps. The cooler will switch off when the timer is finished.
- SWING** : Press this key to change the direction of the air flow. The swing icon will show on the screen when the function is activated. Press the button again to stop the oscillation. The vertical direction of air flow can be adjusted manually by directing the outlet louvres up and down.
- WIND TYPE(strength of air flow)**: Press this key to choose normal wind, natural wind and sleeping wind in sequence. Normal wind does not have an indicator light, natural wind and sleeping wind have.

REMOTE CONTROL

 Fit CR2025 3V batteries. The 6 function keys on the remote control are the same as on the control panel. Point the remote control at the receiver/sensor.

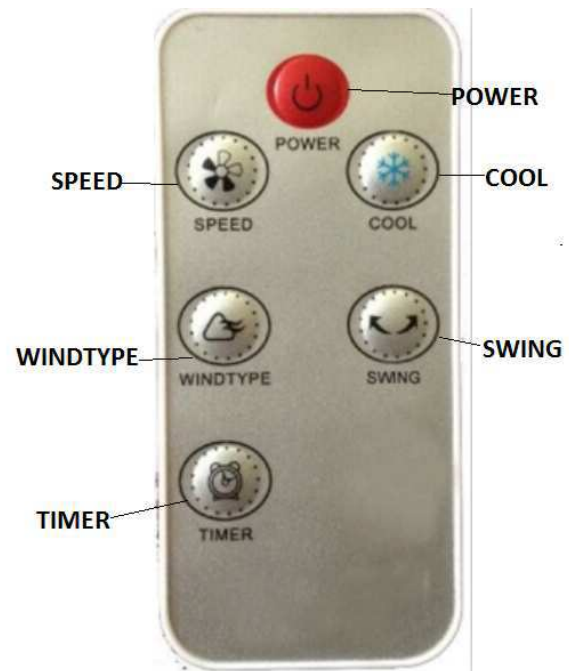

USING THE ICE BOX

The ice box is designed to keep the air cool. It can absorb heat and cool the ambient temperature.

Put the ice box into the freezer to make sure that the contents are frozen.

Open the water tank door and put the frozen ice box into the water tank.

There are two ice boxes for using in turn. The ice boxes can be used in the bottom or top water tank.

Do not add water to the ice box. Do not open it and keep away from children.

CAUTION

- Do not operate the appliance with wet hands, in order to avoid damage.
- The level of water tank should not exceed "MAX" scale at any time, when humidifying, the total level of water tank should not be under "MIN" scale.
- After adding water to the water tank, do not tilt or knock over the air cooler when moving it. If you want to move it, please push slowly from the side, in order to avoid spilling.
- Do not turn over the appliance. If it is toppled over and there is water in the body, you should unplug the power supply first. Then have it checked by a qualified technician.
- Do not cover the air vent.
- Do not knock or shake the body when using, otherwise it may cause it to stop automatically.
- Do not let the water in the water tank go stale. Renew the water in the water tank frequently.
- The fan is suitable for temperate climates only.
- Should it become necessary to move the unit after the water has been added, roll it gently to the required position and apply the castor brackets.

- The power cord is with “Y” type connection and it must be changed by professional technicians if necessary.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- DO NOT PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALL PAPER, ETC.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSER POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

CARE AND CLEANING INSTRUCTIONS

WARNING: Ensure that the fan is switched off from the mains supply before removing the air filter screen. The air filter screen and wetted pad are located at the rear grille of the unit. Undo the screws at the rear and push down the 2 clips to release the screen.

1. Clean the air filter screen (Fig 4)
2. Unplug from supply, pull the handle of the air filter screen and remove it from the appliance. Clean the air filter screen with a neutral detergent and banister brush, then clean it with clear water. Finally, reinstall filter in the appliance.
3. Clean the wetted pad (Fig 5)
4. Unplug from power supply, take down the air filter screen, then draw the wetted pad from the support. Clean the wetted pad with neutral detergent and banister brush, then clean it with clear water. Finally, reinstall in the appliance.
5. Attention: the wetted pad must be installed horizontally, in order to avoid leaking.
6. Clean the water tank (Fig 6)
7. Unplug from power supply, open the door, take out the water tanks, clean it with neutral detergent, and wash it with clear water, then reinstall in the appliance.
8. Clean the shell
9. Clean with neutral detergent and soft cloth.
10. Attention: cut off the power supply when cleaning the appliance. Ensure the control panel is dry.



Fig 4



Fig 5



Fig 6

Water should be drained from the water tanks and fresh water refilled at least once a week. The air filter and pad should be cleaned at least every two months.

The power cord should be coiled and stored away from the floor for protection.

Troubleshooting


Malfunction	Causes	Solution
No function	<ol style="list-style-type: none"> 1. Power off or poor connection. 2. "ON" key on the control panel not pressed. 	<ul style="list-style-type: none"> ● Plug in the power cord and make sure it connects well. ● Press the "ON" key on the control panel.
Poor performance	<ol style="list-style-type: none"> 1. Air filter screen blocked with dust. 2. Air inlet blocked with foreign objects. 	<ol style="list-style-type: none"> 1. Clean the air filter screen. 2. Remove blockages from air inlet.

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 **13-amp** plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of **13-amps** should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

 A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the plug are colour coded in the following way:

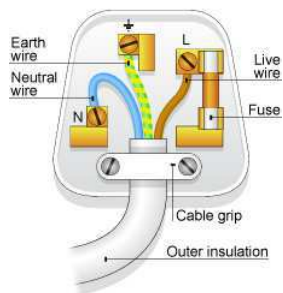

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH


The diagram shows the key features of a correctly wired three-pin mains plug.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.



 HYDROBREEZE

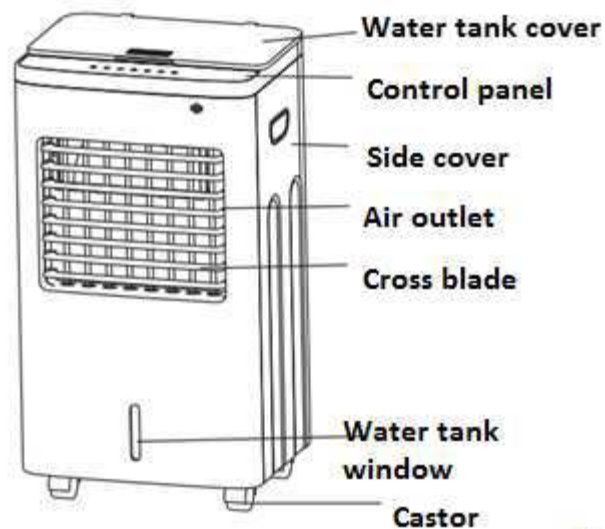

Power Details: 220-240V
75W
50/60Hz
Max water injection rate: 8L

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Air Cooler.

FUNCTIONS

- **Principle of Cooling:** Water is pumped from the water tank to the top, then the water drops into the paper evaporator. When the water in the paper evaporator evaporates to water vapour, the air is cooled. People will feel cool air delivered by the fan.
- **Electronics control:** Safe and durable, attractive appearance.
- **Adjustable speed and fan mode:** There are three speeds and fan modes. Cool air is blown at a wide oscillation angle.
- **Cool:** With the technology of ice crystal cooling and air humidifying, the cool temperature from the air vent raises relative humidity and prevents air drying. To increase the cooling effect, ice boxes can be placed into the top and lower tank.
- **Deliver cool air at a wide angle:** The blades oscillate automatically emitting cold air at a wide horizontal range. The blades can be manually swung transversely.
- **Far-range remote control:** The range of the remote control is 6 metres at a 60 degree wide angle.
- **Buzzer:** Audible alert when operating the keypad.

ASSEMBLING AND FILLING WITH WATER

1. **Assembling castors:** Put the appliance on a flat surface. Using the wrench (supplied) assemble the castors.
2. **Filling with water:** Pull out water tank by 1/3 and add clean water (Fig 1)

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

*Calls cost 7 pence per minute plus your telephone company's network access charge

Attention:

- Check the level of water in the water tank before adding water.(Fig 2)
- The level of water should not exceed the "MAX" mark on the scale at any time. When humidifying, the total level of water should not be below the "MIN" scale.
- Put ice cubes or frozen ice box into the water tank if you want to lower the temperature further. The total level of the water should never exceed "MAX" mark on the scale.
- IMPORTANT:** Adding water to the top tank (Fig 3): Please add water slowly. Do not fill water above the top plane when adding water. Ensure the level of water does not exceed the "MAX" scale of the bottom water tank.

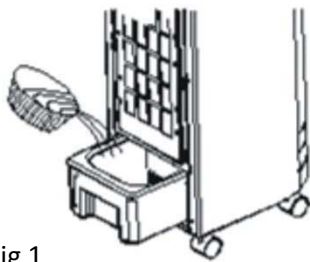 


Fig 1

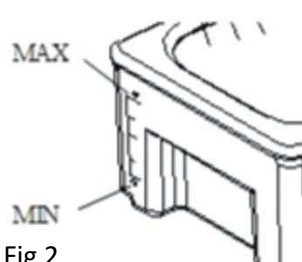 


Fig 2

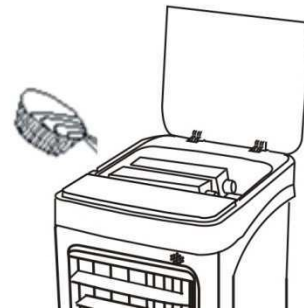 



Fig 3

OPERATION

- ON/OFF** on the back of the unit: Locate this key. Press ON to set cooler to stand-by mode.
- POWER on control panel** : Press this key to turn on the appliance, press again to shut it down .
- SPEED**: Press this key after starting the appliance. Settings are LOW-MEDIUM-HIGH-LOW in sequence.
- COOL**: Press this key to start the cooling system. To cancel the function press key again.
IMPORTANT: Please be sure there is enough water in the water tank before pressing this key.
- TIME**: Press this key to set timer from 0.5 to 7.5 hours options in 0.5 hours steps. The cooler will switch off when the timer is finished.
- SWING** : Press this key to change the direction of the air flow. The swing icon will show on the screen when the function is activated. Press the button again to stop the oscillation. The vertical direction of air flow can be adjusted manually by directing the outlet louvres up and down.
- WIND TYPE(strength of air flow)**: Press this key to choose normal wind, natural wind and sleeping wind in sequence. Normal wind does not have an indicator light, natural wind and sleeping wind have.

REMOTE CONTROL

 Fit CR2025 3V batteries. The 6 function keys on the remote control are the same as on the control panel. Point the remote control at the receiver/sensor.

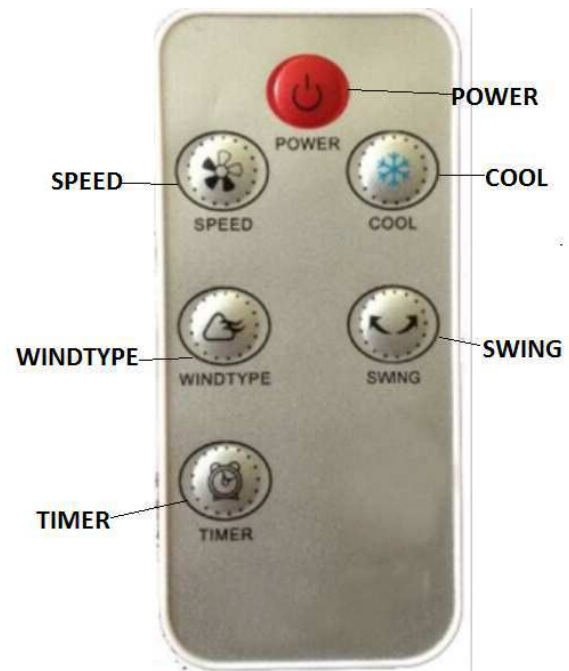

USING THE ICE BOX

The ice box is designed to keep the air cool. It can absorb heat and cool the ambient temperature.

Put the ice box into the freezer to make sure that the contents are frozen.

Open the water tank door and put the frozen ice box into the water tank.

There are two ice boxes for using in turn. The ice boxes can be used in the bottom or top water tank.

Do not add water to the ice box. Do not open it and keep away from children.

CAUTION

- Do not operate the appliance with wet hands, in order to avoid damage.
- The level of water tank should not exceed "MAX" scale at any time, when humidifying, the total level of water tank should not be under "MIN" scale.
- After adding water to the water tank, do not tilt or knock over the air cooler when moving it. If you want to move it, please push slowly from the side, in order to avoid spilling.
- Do not turn over the appliance. If it is toppled over and there is water in the body, you should unplug the power supply first. Then have it checked by a qualified technician.
- Do not cover the air vent.
- Do not knock or shake the body when using, otherwise it may cause it to stop automatically.
- Do not let the water in the water tank go stale. Renew the water in the water tank frequently.
- The fan is suitable for temperate climates only.
- Should it become necessary to move the unit after the water has been added, roll it gently to the required position and apply the castor brackets.

- The power cord is with “Y” type connection and it must be changed by professional technicians if necessary.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- DO NOT PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALL PAPER, ETC.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMEDIATELY POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

CARE AND CLEANING INSTRUCTIONS

WARNING: Ensure that the fan is switched off from the mains supply before removing the air filter screen. The air filter screen and wetted pad are located at the rear grille of the unit. Undo the screws at the rear and push down the 2 clips to release the screen.

1. Clean the air filter screen (Fig 4)
2. Unplug from supply, pull the handle of the air filter screen and remove it from the appliance. Clean the air filter screen with a neutral detergent and banister brush, then clean it with clear water. Finally, reinstall filter in the appliance.
3. Clean the wetted pad (Fig 5)
4. Unplug from power supply, take down the air filter screen, then draw the wetted pad from the support. Clean the wetted pad with neutral detergent and banister brush, then clean it with clear water. Finally, reinstall in the appliance.
5. Attention: the wetted pad must be installed horizontally, in order to avoid leaking.
6. Clean the water tank (Fig 6)
7. Unplug from power supply, open the door, take out the water tanks, clean it with neutral detergent, and wash it with clear water, then reinstall in the appliance.
8. Clean the shell
9. Clean with neutral detergent and soft cloth.
10. Attention: cut off the power supply when cleaning the appliance. Ensure the control panel is dry.



Fig 4



Fig 5



Fig 6

Water should be drained from the water tanks and fresh water refilled at least once a week. The air filter and pad should be cleaned at least every two months.

The power cord should be coiled and stored away from the floor for protection.

Troubleshooting


Malfunction	Causes	Solution
No function	<ol style="list-style-type: none"> 1. Power off or poor connection. 2. "ON" key on the control panel not pressed. 	<ol style="list-style-type: none"> 1. Plug in the power cord and make sure it connects well. 2. Press the "ON" key on the control panel.
Poor performance	<ol style="list-style-type: none"> 1. Air filter screen blocked with dust. 2. Air inlet blocked with foreign objects. 	<ol style="list-style-type: none"> 1. Clean the air filter screen. 2. Remove blockages from air inlet.

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 **13-amp** plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of **13-amps** should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

 A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the plug are colour coded in the following way:

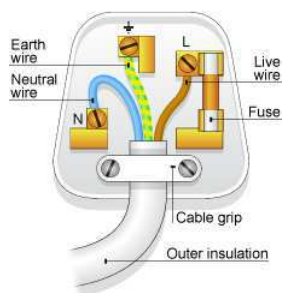

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram shows the key features of a correctly wired three-pin mains plug.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

