




Specification

Unit weight: 0.65kg
Water tank capacity: 100ml
Steam output time: 90 seconds
Steam duration: 5 minutes
Voltage: 220-240V~ 50/60Hz
Wattage: 600W

Description of parts

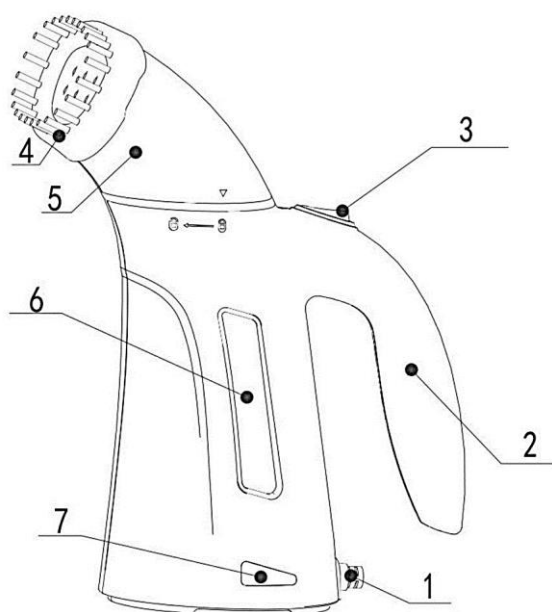

1. Power Cord
2. Handle
3. On/off switch
4. Steam brush
5. Water tank cap
6. Water tank
7. Light

Appliance assembly

- This appliance is supplied with a fabric brush – to smooth wrinkles and creases from fabrics. Follow the steps below to attach the fabric brush to the steam nozzle:
- Ensure the unit is turned off and no steam emits from the nozzle.
- Slide the attachment fabric brush onto the steam nozzle.
- Ensure the holes on the steam nozzle are aligned with the open slots on the fabric brush so that steam does not get blocked.
- CAUTION: to avoid burns do not attach fabric brush to the nozzle whilst steam is emitting.

Instructions for use

WARNING! Ensure the garment steamer is unplugged and cooled before re-filling the tank.

- Ensure you place the garment steamer on a flat stable surface, holding the handle, twist the nozzle section of the steamer clockwise to release.
- Fill the garment steamer using distilled or de-mineralised water.
- Fill the water tank up to the MAX mark. Do not over fill the tank.
- Replace the nozzle and twist to secure into place.



CAUTION:

- After each use, always allow the unit to cool for 8 minutes before adding cold water; cold water added to a hot boiler may cause hot water and steam to shoot from the fill hole.
- Extreme caution is required when pouring water into the water tank.
- Never fill past the MAX fill line.

NOTE:

- Use of distilled or demineralised water is recommended to prolong the life of the steamer.
- Use water only; do not use detergents or other chemical substances.
- Misuse will lead to an invalid guarantee.

Steaming Linens and Fabrics

- Ensure the water tank has been filled and that the fabric brush is connected and then follow the steps below:
- Plug the unit into the mains power supply and switch on.
- Switch the unit on and the button will illuminate to indicate the appliance is on.
- Steam will emit from the nozzle after approximately 2 minutes.
- Direct the steam nozzle with the fabric brush towards the materials you wish to steam.
- Keep the flow of steam focussed on the material being steamed.
- Using a slight back and forth motion over the area you are steaming will further enhance the process.
- **CAUTION:** Always be sure that the steam nozzle and any other attachments are pointed in a safe direction away from the user, other people and animals when steam is being emitted.

Steaming Garments

- Place the garment on a clean rust-free hanger.
- Direct the steam nozzle towards the bottom of the garment.
- Steam will rise on both the inside and outside of the fabric removing wrinkles and creases. Slowly slide the steam nozzle upwards from the bottom to the top of the garment.
- Direct the steam nozzle away from the garment and smooth the fabric with your free hand.



Storage

- Unplug the power cord from the mains power supply.
- Allow the unit to cool thoroughly (at least 60 minutes).
- Remove the attachment from the unit.
- Drain the remaining water from the tank to minimise potential mineral build-up. Loosely replace the water tank cap but do not tighten as it may be difficult to unscrew for future use.
- Store fabric brush with the unit in a dry, cool location.

Descaling

- Different water sources contain minerals and the sediment may cause lime scale build-up in the steamer and affect the free flow of steam.
- NOTE: The best way to avoid lime scale build-up is to use distilled or de-mineralised water. If you are unable to do this it is recommended to use the descaling procedure.
- Unplug the unit and allow to cool completely (at least 60 minutes).
- Remove fabric brush from the unit.
- Remove the water tank cap and drain any remaining water from the water tank.
- Please use a toxic free descaler or detergent such as citric acid, to add citric acid into water at 1:100 proportions.
- Allow the unit to stand for 1-2 hours.
- Drain the solution from the water tank.
- If the mineral build-up still remains in the unit, repeat the above steps until all build-up is removed.
- Rinse the water tank with fresh water, drain and repeat until the vinegar odour is eradicated.
- Replace the water tank cap.

Troubleshooting

Problem	Possible Reason	Solution
Unit fails to heat.	Unit is not plugged in.	Plug into the mains power supply.
	Switch is not activated.	Press the On/off switch. The switch will illuminate.
Unit heats up but fails to steam.	Water tank is empty.	Refill the water tank accordingly.
	Mineral build-up in unit.	Follow the removing mineral build-up guide.
	Thermo-fuse breakdown.	Have unit repaired by a qualified electrician.
Steam output is intermittent.	Mineral build-up in unit.	It is normal for the unit to stop steaming periodically for a few seconds. If the steam remains off for longer periods, follow the removing mineral build-up guide.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595

www.coopersofstortford.co.uk

Coopers
OF STORTFORD

*Calls cost 7 pence per minute plus your
telephone company's network access charge


- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 3-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 3-amps should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the plug are colour coded in the following way:

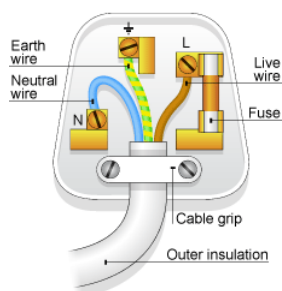

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram shows the key features of a correctly wired three-pin mains plug.


CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	
Type of Plastic	Low Density Polyethylene
Commonly used for	Shopping bags, bread bags, squeeze bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders
Notes	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

