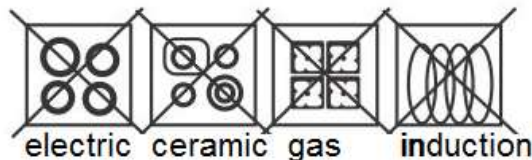
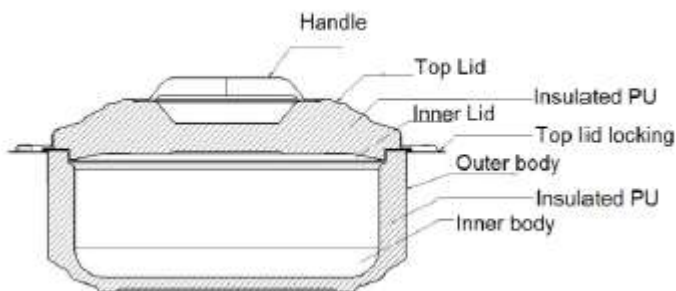


**Capacity:**

1x 500ml, 1x 1000ml, 1x 1500ml

NOT FOR USE IN MICROWAVE OR DISHWASHER.

The insulated food servers keep hot food hot and cold food cold whilst retaining moisture and valuable nutrients.

**Before first use**

- Carefully rinse the insulated container with warm water before first use or after a long period of non-usage. The best results are obtained using a mixture of water and bicarbonate of soda or washing up liquid. Rinse and dry thoroughly afterwards.

INSTRUCTIONS FOR USE:

- Pre-heat or pre-cool the container with water to ensure efficient use. Never use microwave or conventional ovens for this purpose. Use hot water if you want to keep hot food hot. Use cold water to keep cold food cold.
- Place food into container and twist and lock lid to seal.

Cleaning & Maintenance

- Never use scouring agent or bleach to clean the insulated container.
- Never immerse the insulated container in water nor place it in a dishwasher. **Hand wash only.**

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.