

**Technical details:**

Power input: 240Va.c; 50Hz, 13A

Wattage: 3120W.

USB Power output: DC 5V – 3.4A

Dimensions:

Height: 8cm Width: 5.2cm Depth: 6.8cm

- Overvoltage protection
- Overload protection
- Overheating protection
- Short-circuit protection

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new USB Plug Adaptor.

User instruction

1. Use as a mains plug adapter.
2. The USB connectors can be used to charge devices such as phones, tablets, ipads, etc.
 - a) Connect adapter to the device using a suitable USB cable.
 - b) Plug the adapter into the mains.
 - c) The device will begin charging.

NOTE!

THE CHARGER WILL BECOME SLIGHTLY WARM WHILE CHARGING. THIS IS NORMAL.

WARNINGS AND SAFETY INSTRUCTIONS:

- WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:
- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- PROTECT THE ITEM FROM MOISTURE, WATER, RAIN, SNOW OR DRIZZLE AND USE THE PRODUCT ONLY IN A DRY ENVIRONMENT.
- NEVER EXPOSE THE PRODUCT TO HIGH TEMPERATURES OR EXTREME COLD.
- KEEP THE PRODUCT IN A DRY PLACE AT A TEMPERATURE OF BETWEEN 0°C AND 40°C.
- DO NOT DROP THE PRODUCT OR EXPOSE TO STRONG VIBRATIONS.
- THE PRODUCT MUST ALWAYS BE WITHIN REACH AND BE EASILY ACCESSIBLE IN ORDER TO DISCONNECT THE DEVICE FROM THE MAINS IN AN EMERGENCY.
- DO NOT LEAVE MOBILE DEVICES UNATTENDED WHILE CHARGING THEM.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.

- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND.
- TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store in a cool, dry place.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an unauthorised household WEEE waste recycling centre.

