



**MUSIC TOWER WITH CD/MP3  
DAB/PLL FM RADIO & BLUETOOTH.**

**SPECIFICATION**

<b>AC POWER</b>	230V AC; 50Hz
<b>RADIO FREQUENCY</b>	FM 87.5 – 108 MHz DAB: 174.928-239.2 MHz
<b>OUTPUT POWER</b>	2 X 10W + 15W RMS SUBWOOFER (BUILT IN SPEAKERS)

**STANDBY POWER CONSUMPTION:** 0.78 watt.

**Dimensions**

98.5cm x22cm x20.9cm

**Remote requires:** 1 x CR2032 battery (not included)

**NOTE: DUE TO EUROPEAN ERP STAGE TWO REQUIREMENTS AND TO PROTECT THE ENVIRONMENT, THE UNIT WILL SWITCH TO STANDBY MODE AUTOMATICALLY IF NO MUSIC IS PLAYING AFTER 15 MINUTES.**

**PLL  
TUNING**

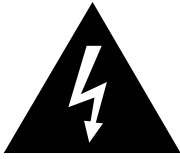 

**MP3  
PLAYBACK**

**COMPACT  
disc  
DIGITAL AUDIO**

**Bluetooth**

## Contents

<b>SPECIFICATION</b> .....	<b>1</b>
<b>IMPORTANT SAFETY INSTRUCTIONS:</b> .....	<b>3</b>
<b>Location of control</b> .....	<b>4</b>
<b>Precautions for use</b> .....	<b>4</b>
<b>Connection</b> .....	<b>4</b>
<b>Setting the clock</b> .....	<b>5</b>
<b>Listening to the radio</b> .....	<b>5</b>
<b>Playing CD/MP3 disc</b> .....	<b>7</b>
<b>Bluetooth connecting and playback</b> .....	<b>9</b>
<b>More features</b> .....	<b>9</b>
<b>Remote Control</b> .....	<b>12</b>
<b>WARNINGS AND SAFETY INSTRUCTIONS:</b> .....	<b>13</b>
<b>PLUG WIRING (UK &amp; IRELAND)</b> .....	<b>13</b>
<b>CARE AND CLEANING INSTRUCTIONS</b> .....	<b>14</b>
<b>BATTERIES</b> .....	<b>14</b>
<b>DISPOSAL</b> .....	<b>14</b>

 <p>The lightning flash and arrow head within the triangle is warning sign alerting you of dangerous voltage inside the product</p>	<p style="text-align: center;"><b>CAUTION</b></p> <p style="text-align: center;"><b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b></p> <p><b>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICIABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b></p>	 <p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product</p>
--	--	--

**IMPORTANT SAFETY INSTRUCTIONS:**

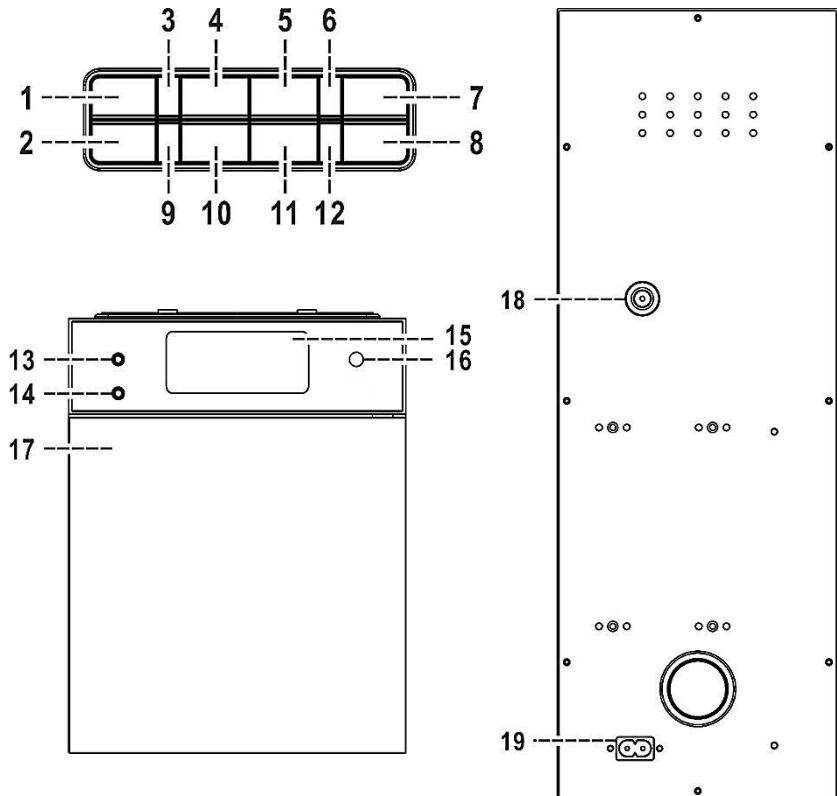 
1. Please read the instructions. All guidelines must be read before starting the device.
2. Keep the instructions for future use.
3. The device must not be used near water and avoid contact with moisture.
4. Make sure no liquid is spilled on the device and device openings.
5. Move the device carefully to avoid knocks.
6. Do not block the device outputs.
7. Do not place the device near heat sources (e.g. radiator). Do not expose it to the Sun.
8. Plug the device as indicated in this manual.
9. Unplug the mains plug if not in use for a long period.
10. The device should be repaired by a qualified person when:
  - a. the power cord is damaged,
  - b. objects have fallen into the apparatus or a liquid has been spilled into the device,
  - c. the device does not work.
11. Do not try to service the device yourself beyond that which is described in this manual as this could invalidate your warranty.
12. To switch off completely please remove the plug of the power cord from the mains socket.
13. Batteries should not be exposed to excessive heat such as sunshine, fire.
14. Excessive volume when using earphones and headphones can cause hearing loss.
15. Please allow a minimum distance (150-180mm) around the apparatus for sufficient ventilations.
16. No naked flames such as lighted candles should be placed on the apparatus.
17. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
18. Use the apparatus only in moderate climates (not in tropical climates).
19. The mains plug is used as disconnect device. The mains plug of apparatus should not be obstructed and should be easily accessed during intended use. To completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains.
20. The mains plug shall remain readily operable.



**CLASS 1 LASER  
PRODUCT**

**Location of control**

1. On/Off button
2. Function button
3. Timer button
4. Stop ■ /Enter button
5. Scan / Play/pause ►|| button
6. Info / Play mode button
7. Volume up button
8. Volume down button
9. Mem/clock-adjust button
10. Skip/Tuning down ◀◀ button
11. Skip/tuning up ▶▶ button
12. Folder/ Pre up button
13. 3.5mm Aux in jack
14. 3.5mm headphone jack
15. LCD display
16. Remote control sensor
17. CD door open/close
18. FM antenna
19. AC socket

**Caution:**

Use of controls or procedures other than those specified herein may result in hazardous radiation exposure.

This unit should not be adjusted or repaired by anyone except qualified service personnel.

**Important:**

Since the sensitive circuitry may cause interference to a radio tuner nearby, switch this unit off while operating other radio devices.

**Due to the complexity of the MCU control (microcontroller), please unplug the main power supply of the unit if the unit stops during operation! This is not a malfunction of the system!**

**Precautions for use****Installation**

- Unpack all parts and remove protective material.
- **Do not connect the unit to the mains before checking the main voltage and before all other connections have been made.**
- Do not cover any vents and make sure that there is a space of several centimetres around the unit for ventilation.

**Connection**

1. Connect the one end of the detachable power cord to the AC socket (11) and the other end to the AC

outlet.

2. When you first plug the unit into the mains, the unit will go into standby mode. The time will be displayed on the LCD display
3. Turn on the unit by pressing "On/Off" button (1). If the LCD display (15) shows the time digits, it means the power supply is normal. Now the system is ready to play music.

### Setting the clock

---

1. Set the unit to standby mode.
  2. Press and hold the "Mem/clock-adjust" button (9), the LCD display (15) will show 12Hours or 24 Hours and flash. Press the Skip down **⏪** (10) or Skip up **⏩** (11) button to set 12 or 24 Hours. Press the "Mem/clock-adjust" button (9) to confirm.
  3. The hour digit will flash on LCD display (15) Press the Skip down **⏪** (10) or Skip up **⏩** (11) button to set the correct hour. Press the "Mem/clock-adjust" button (9) to store the hour then the minute digit will flash.
  4. Press the Skip down **⏪**(10) or Skip up **⏩**(11) button to set the correct minutes.
  5. Press "Mem/clock-adjust" button (9) to store the correct hour.
- **The pre-set time will be reset completely if disconnecting the mains power supply. It is recommended to switch the system into standby mode for convenient use.**
  - The clock will synchronize to RDS/DAB clock once receiving the RDS/DAB signal if the clock was not set in advance.

### Listening to the radio

---

#### Operation

##### Manual tuning

1. Turn on the unit by the On/Off button (1) and then press the Function button (2) until it reaches "FM" mode.
2. Press the Skip down **⏪** (10) or Skip up **⏩** (11) button to tune your desired station.
3. Adjust volume up/down button (7, 8) for the desired volume level.

##### Auto tuning

1. Set the unit to FM mode.
2. Press the auto scan button (5) once; the unit will start to scan upwards until a radio station is received. Press tuning down button (10) once and then press the auto scan button (5), the unit will scan downwards. If the radio data system (RDS) broadcasting signal is received, the unit will set the actual time automatically.
3. Adjust volume knob (7, 8) for the desired volume level

##### FM & FM-stereo reception

- The unit will default to the FM mode in Mono. Thus, if FM stereo signal received, set the FM mode to Stereo by pressing the "Info/Play mode" button (6), then press Skip down **⏪** (10) or Skip up **⏩** (11) button to select "Auto (Stereo)". Press Enter button (4) to confirm.

- When stereo signals are weak and noisy, it is preferable to change the FM mode to Mono in the same manner.

**Hints for best reception: -**

FM: the receiver has a FM wire antenna (18) at the rear cabinet. It should be completely extended for best reception.

**Radio data system (RDS)**

This is the feature which displays information released from the radio broadcast and will show on the LCD display step by step as below by pressing the Info/ Play mode button (6) continuously.

Radio text → program type → signal strength → time & date → frequency → mono/stereo →

**Digital audio broadcasting (DAB) radio**

1. Set the unit to DAB mode by press Function button (2).
2. Press the Play/pause ►||/Scan button (5) once; the unit will start a full scan on the DAB range. Press Skip down ◀◀ (10) or Skip up ▶▶ (11) button to select your desired DAB channel then press "Stop/Enter" button (4) to confirm the selected channel.
3. Press the Play mode/info button (21) continuously to check the below info released by DAB.  
Group name → frequency → transfer rate → signal strength → date/time → program type → scrolling text
4. Adjust volume knob (7, 8) for the desired volume level.

**Preset stations**

You can store up to 40 radio stations in the memory (20-FM/20-DAB).

1. Set to FM/DAB mode
2. Turn to the desired radio station by "manual" or "auto" tuning method.
3. Press and hold the "Mem/clock-adjust" button (9) to enable memory state.
4. Press Skip down ◀◀ (10) or Skip up ▶▶ (11) button to select the desired station memory for storage.
5. Press "Mem/clock-adjust" button (9) to confirm the setting.
6. Repeat step 2 to 5 to store other stations.

**Recall preset stations**

1. Set to FM/DAB mode
2. Press "Mem/clock-adjust" button (9) once to recall the stored station.
3. Press Skip down ◀◀ (10) or Skip up ▶▶ (11) button to select the desired preset station.
4. Press "Mem/clock-adjust" button (9) again to confirm the recalled station.

**DAB/FM reset:**

If you would like to erase all the FM/DAB stations stored.

1. Set in DAB mode, press and hold "Info/Play mode" button (6) and the LCD display will show "System

Reset OK”

2. Press “Stop/Enter” button (4) to confirm the factory reset.
3. Apparatus will then erase all the stored stations.

### Playing CD/MP3 disc

---

#### ● Getting started

1. Press the Function button (2) to select CD mode.
2. Open the CD door by pressing the CD door open/close (17). Put a CD disc into the compartment and close the CD door.
3. A search is performed if a disc is inside. Total number of tracks is read.

#### ● Play/pause mode▶||

1. If Play/Pause ▶|| button (5) is pressed during stop mode, the first track will be played.
2. If Play/Pause ▶|| button (5) is pressed during playback, the system will go into pause mode and the pause indicator will light up in the LCD display (15). Press again to resume normal playback.

#### ● Stop mode■

1. If Stop■ button (4) is pressed during play or pause mode. The unit will go into stop mode and display the total number of track in the LCD display (15).

#### ● Skip mode (skip up▶▶|/skip down|◀◀)

1. During play mode, if skip up▶▶| button (11) is pressed it will go to next track and display the track number.
2. During play mode, if Skip down |◀◀ button (10) is pressed, it will go back to the previous track.

#### ● For MP3 disc/file

 
1. Place the MP3-CD in the CD compartment. After a search is performed the total number of tracks will be shown on the LCD display (15).
2. Press Skip up ▶▶| or Skip down |◀◀ (10, 11) button to select the track number.
3. When the desired track and album is being selected, press the “Play/Pause ▶||” button (5) to start playback.

#### Remark

- Press “Folder up ▲” button (20) on the main unit to select the MP3 folder upwardly.
- The track number will display on the LCD (15) and then it will play that track when you press Play/Pause ▶|| button (5).

 
#### ● Repeat/Random mode

Press the “Play mode” button (6) during playback to select repeat and random functions, a single track, single folder (MP3 only) or all the tracks can be played in different modes as follows: -

**For CD**

## Indicator

Play mode	on LCD display
Repeat track	
Repeat all	
Random	
Off mode	-----

**For MP3 disc/file**

## Indicator

Play mode	on LCD display
Repeat single track	
Repeat single folder	
Repeat all tracks	
Random	
Off mode	-----

- **Repeat play**

You can listen to the desired tracks or folder repeatedly by using this function.

- **Random play**

You can listen to all the tracks in a random order by using this function

**CD/MP3 disc programming**

Up to 20 tracks can be programmed for disc play in any order. Before use, be sure to press the stop button.

1. Set in CD mode.
2. Press the Memory button (9), "P01 T000" will appear on LCD display (15).
3. Select a desired track by using the Skip up /Skip down buttons (10, 11).
4. Press the Memory button (9) to enter the track into the memory.
5. Repeat steps 3 and 4 to enter additional tracks into the memory if necessary.
6. When all the desired tracks have been programmed, press "Play/Pause " button (5) to play the disc in the order you have programmed.
7. Press "Stop " button (4) to terminate program play.



- Press "Stop ■" button twice (4) at CD stop mode to cancel all programmed memory until the "MEM" indicator disappear on LCD display (15).
- For MP3 disc/file, press the "Folder up" button (20) to select the 1<sup>st</sup> track of next folder directly and hence to speed up the song selection.
- The programming mode will automatically stop if no button is being pressed in a period of about 30seconds after pressing the Memory button (9).

**Remark: -**

MP3 track format requirement: -

- Bit rate: 32 kbps-320kbps, sampling rate: 32kHz, 44.1kHz and 48 kHz decodable
- The performance of playing MP3 disc is dependent on the quality of the recording disc and the method of recording. Furthermore, the searching lead-time for MP3-CD is longer than normal CD due to the different format.

**Bluetooth connecting and playback**

---

1. Press the Function button (2) to select "BT" mode.
2. The system will switch to BT mode automatically and "BT "with the flashing of "Pairing" will be shown on the LCD display (15). It means the Bluetooth is in searching mode.
3. Switch on the Bluetooth feature of your Bluetooth device (such as mobile phone) and select "F877" Bluetooth equipment to connect.
4. Once connected successfully, the LCD display (15) will show "BT Connected ".
5. Start playback from your Bluetooth device and enjoy the music.
6. Adjust the Volume Up/Down button (7, 8) to desired volume level.
7. To disconnect the Bluetooth connection, turn off the Bluetooth feature of your Bluetooth device. The LCD display will show "BT "with the flashing of "Pairing" for pairing of a new device or switch off the unit.
8. You can press the Play/pause ►|| button (5), Skip up ►► (11) or Skip down ◀◀ (10) button to control the music playback.
9. If you want to connect to another Bluetooth enabled device after you've already successfully paired, press and hold the Play/pause ►|| button (5) for few second until the BT " Pairing" starts flashing again, OR turn off the Bluetooth on the device that was previously paired. Repeat step 3-5 above to connect for another Bluetooth device.

**More features**

---

**A. Alarm clock setting**

This function allows the system to turn on automatically and wake you up to CD, DAB or FM mode. Set the system to standby mode, press and hold the "Timer" key to enter the Timer setting mode, LCD will show Timer On time. Moreover, the timer clock will flash the hour digit, this means the unit is all ready to enter timer setting mode.

- 1) On time setting: Press the skip up **▶▶▶** or down **◀◀◀** (10, 11) to set the hour. Then press Timer button (3) to store the timer starting hour, minute digit will flash, press skip up **▶▶▶** or down **◀◀◀** (10, 11) to set the minute. Then press Timer button (3) to store the timer on time
- 2) Off time setting: After above step, the LCD will show "Timer Off" and hour digit is flashing. Press skip up **▶▶▶** or down **◀◀◀** (10, 11) to set the hour. Then press Timer button (3) to store the timer off hour, minute digit will flash, press skip up **▶▶▶** or down **◀◀◀** (10, 11) to set the minute. Then press Timer button (3) to store the timer off time
- 3) Wake up Mode and Vol Then press skip up **▶▶▶** or down **◀◀◀** (10, 11) to select timer on mode (CD / DAB / FM). Then press Timer button (3) to store the timer on mode. Press skip up **▶▶▶** or down **◀◀◀** (10, 11) to select timer on volume level and press Timer button (3) to complete the timer setting.  
The display will show all the timer setting once again and then return to standby mode with the timer icon "⌚".

#### Activate/de-activate timer function (In standby mode only)

1. To activate timer function, press the "Timer" button once the timer indicator "⌚" will appear in the LCD display.
2. To cancel timer function, press "Timer" button again the timer indicator "⌚" will disappear.

#### Remark: -

1. If there is no music source being detected (CD) when the preset time is reached, system will default to "FM" function for wake-up mode automatically. The system will preset to the last radio frequency being listened to before switching off.
2. For FM/DAB wake up, the system will preset to the last radio frequency being listened too before switching off.
3. If wake up to buzzer is selected, the unit will emit a "beep beep" sound at the selected time.
4. There are about 4 seconds for the alarm setting mode, this system will return to normal mode automatically if no keys are being pressed in this time frame.
5. During the alarm on mode, pressing the "On/off" button (1) will switch off the system.

#### B. Aux-in connection

Connect the unit to other devices by connecting the Aux in jack (13) with a 3.5mm cable (not provided) and the other end connect to the external device such as Discman/MP3 player to perform the music playback or encoding function etc.

- 1) Select the "AUX" mode by pressing the function button (2)
- 2) Adjust the Volume Up/Down button (7, 8) to desired volume level.
- 3) Start to play your external device.

**C Using Headphones**

Inserting the plug of your headphones into the Headphone jack will enable you to listen in private.

**READ THIS IMPORTANT INFORMATION BEFORE USING YOUR HEADPHONES**

- 1) Avoid extended play at very high volume as it may impair your hearing.
- 2) If you experience ringing in your ears, reduce the volume or shut off your unit.
- 3) Keep the volume at a reasonable level to allow you to hear outside sounds.

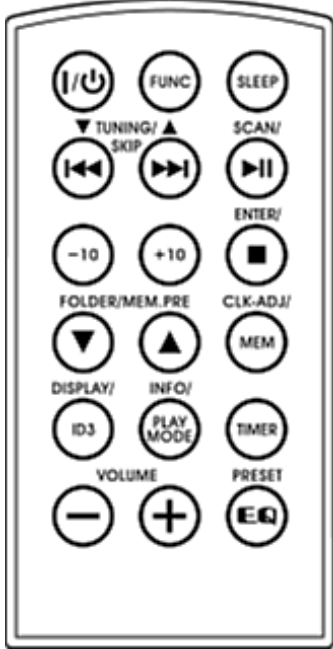 
**A. Sleep setting (by remote control)**

1. Press "Sleep" button and sleep indicator "ZZZ" will shown on the LCD display.
2. Keep pressing the button to adjust the sleep timer in the order of 90 > 80 > 70....10 minutes.
3. System will stop and go to standby mode automatically after the selected timing.
4. To cancel the sleep mode, press "Sleep" button until it reaches "off" mode.

## Remote Control

### Battery installation (battery provided)

The infra-red transmitter requires 1 pc lithium battery type "CR2032" for operation

On/Standby Function	Press to switch On/Standby the system	
Sleep	In power on mode : press to activate sleep function	
Tuning skip up/previous/down/next	In CD/MP3 mode : to select previous / next track In tuner mode : press to step up/down of frequency/channel	
Scan	In tuner mode : Press for scan the DAB/FM channel	
Play/Pause	In CD mode : press once to start playback. Press once again to stop playback	
-10 / +10	In CD mode : press to skip down/up for 10 tracks	
Stop/Enter	In CD/MP3 mode : press to stop CD/MP3 playback or cancel programmed memory In tuner mode : press to enter the selection In MP3 mode: press to skip down the album In tuner mode : press to call down the preset memory in order	
Folder / Pre-dn	In MP3 mode : press to skip up the album In tuner mode : press to call up the preset memory in order	
Folder / Pre-up	In CD mode : press to active CD program function In tuner mode : press to active preset station mode In standby mode : press to adjust clock	
Memory / Clock-adjust	In MP3 mode : press and display the song title/artist/Album during the playback of MP3 discs.	
ID3/Display	In FM/DAB mode : press to select Mono or Auto (Stereo) tune mode In CD/MP3 mode : press to active repeat/random function	
Info / Play mode	In standby mode : press and hold to enter timer set up mode and press once to active/de-active timer function	
Timer	Press to adjust volume level up/ down	
Volume +/-	Press to select different EQ (equalizer) mode for different sound.	
Preset EQ		

**WARNINGS AND SAFETY INSTRUCTIONS:**

---

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- KEEP AWAY FROM CURTAINS, DRAPES, ETC.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMEDIATELY POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

**PLUG WIRING (UK & IRELAND)**

---

This appliance is fitted with a moulded BS 1363 **13-amp** plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of **13-amps** should be used.

If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely.

Attempts to insert the plug into the wrong socket is likely to cause electric hazard.

**CARE AND CLEANING INSTRUCTIONS**

---

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

**BATTERIES**

---

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Keep batteries away from children and pets.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

**DISPOSAL**

---

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

