F880

# Instructions for Use

Please read and retain these instructions for future reference

v006: 11/01/23



Note:

In the event of the default setting showing Japanese text, please press CANCEL to remove this Japanese text. Please select English Language in settings.

Super8 film speeds may vary. Where original format speeds are greater or less than 30FPS (frames per second), you may wish to adjust the film speed after conversion using your own preferred software to ensure that your converted film runs at a normal speed.

l'echnical Detail	
Function	Film to Digital Converter
Interface	USB2.0
Image Sensor:	3.53Mega pixels(2304(H)x1536(V)1/3"
	CMOS sensor
Display	Colour 2.4" TFT LCD
Exposure control	Automatic/Manual (-2.0 EV - +2.0EV)
White Balance	Automatic
Resolution	1080P(1440'1080 30fps)
Frame Rate	30 Frames(2 frame speed recording, 30 frames
	replay)
Scan method	Video
Film type	5"&3" Reel 8mm roll film & Super8 roll film
Picture effects	Positive
File format	MPEG-4(MP4)
TV-out type	NTSC/PAL
Built-in memory	None
External memory card	SD card up to 32GB
Power supply	DC 12V Mains Adaptor
Language	English/French/German/Italian/Spanish/Japanese/S-
	Chinese/T-Chinese
Support system	Windows XP/Vista/Windows 7/8/10
	Mac 10.7.3
Product size	L269 xW114 xH166mm
Weight	1410g

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU Tel: 0844 4824400\*, Fax: 01279 756595 www.coopersofstortford.co.uk

Tel: (+44) 1279 701269

Please check with your telephone supplier.

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

\*UK Calls cost around 7 pence per minute plus your telephone company's network access.

### **Technical Detail**

COOPERS

**OF STORTFORD** 

F880

# Instructions for Use

Please read and retain these instructions for future reference

v006: 11/01/23

#### Contents

Technical Detail	1
Product Structure Diagram & Accessories	3
Keyboard	4
Reel Folding Methods	5
Film Install Methods	6
Power on/off	7
Function Setting Menu	8
Save the video to PC	9
Fast Forward	10
WARNINGS AND SAFETY INSTRUCTIONS:	10
CARE AND CLEANING INSTRUCTIONS	12
PLUG WIRING (UK & IRELAND)	12
DISPOSAL	12




F880

## Instructions for Use

Please read and retain these instructions for future reference

v006: 11/01/23

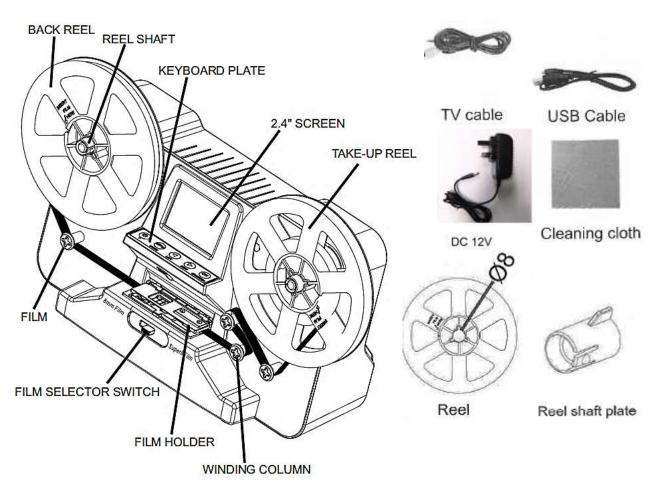

### **Product Structure Diagram & Accessories**

- Please do not attempt to disassemble or modify any part of the scanner.
- Please do not contact the inner part of the scanner after dropping the unit or if the unit suffers any damage.
- Please stop using the product if there is any problem with it, such as smoke or a smell while using.
- Please insert the SD card (Over Class6) before starting.
- Please do not use in a dusty or damp environment.
- Please do not overload the USB connections on your computer to avoid overworking the scanner.
- Please use films of the standard size.
- Cleaning: To produce a clean image, make sure the scanner is clean before using.
- Non use period: The USB cord or adapter should be unplugged from the computer or plug seat when the unit is left for a long period of time.
- This item is loud when working, please do not disturb others.




F880

 
# Instructions for Use

Please read and retain these instructions for future reference

v006: 11/01/23

#### Keyboard

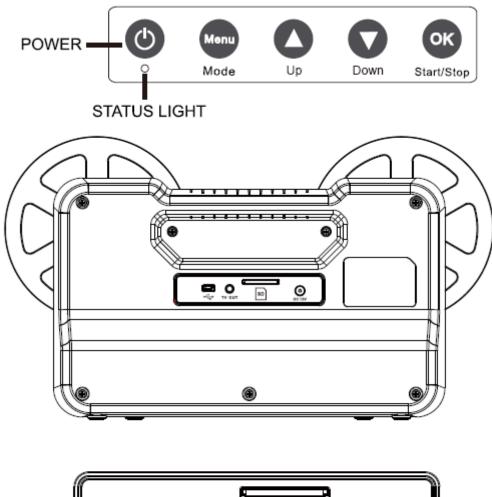



COOPERS OF STORTFORD UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU Tel: 0844 4824400\*, Fax: 01279 756595 <u>www.coopersofstortford.co.uk</u> EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France Tel: (+44) 1279 701269 \*UK Calls cost around 7 pence per minute plus your telephone company's network access. Please check with your telephone supplier.

F880

# Instructions for Use


**Reel Folding Methods** Reel hole diameter 8mm

Please read and retain these instructions for future reference

v006: 11/01/23

Kine there

Reel hole diameter 13mm

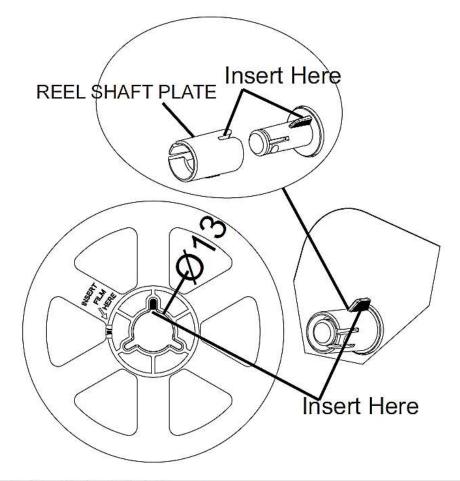




F880

# Instructions for Use

Please read and retain these instructions for future reference

v006: 11/01/23

### **Film Install Methods** The structural representation

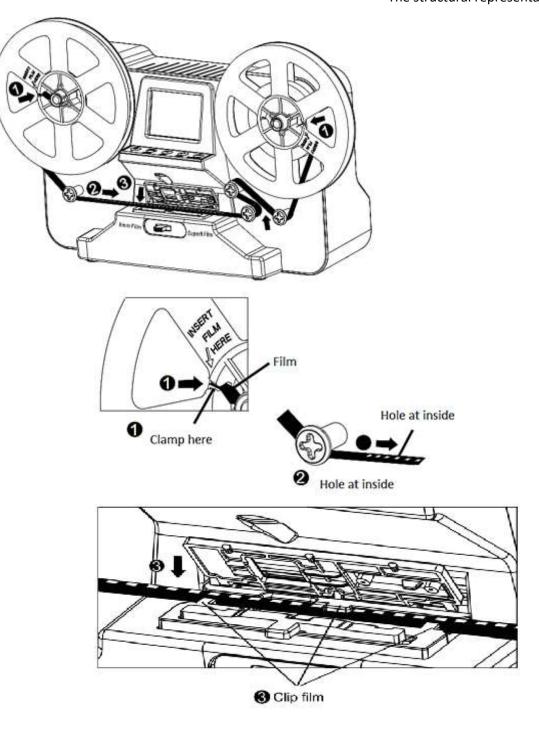

COOPERS OF STORTFORD UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU Tel: 0844 4824400\*, Fax: 01279 756595 www.coopersofstortford.co.uk EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France Tel: (+44) 1279 701269 \*UK Calls cost around 7 pence per minute plus your telephone company's network access. Please check with your telephone supplier.


F880

# Instructions for Use

Please read and retain these instructions for future reference

v006: 11/01/23

Please use available film

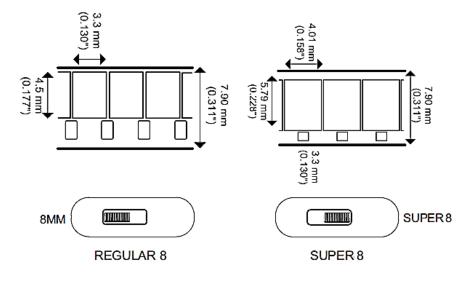

### Power on/off

Power on: Insert the SD card (over class 6), connect the power cable (DC12V) press POWER button into preview mode, the status light turns on and the motor revolves twice; Power off: short press POWER button and the status light will turn off.

Video recording: Press POWER button, into preview mode, press OK button to select the reset size after starting video, and then press OK button to stop the video.

The scanning speed is 2 frames/second. Please press OK button to stop scanning 15 seconds after it starts, if needed.

The red point light flashes once per second on the screen and the display time will countdown when working.

After the specific recording time is finished, the converter will stop automatically.




F880

# Instructions for Use

Please read and retain these instructions for future reference

v006: 11/01/23

Please ensure your film is well preserved. Film as shown below is unsuitable:

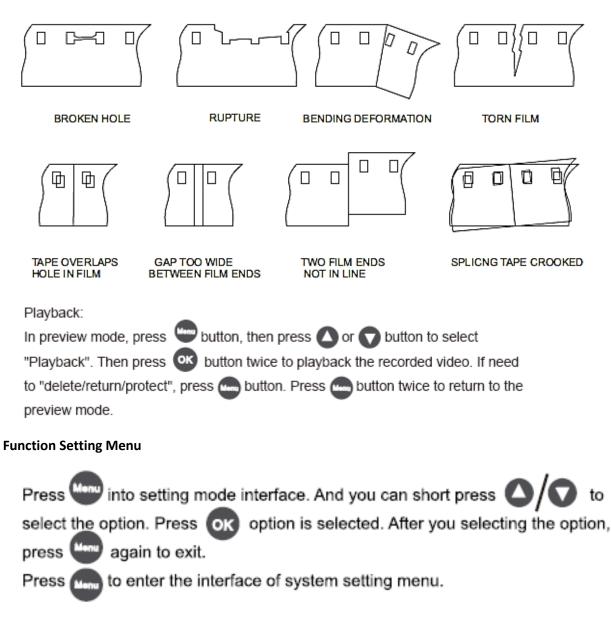

#### Sharpness

Sharpness ranges from Low to High. The default setting is Medium.





UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU Tel: 0844 4824400\*, Fax: 01279 756595 <u>www.coopersofstortford.co.uk</u> EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France Tel: (+44) 1279 701269 \*UK Calls cost around 7 pence per minute plus your telephone company's network access. Please check with your telephone supplier.


F880

Please read and retain these instructions for future reference

v006: 11/01/23

### Frame ADJ

You can make the adjustment of Movie Register (the film centre X and Y).

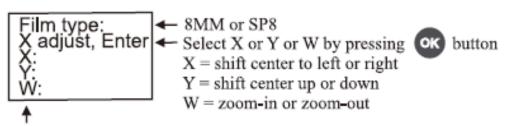

Adjust the values of X, Y, W by pressing Up or Down buttons

1	Menu	Option
2	Playback	Return/Delete/Protect
3	Fast Forward	Yes/No
4	Exposure	+2.02.0
5	Frame ADJ	
6	Sharpness	Low/Medium/High
7	Language	English/French/German/Italian/Spanish/Japanese/S-
		Chinese/t-Chinese
8	USB	USB Upload/Insert USB cable
9	Format	Cancel/OK
10	Default Version	Cancel/OK
11	Version	

#### Note: The scanner will save the last setting used when switched off.

#### Save the video to PC

Insert the USB cable, press MENU button into MENU mode, select USB button, press OK into upload mode. Press MENU button or unplug USB cable directly to stop upload mode and back to preview mode.

Uploading: into upload mode, under the U-disk mode, you can copy or cut the files to the computer to play. You can also remove the SD card, and use a card reader to read the data from the card.






F880

Please read and retain these instructions for future reference

v006: 11/01/23

#### **Fast Forward**

Film installed, the following for reference.

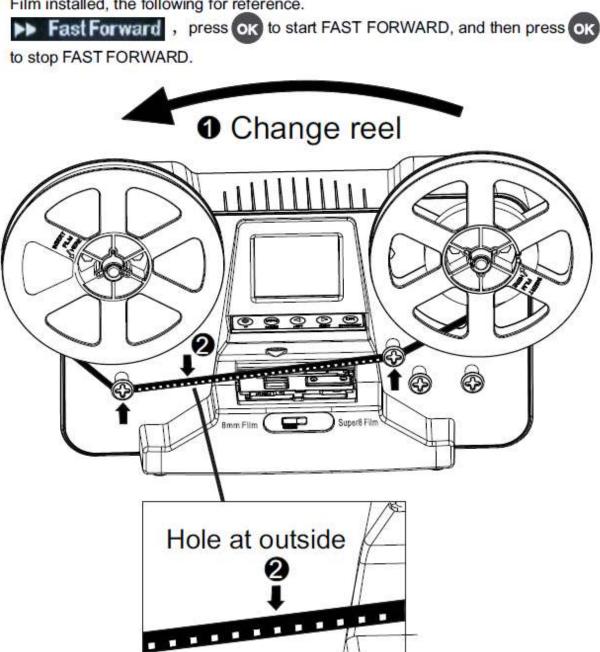

#### WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE. •
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.



F880

Please read and retain these instructions for future reference

- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.



Please read and retain these instructions for future reference

### CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

**PLUG WIRING (UK & IRELAND)** 

electric hazard or damage.

COOPERS

OF STORTFORD

### **DO NOT** use with any other mains transformer/charger than the one that is supplied with this product.

**DO NOT** use if the socket outlets in your home or office are not suitable for this product's mains adaptor/ charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

### DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics: This is made from the following recyclable plastic. **OTHER** (ABS).

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU Tel: 0844 4824400\*, Fax: 01279 756595 <u>www.coopersofstortford.co.uk</u> EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France Tel: (+44) 1279 701269 \*UK Calls cost around 7 pence per minute plus your telephone company's network access. Please check with your telephone supplier.







### F880

### v006: 11/01/23

Instructions for Use