

ONDIÄL

F881

Easy Use Mobile Phone

- **Big Buttons**
- **SOS Button**
- **Bluetooth**
- **FM Radio**
- **Camera**
- **Torch**
- **Dual Sim Card**
- **1.77inch Colour Screen**
- **GSM850/900/1800/1900Mhz**

*Calls cost 7 pence per minute plus your telephone company's network access charge.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

Instruction Manual

**Power Details:**

AC Charger Input voltage: 100-240V~ 50/60Hz, 0.3A

Cradle Input Voltage: DC 5V, 500mA

Cradle Output Voltage: DC 5V, 500mA

Accessories: Cradle, Charger, Instruction manual,
Lithium-ion Battery 3.7 V d.c.

*Calls cost 7 pence per minute plus your
telephone company's network access charge.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU

Tel: 0844 482 4400*

Fax: 01279 756595

www.coopersofstortford.co.uk

Coopers
OF STORTFORD

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new product description here.

Thank you for purchasing this Coopers Easy Use Mobile Phone. To ensure best performance please ensure the product is fully charged (see icon) before attempting to use.

Fully Charged



Icon

SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CORD, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.

*Calls cost 7 pence per minute plus your telephone company's network access charge.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

- USE ON A LEVEL, STABLE SURFACE.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

Warning

Please read and follow these concise rules carefully to prevent danger or breaking laws.

Driving safety

Do not use mobile phone when driving. Use hands-free accessories if you have to use the phone. Put the mobile phone in the holder, not on the passenger seat or any place that the phone will fall off.

Power off in aircraft

The interference of mobile phones will affect the flight safety and it is illegal to use mobile phones in an aircraft. Please switch off your mobile phone before boarding.

Power off in the operation area of explosion

Please follow the regulations or rules and switch off your mobile phone in or near operation area of explosion.

Power off near dangerous articles

Please turn off your mobile phone at petrol stations or places near fuels and chemicals.

In hospitals

Please follow the regulations or rules of hospitals when using mobile phones. Switch the device off near medical equipment. Any wireless device, including mobile phones, will interfere with medical devices which are not fully protected. Other electronic devices also may be affected. If you have any question, please consult your doctor or the manufacturer.

Interference

Any mobile phone might be subjected to interference and its performance will be affected thereby.

Professional service

Only qualified maintenance personnel can install or maintain this mobile phone. It may cause serious danger and also violates warranty clauses if you install or maintain the mobile phone by yourself.

Accessories and battery

Use manufacturer approved accessories and batteries only.

Rational application

Use the mobile phone in the normal way. Do not expose your mobile to too high temperatures (higher than 60 °C), for example, put it on a window sill in direct sunlight. Please use a wet or antistatic cloth to clean your phone. Do not use a cloth with static to wipe the phone.

Emergency call

Make sure that the mobile phone is switched on and in service area, enter the emergency number (e.g. 999) and press the Call key to call the number. Report your position and explain your condition briefly. Do not end the call without permission.

Note: Like other mobile phones, the characteristics of this phone may not be supported because of the network coverage or wireless signals transmission. Certain networks do not support emergency call. Therefore, do not rely on mobile phone only for very important communication (e.g. medical emergency). Please consult your local network provider.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

DO NOT use If the socket outlets in your home or office are not suitable for this product's mains adaptor/ charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the unit in a cool, dry place.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must

be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.

- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorized household WEEE waste.

1. Get started

 
1.1 Battery

1.1.1 Install the battery


- Remove the battery cover.
- Align the gold contacts of the battery with the corresponding connectors in the battery compartment.
- Push down the battery until it clicks into place.
- Close the battery cover.

1.1.2 Remove the battery

- Remove the battery cover.
- Pull the battery up and remove it.

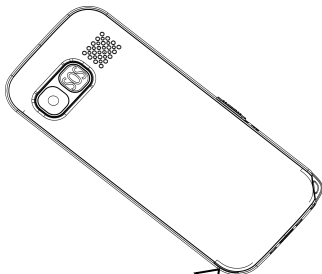

Remove/Close the battery cover)

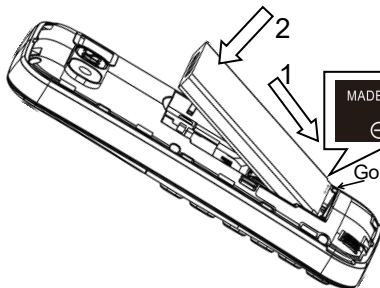 

MADE IN CHINA



Gold Contacts

*Calls cost 7 pence per minute plus your telephone company's network access charge.

 
 
Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

1.2 Insert the SIM card

The mobile phone supports two SIM cards at the same time.
How to insert SIM cards:

- Make sure that the phone is switched off.
- Remove the battery cover and take out the battery.
- Insert and push the SIM card into **SIM1** or **SIM2**. Make sure that the metal contact of the card is facing down and the beveled corner is in the direction as shown in the picture.
- Put the battery back and close the battery cover.

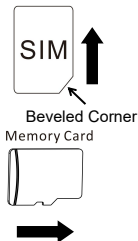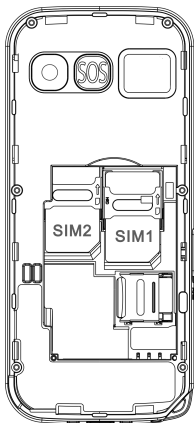

1.2.1 Remove the SIM card

- Press down lightly and pull it in the reverse direction.

SIM card

This mobile phone supports two SIM cards. The SIM cards can store your personal information such as names and phone numbers.

1.3 Insert a Memory (micro SD) card


 
If you want to download music or pictures using Bluetooth, record audio or video, or store many photos, you will need to insert a micro SD memory card to store these files.

- Make sure that the phone is switched off and remove the battery cover.
- Move the card slot metal cover to the right and pull over to open it.

Place the Memory card on the card slot and insert it into the card slot. Align the gold contacts of the card to the corresponding connectors.

1.4 Charge the battery

Method 1:

- Connect the supplied power adaptor to a mains socket.
- Connect the power cord to phone as shown in the picture. The battery-charging indicator starts scrolling.  The charging indicator stops scrolling when the battery is fully charged. 




Method 2:

- Charge the phone by connecting it to a computer using the supplied USB data cable.

Method 3:

- Connect the power cord to the charging base. Plug the charging adaptor into a mains socket.
- Put your phone on the charging base. It will automatically start charging. The charging base light will change the colour after charging. Please refer to the following.

Power Display	Charging Base Light Colour	Remark
$\leq 10\%$	Red	Note: Percentage of power display is for reference only. The actual product may differ.
$> 10\% \text{---} \leq 90\%$	Red and green light flashes cyclically	
$> 90\%$	Light Orange	
100%	Green	

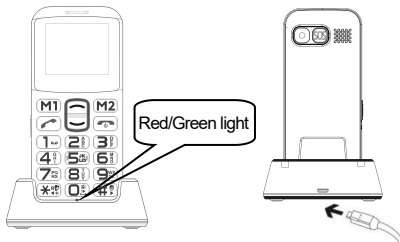 

Note: charge the battery at least 12 hours at the first time.


*Calls cost 7 pence per minute plus your telephone company's network access charge.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756595
www.coopersofstortford.co.uk



Coopers
OF STORTFORD

1.5 Power on/off

Press and hold the End key  to switch the phone on or off.

 **Note:** Make sure the SIM card and the battery have been inserted properly before start-up.

 
Start to use the phone.

You can lock or unlock the keypad by pressing **M1**  and then key ***** .

As for the default setting, the phone will automatically lock the screen in 30 seconds. You can change the time period in "Settings". (Menu-Settings-Security settings- Screen auto Lock)

2. The phone

2.1 Keys

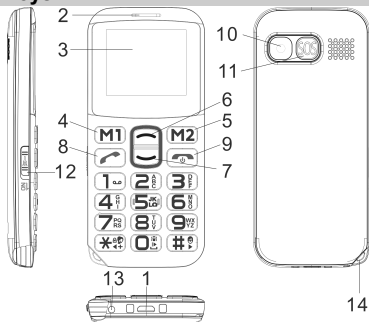

*Calls cost 7 pence per minute plus your telephone company's network access charge.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

Key Function

Key 1	USB connector	Key 8	Call key
Key 2	Receiver	Key 9	End Key/Power on/off key
Key 3	LCD display	Key10	Camera
Key 4	LSK(M1)	Key11	SOS key
Key 5	RSK(M2)	Key12	Torch on/off key
Key 6	Up key	Key13	Torch
Key 7	Down key	Key14	Neck cord hole



Note:

M1 Key: In standby mode, press M1 Key **M1** to access the main menu.

M2 Key: In standby mode, press M2 Key **M2** to access phonebook.


2.2 Screen Icons

	SMS		Vibration on
	Keypad lock		Bluetooth on
	Alarm on		Battery power level
	Signal strength		Missed calls

3. Basic Functions

3.1 Make a call

3.1.1 Dial a Number

In standby mode, enter the phone number and press **Call Key**  to make a call. (When you install two SIM cards, press Send key again to choose SIM1 or SIM2 voice call.)

Hands free function:


When dialing out, press M1 to activate the hands free function before connection. After connection, press M2 to activate the hands free function.

When calls coming in, press M1 to answer it first, then press M2 to activate the hands free function.

*Photo Contact Dial

Photo Contact Dial is a procedure to dial the contacts in the phonebook directly by choosing the saved photos.

1. Go to **Menu---Phonebook---Photo contact**.

- You can press the **up/down key**  to select up to eight photo contacts.
- Click "edit". You can input name, mobile number, insert caller picture and set up the default ringtone.
- Insert the caller picture:

Option 1: Taking caller picture by camera


File selected---Select---From camera.

Option 2: Select caller picture from phone files

File selected---Select---From file---Phone/Memory card.

- After setting up all the information, click "Options" and save.


2. To use **Photo contact**:

- Press the **down key**  , then you can see all of the 8 photo contacts.
- If you want to call the No. 1 photo contact, just press "1" then it will dial out directly.

3. If you want to change the photo contact info, just use the same procedure as above.

Go to **Phonebook**---**photo contact** then select **Options**. You can edit, call, delete and send message.

* **Speed Dial :**

Go to **Menu**, then press the **up key**  and select **Settings**. Select "**Speed dial**".

1. **Set numbers for key "M1/M2/*/#":**

- Press "OK" to enter **M1/M2/*/# Key** setting menu. Select **Set numbers**, you can set up the numbers for **M1/M2/*/# Key**.
- Press "Options", you can choose:
Option 1: Add the number from phonebook
Option 2: Enter number-- Type in the number directly in the blank and press "Save".
- Keep the speed dial status on, you can press and hold the M1/M2/*/# key to dial out the corresponding number which has been set.

2. **Set numbers for key "1-9":**

- In **Speed dial** menu, select "**1-9 numbers**". Select **Set numbers**, you can set up the numbers for key "1-9".
- Press Options, you can choose:
Option 1: Add the number from phonebook
Option 2: Enter number-- Type in the number

directly in the blank and press "Save".





- Keep the speed dial status on, you can press and hold the "1-9" key to dial out the corresponding number which has been set.

3.2 Answer and end a call

The phone will ring or vibrate when there is an incoming call.

- Press **Call key**  to answer the call.
- Press **End key**  to reject the call.
- Press **End key**  to end the call.

3.3 Text Input

- Press the **# key**  to change the input modes.
- Delete Character: Press **M2**  to clear a character. Hold **M2**  to delete all characters.
- Move cursor to left or right: Among the text, press the **Up/Down keys**  to move the cursor to left or right.

3.4 Adding contact to the Phonebook

You can add new phone numbers to your phonebook.

- Go to **Menu--- Phonebook---Add new contact**.
- Input name, mobile number, insert caller picture and set up the default ringtone.
- Press "Option" and save.


3.5 Sending and receiving messages

You can use your mobile phone to send and receive message.

Send a message

- Go to **Menu---Message---Write message**.
- Input your message. Press "Options" and click "Input method", you can select the input method of "abc", "Abc" "Numeric" and "Symbol".
- Press "Options" and click "Advanced" to input phone number and contact name.
- After writing the message, press "Options" and select send or save the message.

Receive a message

When you receive a new message, press **M1 key**  to read the message.

3.6 SOS Function

Press and hold the **SOS key** for 3 seconds to dial out for an emergency call under all circumstances, even if the phone is locked. You can go to **Menu---Settings---SOS setting** to set those functions:

- **Status:** To activate or deactivate SOS function.
- **SOS Numbers:** You can set maximum 5 phone numbers for SOS emergency call.
- **SOS SMS ON/OFF:** To activate or deactivate SOS SMS.
- **SOS SMS:** You can edit a SOS message.
- **Warning Tone OFF/ON:** To activate or deactivate SOS the warning tone. The default setting is ON.

3.7 Call logs

Go to **Menu---Call center---Call history**, you can check the call logs of **Missed calls**, **Dialed calls**, and **Received calls**. If the records are full, the oldest saved record will be deleted.

3.8 Setting your phone

You can adjust various settings of your phone. Go to **Menu---Settings**.

Phone settings: Set Time and date; language; Pref. Input method; Display; Up/Down key shortcuts settings; Flight mode; Misc. settings etc.


Security settings: Phone security; Screen auto lock;(SIM1 security; SIM2 security).

Phone Security: Default password is 1122.


Restore settings: Default password is 1122.

3.9 How to take a photo

Go to **Menu---Multimedia---Camera**.

- To take a photo: aim the camera at the object and then press the **5 key**  to take the shot. The taken photos will be saved automatically.
- After taking the photo, press "Options" to choose "send" or "delete", or press "back" to return.

In the camera mode, press "Options" to enter camera or image settings.

Shortcut: On the main menu, press **Up key**  to access the camera directly.

3.10 How to Listen to FM radio

Connect earphone to mobile.

Go to **Menu---Multimedia---FM radio**.

With the radio, you can search for radio channels; listen to them, and save them on your device.


Press **0 key** to switch on/off the FM Radio.

 
Press **Options** for Auto search and Channel list.



Press **up key**  to next channel.

Press **Down key**  to previous channel.

Press **M2 key**  to return.

Press **#**  to raise the volume.

Press *****  to lower the volume.

 **Note:** If you press **M2 key**  to return, the FM radio will continue to play. It will not stop. If you want to stop playing the FM radio, press 0 key to switch off and then press **M2 key** to return.

3.11 Profiles

Go to **Menu---Settings---Profiles**.

The mobile phone provides multiple user profiles, including General, Silent, Meeting and Outdoor.

Enter one of the modes of General, Meeting and Outdoor and press "Options", then select:

1. **Activate:** To activate the mode
2. **Customize:** set your preferred alert type, ring type, ringtone, ringtone volume, message tone, message volume etc.
3. **Reset:** All the settings will be reset back to default settings.

Enter "Silent", press "Option" and select "activate" to activate the silent mode.

3.12 Organizer

Go to **Menu---Organizer**.

You can access File manager, Scheduled power on/off setting, Calculator, Calendar and Alarm.

3.13 How to use Bluetooth

Go to **Menu---Settings---Connectivity---Bluetooth**

Power: Switch on/off to enable/disable Bluetooth.

Visibility: Switch on/off to keep the phone's Bluetooth visible /invisible to other devices.

My device: You can search and save other devices

Search audio device: Search for available audio devices.

My name: Native device name.

Advanced: You can check up the information of Audio path, Storage and My address.



Note: *Bluetooth default pairing code is 0000 .*

ONDIÄL



- Dispose of all packaging, paper, cartons and plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorized household WEEE waste recycling centre.

*Calls cost 7 pence per minute plus your telephone company's network access charge.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD