



TECHNICAL DETAILS:

POWER DETAILS: 230V a.c.
POWER FREQUENCY: 50Hz
WATTAGE: 500W

UNIT SIZE: 180mm x110mm x 110mm, Weight: 410g



Remote control:105mm x15mm x15mm
2 xAAA batteries required(not included)

Rotates by 90°



Front view



Detail Operating panel



Rear view

- 1. Blower grid front.
- 2. PTC element
- 3. Back grid
- 4. Main switch (O/I)
- 5. Operating panel

- 8. Temperature higher button
- 9. Temperature lower button
- 10. Display
- 11. Timer button
- 12. ON/STAND BY BUTTON


- 6. Plug
- 7. Indicator light

SAFTY FEATURES:

In case of internal overheating, the overheating safeguard will switch the heater off. This may occur if the heater cannot give off enough heat or if it cannot draw in enough fresh air. As mentioned

above, this is generally caused by (partially) covering the heater or obstructing the air intake and/or outlet grills or installing the heater too close to a wall or something similar. When the overheating safeguard switches the heater off, you need to turn the switch to the "O position" (off) and remove the heater from the socket. Allow the heater to cool down and make sure what caused the overheating is removed or amended. The heater can then be reused. If the problem persists or if you cannot find an obvious cause of overheating, turn the heater off immediately and take the plug out of the socket.

SET-UP AND OPERATION:

- Make sure that the heater is switched to the off position (O) then plug into a correctly functioning 220-240V/50HZ socket.
- Now set the main switch to the on position (I); the heater is now on standby and the indicator light(7) lights up.
- Switch on the heater by pressing the  on/standby button (12) .
- After switching on by means of the main switch, the thermostat is on the maximum 30°C. Press the "Temp-" button to set the desired temperature (minimum 15°C). Press the "Temp+" button to increase the temperature. The display shows the set temperature.
- The thermostat will now regulate the heater to turn on if the temperature is too low and off once the desired temperature is reached.
- Press "Temp+" and "Temp-" at the same time to speed up the fan or to slow it down. The display shows the setting for a moment flashing LL=low or HH=high.
- Press the timer button to set the timer. The display changes from degrees to hours. Hold in the button to increase the number of hours, up to a maximum of 12.
- If you set the timer while the heater is on, you set the number of hours after which the heater turns itself off.
- To switch off the heater you must first set it to standby by pressing the ON/standby button. The heater will stop heating, but the fan cools for another 60 seconds (see display) before switching off. You can then use the main switch to turn off the heater properly (O pressed). Never leave the plug in the socket when the heater is not in use.

This product is only suitable for well insulated spaces or occasional use.

SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.

- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT USE OUTDOORS.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- **DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.**
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- **DO NOT PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALLPAPER, ETC.**
- ALLOW THE ITEM TO COOL THOROUGHLY BEFORE PUTTING ON OR TAKING OFF PARTS.

WARNING

- CHECK THE APPLIANCE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- KEEP THE APPLIANCE AWAY FROM CHILDREN.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- DO NOT USE IF THE PLUG IS DAMAGED. TO BE REPAIRED BY A QUALIFIED ELECTRICIAN OR TO BE REPLACED BY THE MANUFACTURER, SERVICE AGENT OR SIMILARLY QUALIFIED PERSON, IN ORDER TO AVOID A HAZARD.
- KEEP ITEM AT LEAST 1M AWAY FROM COMBUSTIBLE MATERIAL SUCH AS FURNITURE, CUSHIONS, BEDDING, PAPER, CLOTHES, CURTAINS ETC.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.

Please read and retain these instructions for future reference

v001: 07/05/19

- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the unit in a cool, dry place.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

