



Dimensions:

34cm (L) x17cm (W) x100-127cm (H)

Weight:

1.8kg

Materials:

ABS and stainless steel

Power supply:

Input: 7.4V dc, 30W

Charger using adaptor:

220-240V a.c., 50/60 Hz, 30W.

105 RPM

90min runtime on 3-4 hour charge

Type of batteries required: Li-ion 18650 (included)
capacity: 2000mAh

Accessories:

 
4x micro fibre pads to remove dust

A set of 6 pads (2x scrubbing pads, 2 micro fibre mop pads and 2 polishing pads) is available under item code F932

Product and Application

The Eazy Glide Mop can be used wet and dry for fully automatic cleaning or waxing of hard floors.

Parts

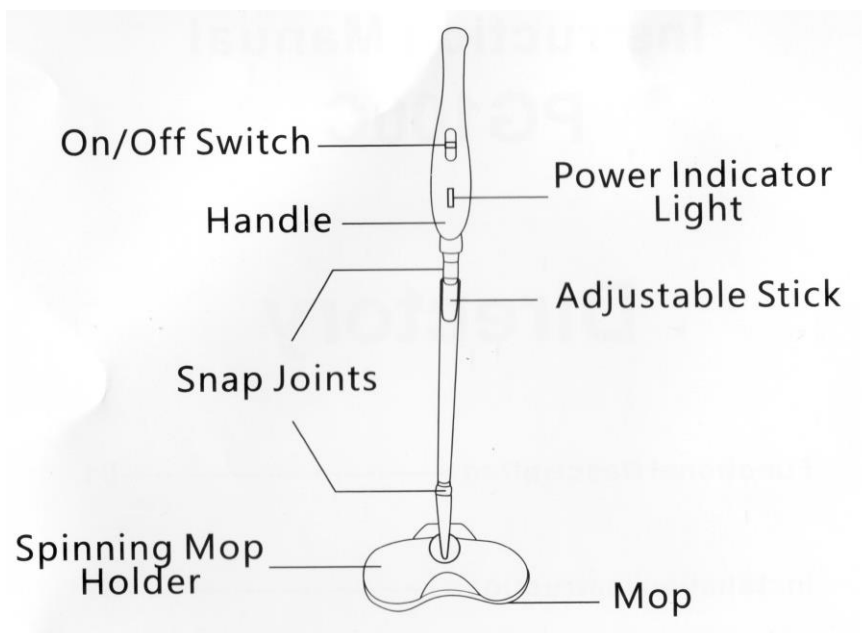

Assembly

- ① Take out the handle.



 
- ② Take out the adjustable stick.



- ③ Attach handle to the adjustable stick, turn the snap joint to connect.



- ④ Take out the spinning mop holder.

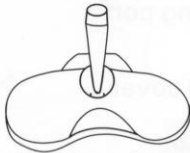


- ⑤ Attach spinning mop holder with assembled parts, turn the snap joint to connect.




Multi-function handle instructions

 The handle can be connected with the adjustable stick or the mop holder directly.

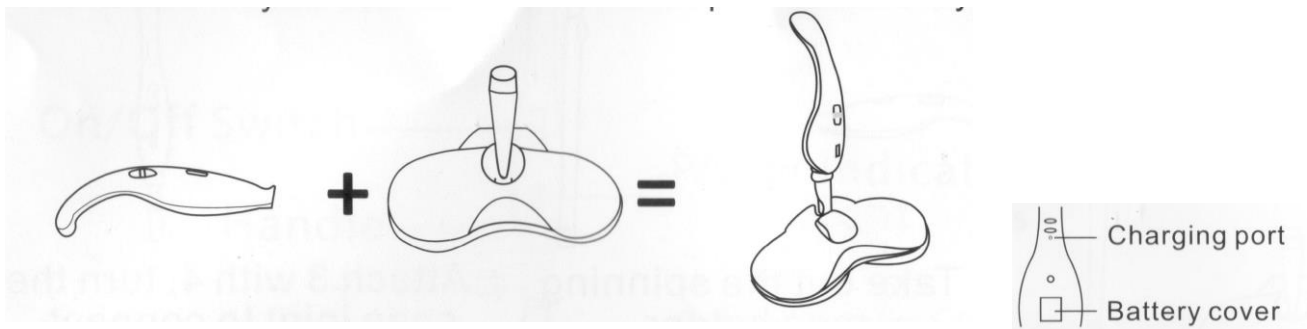

The handle can be removed from the unit for charging but the switch must be turned off.

 
Mop pad installation instructions

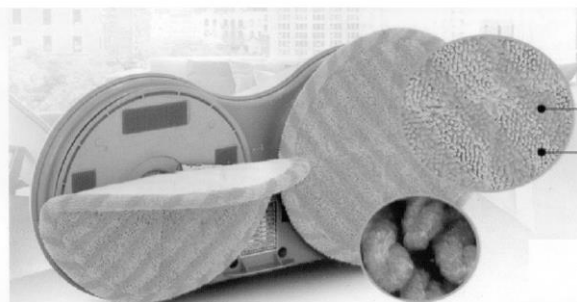

Attach hook and loop stickers to the underside of the mop holder and fit mop pad. Ensure pad sits on the holder smoothly and evenly.

Disassemble the Eazy Glide Mop

 Unplug the power cord to disassemble the mop

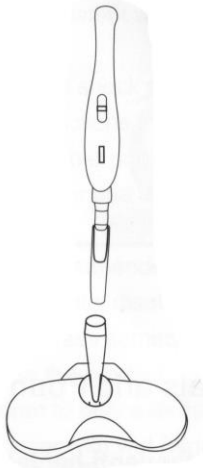


Spin out the lower snap joint to separate the adjustable stick from the mop cloth holder.




Spin out the snap joint to separate the adjustable stick from the handle.

 Store away

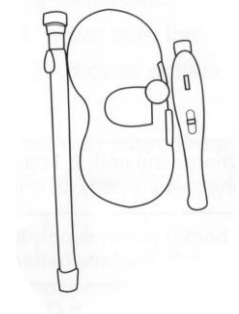

Mop Pad Washing and Drying Instructions

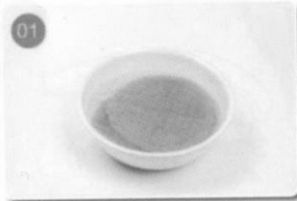 

- Immerse the mop pad in some water with detergent.
- Let the pad soak for 3-5 minutes.
- Gently wring dry.

Troubleshooting

Eazy Glide Mop won't turn on	<ol style="list-style-type: none"> 1. Charge the unit. 2. Make sure the power cord is connected properly. 3. Contact customer services.
Easy Glide Mop won't charge	<ol style="list-style-type: none"> 1. Check if power supply is working. 2. Replace battery. 3. Turn the switch to off.
Surface is not completely clean.	<ol style="list-style-type: none"> 1. Check if the mop pad is clean. 2. Change the mop pad.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE. DO NOT USE THIS PRODUCT ON FLOORS WITHOUT TILES OR SMOOTH SURFACE.

- DO NOT HANDLE CHARGER WITH WET HANDS. IF THE CHARGER, POWER CORD OR THE PRODUCT ITSELF IS DAMAGED, DO NOT USE THIS PRODUCT.
- DO NOT TOUCH THE EAZY GLIDE MOP WHILE IN MOTION, TO PREVENT INJURY.
- DO NOT USE THE MOP ON FLOORS WITH HARD AND SHARP DEBRIS.
- DO NOT USE THE MOP TO MOP FLAMMABLE LIQUIDS.
- ONLY USE THE ORIGINAL CHARGER PROVIDED BY THE MANUFACTURER FOR CHARGING.
- DO NOT STORE OR EXPOSE THE PRODUCT TO HIGH TEMPERATURES OR HIGH HUMIDITY. DO NOT STORE THIS PRODUCE NEAR A STOVE, RADIATOR, FURNACE, OR IN THE BATHROOM.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSIVE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

DO NOT use if the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

BATTERIES

- Keep batteries away from children and pets.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

