

 


TECHNICAL DETAILS:

POWER DETAILS: 220-240V AC
POWER FREQUENCY: 50Hz-60Hz
WATTAGE: 200W, Class II

KNOWING YOUR POTATO MASHER:

1. Low speed
2. High speed
3. Handle
4. Stirrer
5. Blending shaft
6. Masher head
7. Masher blade

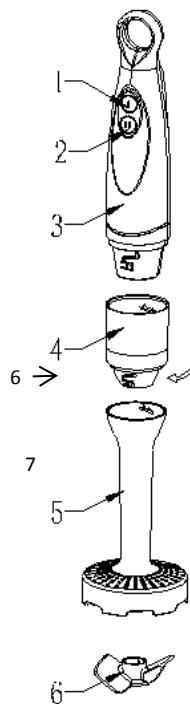


Picture 1


USER INSTRUCTIONS:

- Peel and cut the required amount of potato into approximately 2.5cm (1") cubes.
- Place the potatoes in cool water and heat to boiling.
- Boil gently until the pieces of potato offer little resistance to a knife. This should take around 15-20 minutes.

 - Cutting the potatoes into smaller pieces and heating the water from cold allows the potatoes to cook through evenly.
- Drain the water from the potatoes.
- Insert the shaft into the stirrer, rotate the stirrer clockwise. (Picture 1)
- Place the blender upside down, rotate the masher blade anticlockwise (if blending shaft and the blender do not assemble well, the masher blade cannot be assembled well accordingly.)
Warning: You should hold the blender lightly with your hand, Picture 2.
- Assemble the blending shaft and body well anticlockwise, Picture 3.



Picture 2

 

Picture 3

- Plug the potato masher into the power source.
- Select either the I or II power function depending on the speed you want. Hold either the I or II button down whilst you mash your potatoes. To stop mashing simply stop pressing on the button.
- Move the masher up and down through the potatoes until they have all been processed. This should only take a few seconds.
- Keep the potato masher running as you lift it from the ingredients (but still within the bowl or dish you are using), to clear any excess mash from the masher.
- DO NOT USE for longer than cycles of 1 minute at a time. Allow to rest for 1 minute in between each 1 minute cycle.
- Turn the masher off at the power point and unplug it. Then remove the masher head from the unit to clean by turning it clockwise. Scrape food from blending shaft and masher blade.

WARNINGS / CAUTIONS:

Please read these instructions thoroughly before using this appliance or connecting to the mains supply. Retain for future reference

- THIS APPLIANCE MUST NOT BE EARTHED.
- DO NOT ALLOW THIS PRODUCT TO BE EXPOSED TO RAIN OR MOISTURE DURING USE OR STORAGE. BEFORE SWITCHING ON, MAKE SURE THAT THE VOLTAGE OF YOUR ELECTRICITY SUPPLY IS THE SAME AS THAT INDICATED ON THE RATING LABEL. CONNECTING IT TO ANY OTHER POWER SOURCE MAY CAUSE DAMAGE.
- THIS PRODUCT HAS BEEN DESIGNED TO MASH FOOD. IT IS INTENDED TO BE HAND HELD AND TO BE USED IN POTS, PANS OR THE LIKE, AFTER THEY HAVE BEEN REMOVED FROM A COOKING SURFACE. IT SHOULD NOT BE USED FOR ANY OTHER PURPOSE.
- THE BLADE IS PLASTIC. DO NOT PLACE HANDS OR FINGERS IN THE BLADE AREA WHEN THE POWER IS CONNECTED TO THE APPLIANCE.

- NEVER TOUCH THE BLADE WHEN IT IS SPINNING.
- KEEP HAIR AND LOOSE CLOTHING AWAY FROM THE MASHER TO AVOID ANY CHANCE OF THEM BECOMING ENTANGLED IN THE BLADE.
- ALWAYS TURN THE POWER OFF AT THE POWER SOURCE BEFORE YOU INSERT OR REMOVE THE WALL PLUG. REMOVE BY GRASPING THE PLUG – NEVER PULL ON THE CORD.
- THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE OR KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING THE USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CHILDREN MUST BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.
- DO NOT USE IN A POT STILL ON THE COOKTOP, AS THE POWER CORD MAY ACCIDENTALLY BECOME DAMAGED BY HEAT.
- DO NOT PLACE THIS APPLIANCE ON OR NEAR A HOT GAS FLAME, ELECTRICAL ELEMENT OR HEATED OVEN.
- DO NOT LET THE POWER CORD OF AN APPLIANCE HANG OVER THE EDGE OF A TABLE OR BENCH TOP OR TOUCH ANY HOT SURFACE.
- DO NOT OPERATE THIS APPLIANCE WITH A DAMAGED CORD OR AFTER THE APPLIANCE HAS BEEN DROPPED OR DAMAGED IN ANY MANNER. IT MUST BE REPLACED BY THE MANUFACTURER OR ITS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.
- FOR HOUSEHOLD USE ONLY.
- USE THE MASHER ONLY AS INTENDED. DO NOT USE NEAR WATER, OUTDOORS OR IN A BATHROOM.
- DO NOT IMMERSE THE MOTOR UNIT IN WATER OR ANY OTHER LIQUID. THE MASHING ATTACHMENT IS SIMPLY REMOVED FROM THE MOTOR UNIT FOR WASHING SEPARATELY.
- NEVER BLEND HOT OIL OR FAT.
- REMOVE ALL PACKAGING INSIDE AND OUT BEFORE USE.

CLEANING INSTRUCTIONS:

- Before cleaning your potato masher you must remove it from the power source.
- The mashing head can be removed from the stirrer and handle for washing, by twisting clockwise.
- For further cleaning you can remove the mashing blade from the mashing head by twisting clockwise.
- Wash both the masher head and masher blade in warm soapy water.
- Once the masher head and blade are completely dry you can re-attach them to the motor. Simply slot the masher head onto the bottom of the stirrer and click clockwise into place. So that it is securely fitted to the stirrer.
- To re-attach the blade to the masher head slot onto the plastic in the centre, push down and then twist anti-clockwise so that it clicks firmly into place.
- Store the potato masher in a clean, dry place.

PLUG WIRING (UK & IRELAND)


This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 3-amps should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is double insulated; the wires in the cord set are colour coded in the following way:

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram below shows the key features of a correctly wired three-pin mains plug.

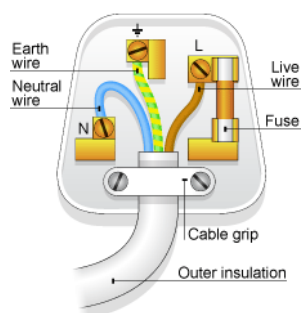 

Note:
Double insulated appliances do not need the green & yellow Earth wire. They may only have the Brown and Blue wires.

DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

