


Size: 21cm x4.7cm x7.2cm

Weight: 210g

Parts

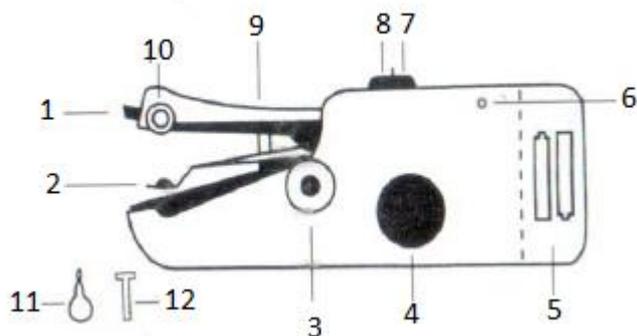

1. Set screw
2. Fastening plate
3. Bobbin
4. Rotary wheel
5. Battery compartment
6. AC/DC Adapter slot
7. Lock/Unlock
8. Power switch
9. Needle arm
10. Tension control
11. Threader
12. Extension spindle

Accessories:

- 2 extra needles
- 3 extra bobbins with thread

For your safety:

- The needle is sharp, use care when working with the needle to avoid injury.
- Keep away from children.
- When not in use the machine should always be kept in a locked position.

Insert/Replace Batteries (4 X AA batteries not included):

Note: Make sure the machine is in the locked position prior to battery replacement.

To open the compartment, press down on the arrow with your thumb and push in the direction of the arrow (Figure 1).

Insert 4x AA batteries in the battery compartment. (Figure 2).

Once the batteries are inserted, replace battery cover by sliding it back and clicking into place.

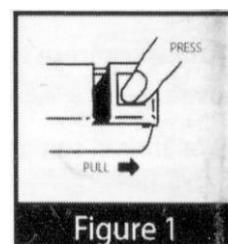


Figure 1

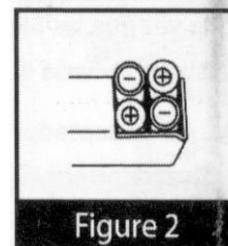





Figure 2

AC/DC adapter (not included)

Can be used with an Adapter, must be 6V 800mA (not included). Plugging in an adapter that has a different rating could damage the machine and adapter.

Directions for Use:

Ensure the machine is in the locked position (Figure 3). Raise the needle arm to the highest position by turning the rotary wheel (Note: The rotary wheel can be turned in either direction (Figure 4). Lift up the fastening plate making sure not to push down on the needle arm (Figure 5). The arm can still be moved manually even when the machine is in the locked position. Place the fabric to sew underneath the fastening plate. Thread two inches of thread through the needle.

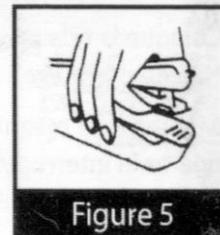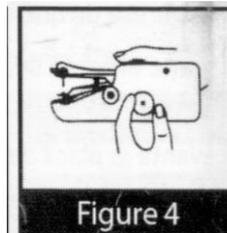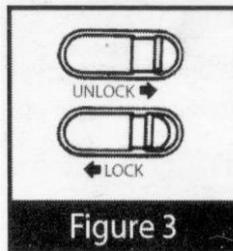

Hold the sewing machine with right hand and operate power switch with thumb, other fingers supporting the bottom.

Unlock the sewing machine. Press the power switch with your right thumb. The machine will automatically sew the fabric/cloth to the left (Figure 6).

Use the left hand to hold cloth and control the direction (do not rush the machine). When wider stitches are required, pull cloth to the left a little faster while you continue sewing.

Follow the centre line on cloth fastening plate to ensure straight stitching. To finish seam, raise the needle arm to the highest position by turning the rotary wheel. Use the back of a seam ripper or scissors to pull the thread out about three inches then cut it (Figure 7).





Turn the rotary wheel, lowering the needle into the cloth. Continue to turn the rotary wheel until needle arm is again at its highest position.

Lift up the fastening plate and take off the cloth to the left (Figure 8), making sure not to pull the thread out of the seam doing so can cause the seam to unravel.

Turn to backside of the cloth and guide the reserved 3 inches according to the following figures to make the knot (Figure 9).

1. First pass threader through the last stitch.
2. Put the reserved 3 inch thread through the threader hole.
3. Pull it out about 1 inch.

Guide the thread through the loop and pull it tight to finish the knot.

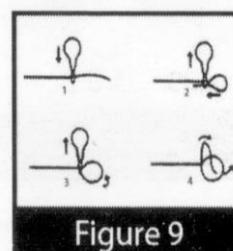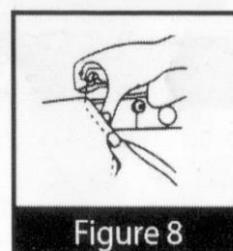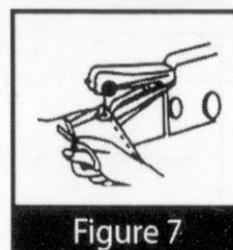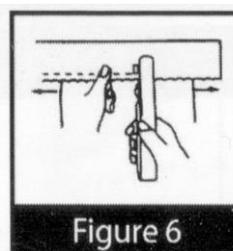

Threading the Machine

Note: The spring must be in place before installing bobbin. Thread should flow from the top right of the bobbin or spool.
Pass thread through the eyelet on the needle arm.

Pass thread over top of tension control, do not wrap completely around tension control (Figure 11).

Use the threader to pass the thread through the needle eye from back to the front.

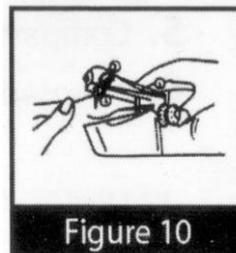


Figure 10

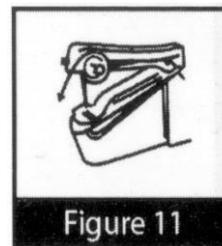


Figure 11

To Use a Standard Thread Spool:

Loosen the bobbin nut and take off the bobbin. Slide thread spool onto extension spindle. Connect the extension spindle on bobbin shaft (Figure 12).

Replacing the Needle:

Loosen the set screw with a screwdriver and take off the old needle and insert a new one.

Needle must be installed with a flat side of the needle shank facing the front of handheld sewing machine.

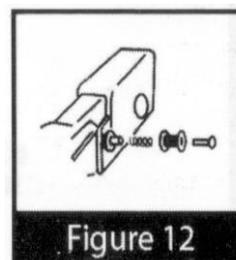


Figure 12

Always use a #14 style DHx1 sewing needle. (metric size 90)

BATTERIES

- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Keep batteries away from children and pets.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 LDPE	 OTHER
Type of Plastic	Low Density Polyethylene	ABS
Commonly used for	Shopping bags, bread bags, squeeze bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

