

# Copper Coloured Buffet Server F972 Instructions for Use

Please read and retain these instructions for future reference

v001: 15/04/19



## Technical Details

220-240V, 50Hz, 300W

**CAUTION!** THIS ELECTRICAL APPLIANCE'S EXTERNAL SURFACES WILL GET HOT IN NORMAL USE. ALLOW TO COOL BEFORE TOUCHING THE EXTERNAL SURFACES. USE OVEN GLOVES WHEN OPENING THE GLASS DOOR WHEN REMOVING COOKED FOOD.

## How to use the buffet warmer

Note: There will be a faint smell when using the buffet server for the first time but this is quite normal and will fade with use.

**WARNING:** this appliance will get hot during use, please exercise extreme caution.

- Plug the buffet server into the mains power supply and switch on. The indicator light will illuminate red and will turn off when the desired temperature is reached.
- Place the prepared food into each of the warming pans and adjust the temperature to the desired heat. The indicator light will cycle on and off whilst maintaining the correct temperature. It is not recommended to keep this appliance on for more than 6-8 hours at any one time.
- After use, unplug the appliance from the mains power supply and allow to cool thoroughly

## How to use the warming plate without warming pans and frame

- Place the warming tray on a stable, heat resistant surface.
- Plug the appliance into the mains power supply and switch on.
- The indicator light will illuminate red and will turn off when the desired temperature is reached.
- Pre-heat the appliance for 10 minutes.
- Food warmed on the tray must be pre-cooked and already hot as this appliance is not designed for heating from cold or frozen.

\*Calls cost 7 pence per minute plus your telephone company's network access charge

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

**Coopers**  
OF STORTFORD

# Copper Coloured Buffet Server F972 Instructions for Use

Please read and retain these instructions for future reference

v001: 15/04/19

- When you have finished using the appliance, unplug from the mains power supply and allow to cool for approximately 90 minutes before storing.

## Cleaning and Maintenance

- Caution: Always ensure the appliance is unplugged from the mains power supply and has thoroughly cooled before cleaning or storing.
- Remove each warming pan, the lid and the frame and wash in warm, soapy water. Rinse well and dry thoroughly.
- Wash the warming tray in a mild detergent with a soft, moist cloth, do not use any abrasive cleaning agents or allow water to spill or seep into the frame. Never immerse the warming tray, cord or plug in water or any other liquid.
- Re-assemble the buffet server and store in a cool, dry place.

## WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- DO NOT LEAVE THE APPLIANCE UNATTENDED WHILST CONNECTED TO THE MAINS POWER SUPPLY.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- NEVER PLACE YOUR HAND OVER THE STEAM VENTS OR COVER WHEN THE APPLIANCE IS IN OPERATION.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE, HEAT RESISTANT SURFACE.
- ANY MEAT DISHES PLACED IN THE BUFFET SERVER MUST BE THOROUGHLY COOKED FIRST. DO NOT PLACE RAW MEAT IN THE BUFFET SERVER.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595

[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

**Coopers**  
OF STORTFORD

\*Calls cost 7 pence per minute plus your  
telephone company's network access charge

# Copper Coloured Buffet Server F972 Instructions for Use

Please read and retain these instructions for future reference

v001: 15/04/19

CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.


- DO NOT PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALL PAPER, ETC.
- ALLOW THE ITEM TO COOL THOROUGHLY BEFORE PUTTING ON OR TAKING OFF PARTS.
- DO NOT PLACE THIS ITEM IMMEDIATELY BELOW A SOCKET-OUTLET.
- KEEP ITEM AT LEAST 1M AWAY FROM COMBUSTIBLE MATERIAL SUCH AS FURNITURE, CUSHIONS, BEDDING, PAPER, CLOTHES, CURTAINS ETC.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

## PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 **13-amp** plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of **13-amps** should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

### The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is **earthed**; the wires in the plug are colour coded in the following way:

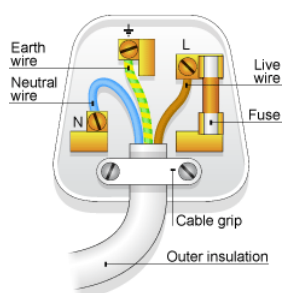

|                |         |
|----------------|---------|
| BLUE           | NEUTRAL |
| BROWN          | LIVE    |
| GREEN & YELLOW | EARTH   |

The diagram shows the key features of a correctly wired three-pin mains plug.

## CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595

[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

**Coopers**  
OF STORTFORD

\*Calls cost 7 pence per minute plus your telephone company's network access charge

# Copper Coloured Buffet Server F972 Instructions for Use

Please read and retain these instructions for future reference

v001: 15/04/19

## DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.



\*Calls cost 7 pence per minute plus your telephone company's network access charge

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

**Coopers**  
OF STORTFORD