



**Suitable for trees 6-7ft**

**Contains 64 colourful lights**



### Flashing Lights

If you have epilepsy or unusual reactions to flashing lights or patterns, consult a medical professional before using this product.

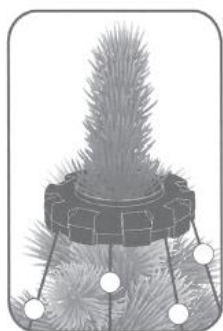


Figure 1



Figure 2

### Tree Dazzler Setup

1. Position your tree near a mains socket in a convenient and safe location. Put the Tree Dazzler on first before any other ornaments. Simply place your Tree Dazzler ring over the top of the uppermost branch ensuring the branch is sturdy and upright (See Figure 1).
2. Spread the light strands evenly around the tree. You may wish to place the tethered controller at the back of the tree. (Figure 2)
3. Plug in your Tree Dazzler and get ready to enjoy the show!



## How to Use the Controller

Your Tree Dazzler controller has 3 different light show modes ; Still; Shimmer; Show (See Figure 3)

Press each mode button multiple times in succession to choose between the different light colour and patterns shown below.

<u>Still</u>	<u>Shimmer</u>	<u>Show</u>
Push button once	Push button once	Push button once
One colour no flash	One colour flashing	One flashing Mode
Red	Red	Rainbow quick flash
Blue	Blue	Blue/Red/White slow flash
Green	Green	Blue/Red slow flash
White	Purple/Green	Rainbow Fade
WhiteRed	Rainbow	Green/White Scroll
Rainbow	Purple	Pink/Green quick flash
Purple	White	Red/White rhythmic flashing
Pink	Red/White	



## WARNING

- DO NOT SECURE THE STRANDS TO THE TREE WITH SHARP OBJECTS (E.G. STAPLES, PINS).
- UNPLUG WHEN LEAVING THE HOUSE, RETIRING FOR THE NIGHT, OR OTHERWISE LEFT UNATTENDED.
- DO NOT COVER LIGHTS WITH CLOTH, PAPER OR OTHER MATERIALS.
- USE ONLY INCLUDED POWER CORD AND POWER ADPATOR.
- PLUG DIRECTLY INTO THE WALL OUTLET. DO NOT USE AN EXTENSION CORD. DO NOT USE ADAPTER WITH OTHER PRODUCTS.
- THIS PRODUCT USES OVERLOAD PROTECTION CIRCUITRY TO DISABLE PRODUCT IF OVERLOAD IS DETECTED. IF THIS HAPPENS, UNPLUG POWER, WAIT 30 SECONDS AND TRY AGAIN. IF PROBLEM PERSISTS DISCONTINUE USE AND CONTACT CUSTOMER SERVICES.
- DO NOT HANG ORNAMENTS OR OBJECTS FROM CORD, WIRE OR LIGHT STRANDS.
- ENSURE ALL LIVE TREES ARE WELL MAINTAINED. DO NOT USE PRODUCT IF TREE IS DRY, NEEDLES ARE BROWN, OR NEEDLES EASILY BREAK. KEEP PRODUCT AWAY FROM WATER. TO AVOID TIP-OVER, ENSURE TREE IS SECURE AND STABLE BEFORE DECORATING.

## WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE PRODUCT, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE PRODUCT AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595

[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

**Coopers**  
OF STORTFORD

\*Calls cost 7 pence per minute plus your  
telephone company's network access charge

- THIS PRODUCT CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

#### PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

**DO NOT** use if the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

**DO NOT** use with any other mains transformer/charger than the one that is supplied with this product.

#### CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

#### DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

