Instructions for Use

Please read and retain these instructions for future reference

v002: 05/08/19



Dimensions:

Length: 39cm Width: 26cm Height: 13cm

Material:

Cover: Polyester, Filling: EPS, regular foam

Power Supply: 4x C batteries (not included) or use a 6V 800mA AC Adaptor (not included)

For domestic indoor use.

This product is not intended to diagnose, treat, cure or prevent any disease. Please consult a healthcare professional if you have any questions.

For best results:


Do not use more than 10 minutes at a time to prolong battery life.

Do not apply the full leg weight on the cushion. Just relax your feet and enjoy! Best used in sitting position.

Battery installation





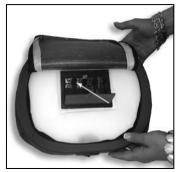

- To install batteries, locate the zipper underneath the unit to reveal the battery compartment. See above illustration.
- Ensure you insert the batteries as indicated by the polarity symbols (+/-).

Operating Instructions

2 massage settings HIGH - intense invigorating massage LOW – gentle relaxing massage

- Set rocker switch to |LOW for a gentle relaxing foot massage
- Set rocker switch to | | HIGH for an intensive invigorating foot massage
- Set to O to switch off

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.



Vibrating Foot Massager

F987

Instructions for Use

Please read and retain these instructions for future reference

v002: 05/08/19

- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

CLEANING:

- Do not immerse in water.
- Wipe clean only.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags Contains the following recyclable plastic.



Code & Symbol	₹ 55
Type of Plastic	Polypropylene
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)

At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

