

**Technical Data**

Dimensions: W160mm xH225mm x D85mm

Operating temperature: 60-300°C

The stove fan does not run on the mains or batteries; it uses the heat from the stove or cooker. The unique design of the fan gives stable and silent operation. The base is designed so that it "lifts" when the temperature gets too high, and in doing so, reduces the contact with the surface. This is to avoid damage to the fan that can occur at high temperatures. This works to a certain degree, and it is therefore important to not exceed the temperature limit.

Safety Instructions

- Place the product on a level and stable surface.
- Check that the fan blades are assembled correctly before use. Tighten using a hex key, if necessary.
- Never place the product on unprotected surfaces, especially when it is hot, it may damage the surface.
- Check that the stove fan handle is in the vertical position before putting it on the stove.
- Store out of the reach of children. Keep the machine under careful supervision when it is used by children, or near children or pets.
- Never leave the product unattended when running.
- The stove fan gets hot when in use – risk of burn injuries. Always use the handle to move the fan, and do not touch the base of the stove fan.
- Never attempt to cool the fan quickly, for example by immersing it in water – this will damage the fan.
- Never insert fingers, pens or other objects in the fan.
- Keep your hair, clothing, jewellery and similar objects away from moving parts.
- Carry the product by the handle.
- Avoid dropping the product and do not expose it to knocks and blows – risk of material damage.
- Use a suitable thermometer to check that the temperature above the stove does not exceed 300°C.
- The warranty does not cover damage caused by overheating.

Intended Use

The stove fan is intended to be used on top of free-standing stoves and cookers with a normal surface temperature of 60–300°C to save fuel and enable the efficient distribution of heat in the room. If the surface temperature exceeds 300

°C, move the fan to a position on the stove or cooker that has a lower temperature, this is to prevent damage to the fan. Use a thermometer designed for high temperatures.

Positioning

Place the fan on top of the stove in such a way that cool air is drawn over the cooling fins. Do not place the fan on the front of the stove or immediately in front of the chimney.

CARE AND CLEANING INSTRUCTIONS:

- Leave to cool down completely. Wipe with a clean dry cloth.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.