

- Radio:** Digital (DAB/DAB+), FM and internet radio (via Wi-Fi).
- Frequencies:** Digital Band III 174–240 MHz, FM 87.5-108 MHz (with RDS).
- Display :** 2.4", 320 x 240, TFT colour display.
- Network:** Wi-Fi: 802.11b, 802.11g and 802.11n supported with WEP and WPA/WPA2 encryption, WPS. 2.412 GHz ~ 2.472 GHz (channels 1 to 13). Maximum power: 16.00 dBm (EIRP) 0.5 MB broadband speed recommended.
Bluetooth, Frequency range: 2402 < 2480 MHz, Maximum power: 3.5 dBm (EIRP)
- Media streaming:** Audio codec's supported include WMA, AAC, MP3, FLAC.
- Media streaming requires UPnP server/DLNA**
- Speaker:** 3.0" full range driver, 4W output
- Input:** connectors 6.5 V DC power adapter socket.
- Output connectors:** 3.5mm stereo phoner out socket
- Mains power adapter:** 6.5 V DC, 3000mA (adapter supplied).
- Power consumption:** Standby mode: <1 W.
- Dimensions:** 195mm wide x 118mm deep x 110mm high
- Weight:** 1.08kg

 
Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new **Internet Radio**.

Contents

GETTING STARTED	3
ACCESSORIES INCLUDED.....	3
GETTING STARTED	4
Adjusting and muting the volume	5
INTERNET LISTENING	5
Listening to internet content.....	6
PODCASTS.....	7
STREAMING BLUETOOTH AUDIO.....	7
LISTENING TO DAB OR FM RADIO	8
CHANGING FM STATIONS.....	9
SETTING ALARMS AND TIMERS	9
SLEEP SETTING.....	10
OPTIONS AND SETTINGS.....	10
NETWORK SETTINGS.....	12
WARNINGS AND SAFETY INSTRUCTIONS:	13
PLUG WIRING (UK & IRELAND).....	14
CARE AND CLEANING INSTRUCTIONS.....	14
DISPOSAL	14


CONTROL LOCATIONS

FRONT PANEL CONTROLS

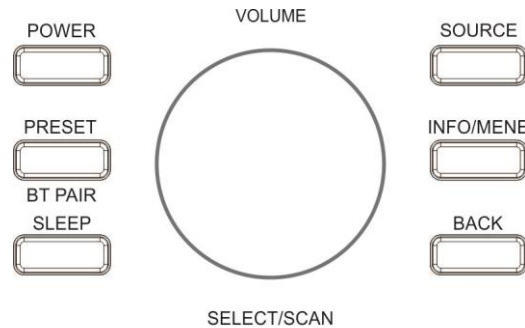

No.	Description	Function
1	Power	Press to switch between on and standby.
2	Source	Press to switch source.
3	Preset	If listening to an internet, digital or FM radio station, press to save the radio station as a preset.
4	Back	Press to return to the previous menu.
5	Info/Menu	Press to access the settings menu. Press to display information about the content that is currently playing
6	Sleep	Press to set the sleep timer
7	Volume/Select	Turn and press to select menu options. If listening to content, turn to adjust the volume

 PRODUCT OVERVIEW

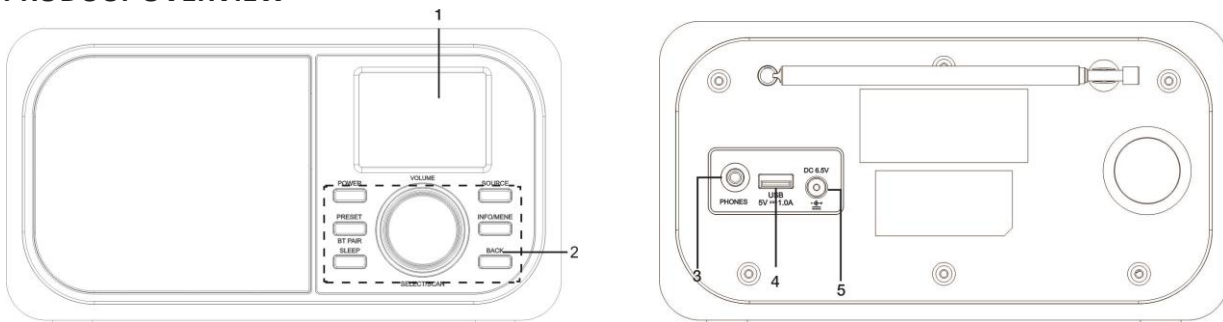

No.	Description	Function
1	2.4" TFT Screen	Colour display
2	Front panel controls	Used to control functions
3	Phone jack	Stereo headphone socket
4	USB jack	USB power connector output
5	Dc in	Dc input connection for supplied mains adaptor

GETTING STARTED

ACCESSORIES INCLUDED

Carefully remove the unit and all accessories from the package.

 
Please verify that you have all the following accessories before recycling the gift box.

- User Manual


GETTING STARTED

Quick set up

1. • Unclip the aerial and fully extend it (steps A and B).
 - Insert the jack of the supplied mains adapter into the socket on the rear of the radio (C).
 - Plug the mains adapter into the mains supply (D).

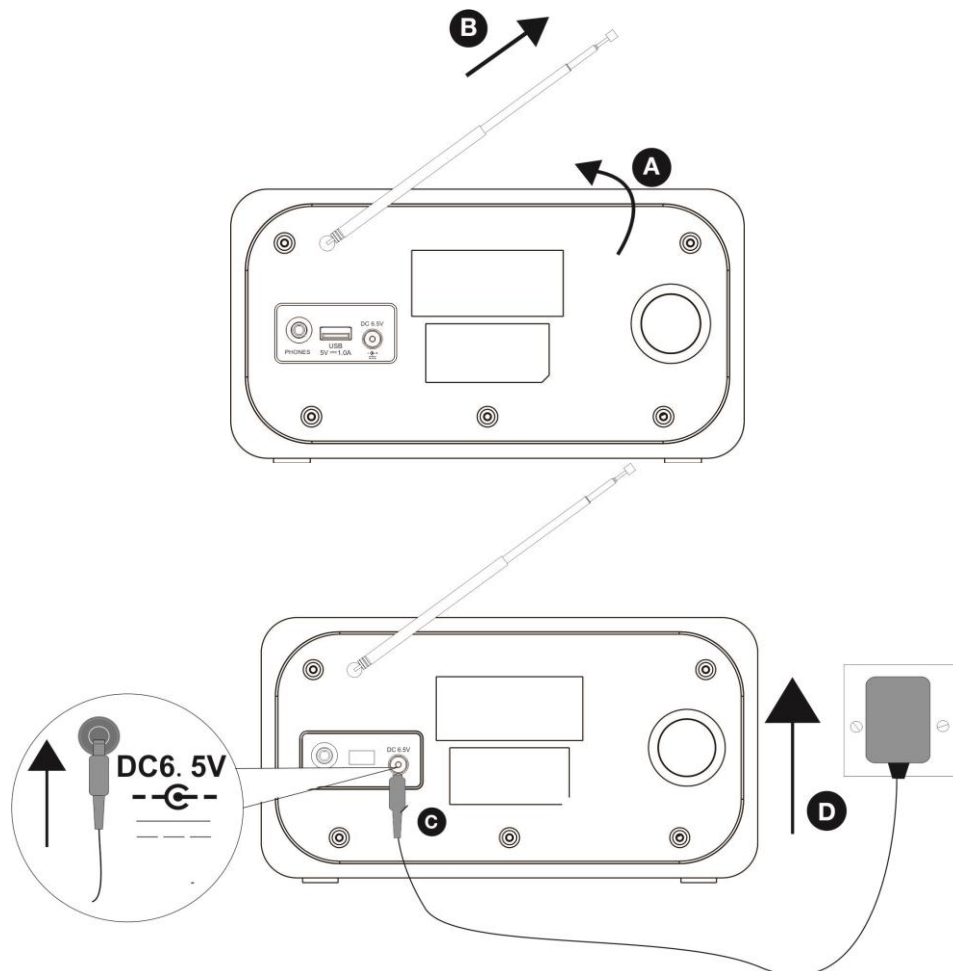

 2. Press the Standby button to power on .

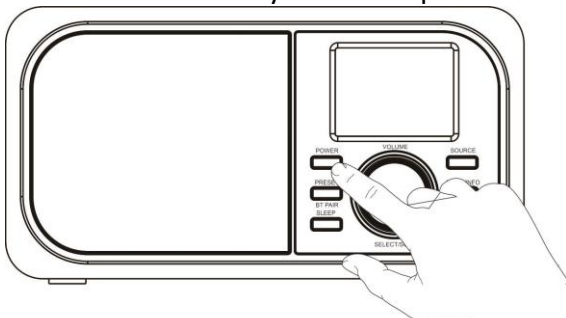


3. The first time you switch on you will be asked if you would like to run the setup wizard, which will help you connect to your Wi-Fi. If you want to run the setup wizard now, turn and press the Select dial to select 'Yes' and follow the prompts on screen. To set up later, turn and press the Select dial to select 'No'.



UNDERSTANDING THE CONTROL FUNCTIONS


ADJUSTING AND MUTING THE VOLUME

 Turn the Volume dial or press the Volume buttons on the remote to increase or decrease the volume.

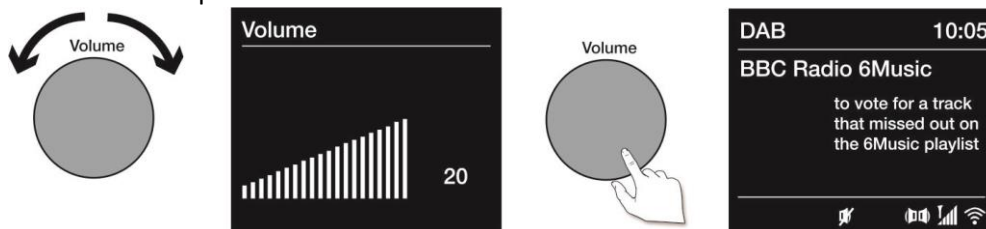

INTERNET LISTENING

 You can connect the Internet Radio to your network to get access to thousands of internet radio stations and podcasts from around the world. Once connected to the internet you can also access additional subscription services such as Spotify, which provides you with instant access to millions of music tracks.

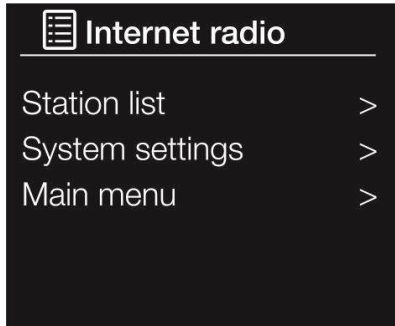LISTENING TO INTERNET CONTENT

Internet radio menu

Thousands of radio stations around the world broadcast online. To listen to an internet radio station or podcast:

1. Press the Source button to display the 'function' menu.
2. Turn and press the Select dial to select 'Internet radio'.
3. Press and hold the Menu button to view the main menu,
4. Turn and press the Select dial to select one of the following options:

Station list: Select this option to see a list of currently available Internet stations or listen to podcasts
(see 'Station list' below for more information).

System settings: Select this option to change settings

Main menu: Select this option to view main menu.

Station list

You can listen to a range of radio stations. Turn and press the Select dial to select one of the following options:

History

Select this option to tune into the last station you were listening to.

Search

Select this option to search for an internet radio station. Turn and press the Select dial to highlight and select characters. Select 'BKSP' to delete a character. Turn and press the Select dial to start searching for an internet station. To cancel your search, turn and press the Select dial to select 'CAN'.

Location

 
Select this option to browse for an internet radio station based in your country. Turn and press the Select dial to select 'All stations' to view all local based stations in alphabetical order. To browse for a station based on genre, turn and press the Select dial to select the genre you want to browse for.

Popular

Select this option to browse for a music radio station.

Discover

Tap Search when browsing the station list to search for stations by **Origin, Genre, Language**, or **show stations** of these. Use the Select dial to set your options and tap Go to see the list of results.

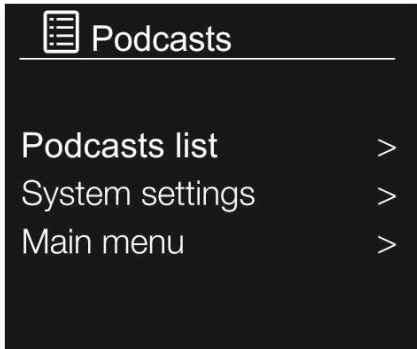PODCASTS

Podcasts menu

Podcasts are pre-recorded audio shows on a wide variety of subjects such as comedy, arts, business, and culture, for you to enjoy anytime.

Thousands of radio stations around the world broadcast online. To listen to a Podcasts station or podcast:

1. Press the Source button to display the 'function' menu.
2. Turn and press the Select dial to select 'Podcasts'.
3. Press and hold the Menu button to view the main menu.
4. Turn and press the Select dial to select one of the following options:

- Podcasts list:** Select this option to see a list of currently available Internet stations or listen to podcasts (see 'Station list' below for more information).
- System settings:** Select this option to change settings
- Main menu:** Select this option to view main menu.

STREAMING BLUETOOTH AUDIO**Streaming using Bluetooth**

You can use Bluetooth to stream any audio from your phone or tablet.

Pairing a mobile device

Before you can stream audio, you will need to pair your phone or tablet.

Note: Bluetooth pairing varies on different mobile devices. See your mobile device manual for specific information.

To pair using Bluetooth:

1. Press the Source button and turn and press the Select dial to select 'Bluetooth'. Display the Bluetooth input display and the Bluetooth icon will start to flash.
Note: If the Bluetooth icon is displayed, another Bluetooth device is already connected. See below for more information.
2. On your mobile device, select the option to add a new Bluetooth device. On some mobile devices you may need to select the search or scan option.
3. Start the pairing process on your mobile device. Do this by selecting 'G040' from the list of available devices that appear on the mobile device's screen. Your mobile device will connect automatically once paired.
4. After selecting your favourite song, press **PLAY/PAUSE ▶/|| Button** on the unit to play or pause the song.

Disconnecting a mobile device

You can only have one mobile device connected to via Bluetooth at any one time. If you want to stream audio from a different mobile device, you will need to disconnect any mobile device that is currently connected via Bluetooth first.

To disconnect a mobile device:

 
 
1. Press and hold the **PAIR Button** for 3 seconds or turn off the Bluetooth function of device currently paired with "G040" then repeat step 3 above.

2. Turn and press the Select dial to select 'Yes' to disconnect your mobile device.

If your mobile device goes out of Bluetooth range (this is usually around 10m (30ft)) the mobile device's Bluetooth connection is disconnected automatically. To manually disconnect your mobile device, you will need to open the Bluetooth settings on your mobile device (see your mobile device's manual for more information).

When you disconnect a mobile device, it will remain in the 'Bluetooth' source. To listen to another source, e.g. digital radio, press the Function button to display the home menu and turn and press the Select dial to choose the source you want to listen to.

LISTENING TO DAB OR FM RADIO

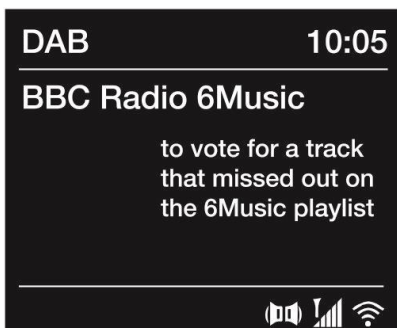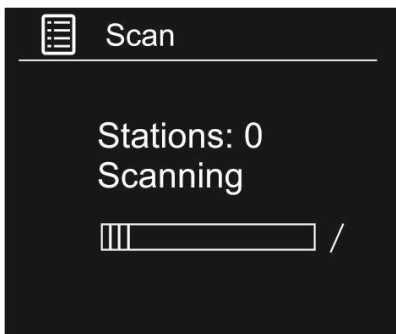

Digital radio screen

CHANGING DAB STATIONS

1. Press the Source button and turn and press the Select dial to select 'DAB radio' from the Home screen. During the scan the display will show "Scanning..." , The first time you select DAB radio, an auto tune will be performed to find all available stations and one station will be tuned into when scanning is finished.

Station List:

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select 'station list'.
3. A list of DAB stations will show on the display

Auto Scan

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select 'Scan'.
3. All the stations that have been found will be stored automatically.

Manual Tuning

As well as the auto tune function, you can manually tune the receiver. This can help you when aligning your aerial or when adding stations that were missed while auto tuning.

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select 'Manual Tuning'.

Prune Invalid

You may remove all unavailable stations from the list.

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select "Prune invalid" .

3. Press Select dial to select YES and press select button to confirm. Or select NO to cancel.

DRC (Dynamic Range Compression)

If you are listening to music with high dynamic range in a noisy environment, you may wish to compress the audio dynamic range

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select ' DRC
3. Press Select dial to select DRC high/low/o- and press ENTER button to confirm the setting.

Recall from Preset

1. BBC Radio 1
2. BBC Radio 2
3. Absolute radio
4. [Not set]
5. [Not set]

Selecting a preset

CHANGING FM STATIONS

Seek tuning

1. Press the Source button and turn and press the Select dial to select 'FM radio' from the Home screen.
2. Press the Select dial to seek to the next FM radio station that has a strong signal.

Manual tuning

1. Press the Source button and turn and press the Select dial to select 'FM radio' from the Home screen.
2. Press and hold the Select button to enter manual tuning mode.
3. Turn the Select dial to step up or down 0.05 MHz

STORING A PRESET

1. Tune to the station you want to store as a preset.
2. Press and hold the Preset button to view the preset list.
3. Turn and press the Select dial to store the radio station to one of the available preset slots.

Listening to a preset

1. Press the Preset button to display the preset list.
2. Turn and press the Select dial to select the preset that you want to listen to.

SETTING ALARMS AND TIMERS

Setting an alarm

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select 'Alarms'
2. Turn and press the Select dial to select 'Alarm 1' or 'Alarm 2'.
3. Turn the Select dial to scroll through each alarm setting. If you want to change a setting, press the Select dial. You can set the following alarm options:

Enable: Turn and press the Select dial to choose when you want the alarm to repeat. The available options are 'Off', 'Daily', 'Once', 'Weekends' or 'Weekdays'.

- Time:** Turn and press the Select dial to adjust the hour of the alarm. Note: If you have set to use the 12 hour time format, make sure that you select the 'AM' or 'PM' version of the hour before pressing the Select dial. Repeat to set the minutes of the alarm.
- Mode:** Turn and press the Select dial to choose between 'Buzzer', 'Internet radio', 'DAB', 'FM'
- Volume:** Turn and press the Select dial to set the volume when the alarm sounds.
- Save:** Turn and press the Select dial to save the alarm.

SLEEP SETTING

This function allows you to program the unit to turn to standby mode by itself after a set period of time.

1. To activate the sleep function, press the SLEEP button repeatedly. The time will change in the below sequence on every press: Sleep off-15mins - 30mins - 45mins - 60mins
2. When your desired sleep time appears in the display, stop pressing the button and the sleep function will be activated in two seconds. Sleep will show on the display. Also the time remaining until switch off is displayed next to the symbol in the display.
3. When the sleep timer counts down to zero, the unit will turn to standby mode. To turn the sleep function off while the sleep timer is still counting down, press the SLEEP button repeatedly to select "SLEEP OFF". Sleep will disappear from the display.
4. Press the SLEEP button once to show the sleep timer status on the display when it is turned on.

OPTIONS AND SETTINGS

Setting the Equalizer setting

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select 'System settings' > 'Equalizer'.
3. Turn and press the Select dial to choose between 'Flat', 'Jazz', 'Rock', 'Movie', 'Classic', 'Pop', 'News' and 'My EQ'. If you want to use a my EQ equalisation setting, select 'my EQ' (see below for more information).

Setting the bass and treble manually

1. Press and hold the Menu button to view the main menu..
2. Turn and press the Select dial to select 'System settings' > 'Equalizer' > 'My EQ setup'.
3. Turn and press the Select dial to choose 'Bass' or 'Treble'.
4. Turn and press the Select dial to set the level from '-14dB' (low) to '+14dB' (high).

Time and date settings

The clock will automatically set itself using your Network, digital or FM radio signal. If the time or date does not update automatically, you can manually set it using this option.

Note: Any time or date updates received by a digital broadcast will override manual settings.

Setting the time and date manually

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select 'System settings' > 'Time/Date'.
3. Turn and press the Select dial to choose 'Set Time/Date'.

4. Turn and press the Select dial to set the day of the month. Repeat to set the month and year.
5. Turn and press the Select dial to set the hour. Repeat to adjust the minutes.

Note: If you have set the time format to 12 hour time format, make sure that you select the 'AM' or

'PM' version of the hour before pressing the Select dial.

Time and date synchronization options

You can synchronize the time and date on the FM, digital radio or network signal.

To specify the clock synchronization options:

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select 'System settings' > 'Time/Date'.
3. Turn and press the Select dial to choose 'Auto update'.
4. Turn and press the Select dial to choose between the 'Update from DAB', 'Update from FM', 'Update from Network' and 'No Update' clock synchronization options.

Changing the time format

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select 'System settings' > 'Time/Date'.
3. Turn and press the Select dial to choose 'Set format'.
4. Turn and press the Select dial to choose between '12' or '24' hours.

Changing the time zone

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select 'System settings' > 'Time/Date'.
3. Turn and press the Select dial to choose 'Set time zone'.
4. Turn and press the Select dial to choose your Time zone

Daylight saving time options

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select 'System settings' > 'Time/Date'.
3. Turn and press the Select dial to choose 'Daylight savings'.
4. Turn and press the Select dial to choose 'Yes' if you want to enable daylight savings time. Turn and press the Select dial to choose 'No' if you want to disable daylight savings time.

Changing your preferred language

You can select the language for menus and options.

1. Press and hold the Menu button to view the main menu..
2. Turn and press the Select dial to choose 'System settings' > 'Language'.
3. Turn and press the Select dial to select a menu language.

Inactive Standby

Use the Inactive Standby to turn off the unit after a certain time in play mode.

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select 'System settings' > 'Inactive Standby'.

3. Turn and press the Select dial to choose 'Inactive Standby'.
4. Turn and press the Select dial to choose between the Off -> 2 hours > 4 hours > 5 hours > 6 hours.

Backlight

You can adjust the duration that the screen is illuminated for and the brightness of the screen when it times out.

To adjust the duration of the screen backlight before dimming:

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to choose 'System settings' > 'Backlight'.
3. Turn and press the Select dial to choose 'Timeout'.
4. Turn and press the Select dial to choose a timeout setting. To specify that the backlight should always remain on, choose 'On'.

On level

1. Press and hold the Menu button to view the main menu
2. Turn and press the Select dial to choose 'System settings' > 'Backlight'.
3. Turn and press the Select dial to choose 'On Level'.
4. Turn and press the Select dial to choose between 'High', 'Medium' or 'Low'.

Dim level

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to choose 'System settings' > 'Backlight'.
3. Turn and press the Select dial to choose 'Dim Level'.
4. Turn and press the Select dial to choose between 'High', 'Medium', 'Low' or 'Off'.

Carrying out a factory reset

Resetting removes all presets, stored stations, alarms and resets all other options to default settings.

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to choose 'System settings' > 'Factory Reset'.
3. Turn and press the Select dial to select 'Yes' to reset factory settings. Select 'No' if you do not want to reset to factory settings.

NETWORK SETTINGS

Connecting to your Wi-Fi using the setup wizard

1. Press and hold the Menu button to view the main menu.
2. Turn and press the Select dial to select 'System settings' > 'Network' > 'Network wizard'.
3. Turn and press the Select dial to select your region. The internet radio will search for available Wi-Fi networks.
4. Turn and press the Select dial to select the name (SSID) of your Wi-Fi network. If your network requires a key, follow steps 5-6.
5. Enter your network key or password by turning and pressing the Select dial to highlight and select characters. If you want to delete the last character, turn the Select dial to select 'BKSP'

and push to confirm.

6. Turn and press the Select dial to select 'OK'. will connect to your network.

Helpful hint: Your Wi-Fi key is case sensitive, make sure to enter it exactly as shown.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- DO NOT PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALL PAPER, ETC.
- ALLOW THE ITEM TO COOL THOROUGHLY BEFORE PUTTING ON OR TAKING OFF PARTS.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSER POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.

- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

DO NOT use if the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Store the appliance in a cool, dry place.
- This product is intended for use in moderate climates.
- Do not use in a wet/moist environment such as in the shower or bathroom if plugged into the mains supply. The power supply shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, placed above it.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

PROTECT YOUR FURNITURE!!

- This system is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture.
- To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

