

**Dimensions:**

Height: 7.5cm

Width: 4.5cm

Power Supply:

3x 1.5V LR41 Batteries (included)

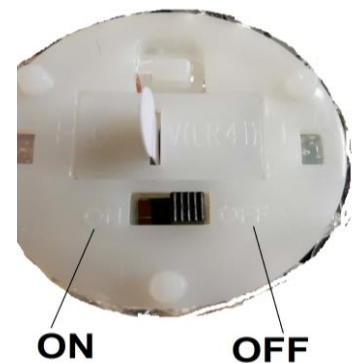
THIS IS NOT A TOY, KEEP AWAY FROM CHILDREN, CONTAINS GLASS AND SMALL PARTS.

BATTERY COMPARTMENT

- Turn the angel upside down to access the battery compartment.
- Remove pull tab to activate battery.
- Slide switch to the on position to switch on.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

**CARE AND CLEANING INSTRUCTIONS**

- Handle with care, do not drop as glass will break.
- Always switch off when not in use.
- Wipe surfaces with a soft dry cloth.
- Store in a cool, dry place.
- Keep away from direct sunlight

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

