Please read and retain these instructions for future reference

v001: 11/06/19



Warning:
DO NOT FILL WITH WATER.
LED WIRES MUST NOT BE REMOVED FROM INSIDE THE VASE.

Requires 2x AA batteries (not included)

Install Batteries

- Remove battery compartment lid.
- Clean the battery contacts and also those of the device prior to battery installation.
- Install 2x AA batteries as shown on battery diagram in battery compartment.
- Return battery compartment lid to original position.

For initial use:

• Move On/Off switch to operate light string.

CARE AND CLEANING INSTRUCTIONS

- Always switch off before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.



Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400* Fax: 01279 756 595 www.coopersofstortford.co.uk

