 
Coin Sorter and Counter

G076



Please read and retain these instructions for future reference


v001: 10/06/19



Dimensions:

Height: 21cm Width: 15.5cm Depth: 15.5cm

Power Supply: 2 x AAA batteries (not included)

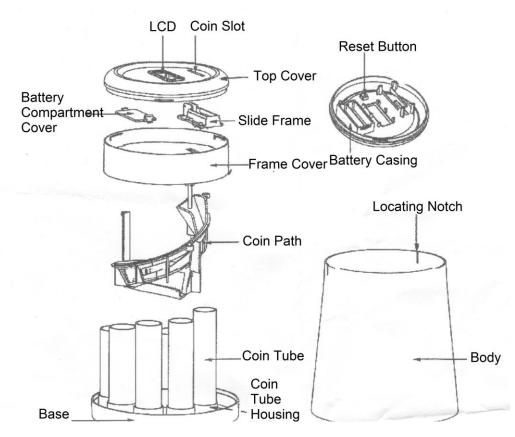

Features

- 1. The inductor inside the coin slot mechanism automatically and accurately identifies coin values.
- 2. It displays individual coin values first, then adds up the total stored amount and displays it on the LCD.
- 3. Coins are sorted to the different coin tubes by their diameter.
- 4. After the batteries are removed, the LCD screen still displays for at least 8 seconds.
- 5. British coins identified: 1p, 2p, 5p, 10p, 20p, 50p, £1, £2.
- 6. Press the reset button to reset the total amount to zero.

Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400* Fax: 01279 756 595 www.coopersofstortford.co.uk



*Calls cost 7 pence per minute plus your telephone company's network access charge

Coin Sorter and Counter

G076

v001: 10/06/19

Please read and retain these instructions for future reference

To install or replace the batteries

- 1. Remove the top cover from the Coin Sorter and Counter.
- 2. Remove the screw in the battery cover.
- 3. Insert 2x AAA batteries in the battery compartment, observe polarity as indicated (+/-).
- 4. Secure the battery cover with the screw.

To operate

- 1. Insert coins into the coin slot; the inserted coins will descend into the correct tube automatically.
- 2. To empty the coin sorter:
 - a) Adjust the top cover of the coin sorter to match the coins.
 - b) Remove the coins from the coin tubes.

IMPORTANT

- The coin tubes and their housing are marked with the numbers 1 to 8. You can see this on the base of the coin tubes and the coin tube housings. Please insert the coin tubes into their corresponding housings.
- A black arrow sticker near the battery compartment indicates the locating notch on the body and it should click into place. If the black arrow and the locating notch are not aligned and it does not click into place then the coins will not fall into the correct coin tubes.
- Do not overfill the coin tubes.

The two AAA batteries required to operate the coin sorter are not included.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols (+/-).
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.



Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400* Fax: 01279 756 595 www.coopersofstortford.co.uk



*Calls cost 7 pence per minute plus your telephone company's network access charge