
Please read and retain these instructions for future reference

v002: 13/05/20

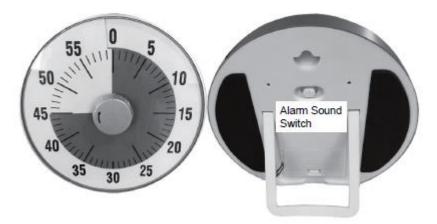

60 minute timer with magnetic back

Dimensions: 19cm x19cm x4cm

Battery operated 2x AA batteries required (not included)

- 1. Please remove the insulation sheet before use. (see image where circled)
- 2. Turn the dial clockwise to set the time required.
- 3. The alarm will sound when the time is up.
- 4. To stop the alarm, just turn clockwise a few degrees and then back to 0 quickly.
- 5. There is a slide switch to choose the alarm sound mute, normal or loud alarm
- 6. Do not turn counter-clockwise directly from 0 to avoid damaging the timer.



CARE AND CLEANING INSTRUCTIONS:

• Wipe with a clean dry cloth.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Keep batteries away from children and pets.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.



Please read and retain these instructions for future reference

v002: 13/05/20

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.



• Plastics, polybags – Contains the following recyclable plastic.

| Code & Symbol | LDPE | OTHER |
|-----------------|---|---------------------------------------|
| Type of Plastic | Low Density Polyethylene | ABS (Casing) |
| Commonly used | Shopping bags, bread bags, squeezy | CD's, crisp packets, various flexible |
| for | bottles, stretch/pallet wrap, bubble | packaging, baby bottles, sunglass |
| | wrap, multi-pack can holders | lenses |
| Notes | Usually recyclable supermarket deposit | |
| | points. Check other plastic films as any | Not often or widely recycled |
| | non-polythene film e.g. cling film, crisp | |
| | packets film lids | |

 At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

