



**Dimensions:**  
 Ø 26.5cm x10.5cm

**Poached egg cooking instructions:**

1. Lift out egg compartments.
2. Break an egg into each compartment using the integrated egg cracker (middle).
3. Pour cold/hot water into the base.
4. Cover with lid and microwave on full power for 3 minutes (if using cold water) or 1-2 minutes (if using hot water)
5. Lift and drain each egg using its individual colander.

**Omelette cooking instructions:**

1. Put the egg(s) into the bottom of the poacher pan.
2. Cover with the lid and place in the microwave oven.
3. Cook for 1-3 minutes on full power.




**Cleaning:**

- Microwave safe
- Dishwasher safe

**DISPOSAL**

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – the handle is made from the following recyclable plastic.
- At the end of the product’s lifespan please check with your local council authorised household waste recycling centre for disposal.



Code & Symbol	Type of Plastic	Commonly used for	Notes
	Polypropylene	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)