

**Power Details:**

Shaver: 2.4VDC; 3Watts, IPX6

Power Supply:

Input: 220-240VAC; 50/60Hz; IP20

Output: 3VDC; 150mA

Battery:

2x1.2VDC AA Ni.MH rechargeable batteries

Accessories:

Charger, brush, USB charger cable (80cm)

INSTRUCTIONS FOR USE:**Notes**

Before using the product, please carefully read the operating instructions and keep them for future reference.

1. Only use the charger provided.
2. The charger can transform 240V-230V ac to a safe low voltage of 5Vdc.
3. The charger includes a transformer which should not be removed and replaced with another plug.
4. If the charger is damaged, it should be replaced with an identical one.
5. The temperature charging and storing the product should not be below 5 °C or exceed 35 °C.
6. Keep the charger in a cool dry environment and away from moisture.
7. Unplug the charger before cleaning the shaver with running water. When using hot water check the water is not too hot.
8. The shaver head is waterproof grade IPX6 and can be washed. The body should not be soaked in water.
9. Always dry thoroughly if washed in water before use.
10. Switch off the shaver before charging. When charging the charge indicator light will be on.
11. Always ensure to put the protective cover on the shaver head to protect the shaver head.

COOPERS
OF STORTFORD

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.

Please check with your telephone supplier.

 
 
Charge:

Make sure the product is switched off before charging.

The charge lasts about 5 hours.

Do not leave the product connected to the power supply for more than 24 hours.

1. Insert the product charger into the shaver (Fig 1).
2. Plug in the charger.
3. The charge indicator lights up (Fig. 2).
4. After the shaver is fully charged, unplug the charger and also pull out the plug.

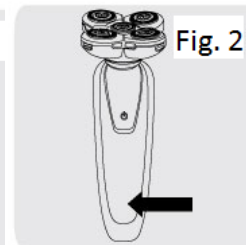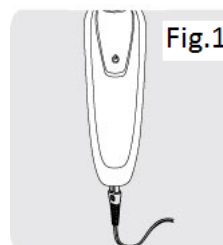

USB Charge:

1. The shaver can also be charged with the USB cable supplied (Fig. 3)
2. Insert the USB charger into the shaver (Fig. 4)
3. Plug USB plug into a computer, portable power bank.
4. The charge indicator lights up (Fig. 2)
5. After the shaver is fully charged, unplug the USB charger and also pull out the USB plug.



Attaching shaver head/nose trimmer/hair clipper/face cleansing brush

There are 2 grooves on the shaver itself.

All the attachments have 1 or 2 outer grooves. Line up grooves on the shaver and the outer groove(s) and push together. To take the attachments off, pull apart. (Note: it is a tight fit)



Hair Clipper





Clip attachments for 7, 5 or 3mm in place as shown. Then line up grooves on hair clipper and main unit and push into place.

How to use the product

Shaving:


1. Press the ON/OFF button to start the shaver.
2. Move the shaver head quickly on the skin in straight lines and circles (Fig 3).
3. Cover the shaver's head with the protective cover after each use to avoid damage (Fig 4).
4. The shaver can run for ten days after a full charge.

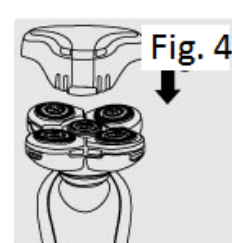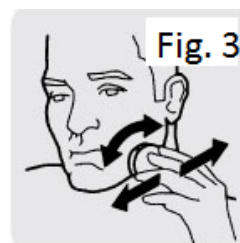

Trimming:

Used for trimming temple and moustache.

1. Push the side face upwards to open the hair trimmer. Press the ON/OFF button to start the hair trimmer (Fig 5).

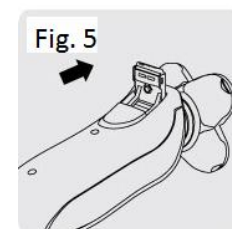


Cleaning & Maintenance:

To ensure best performance, the shaver must be cleaned regularly. It is recommended to replace the blades once a year.

The easiest and most hygienic way to clean the shaver head part and the hair chamber with water each time after using it.

When using remember to check the water is not too hot to avoid scalding your hands.

1. Turn off the shaver.
2. Pull away the four shaver heads to the side one by one and then rotate and pull out the middle head in the direction of the arrow indicated on it (Fig 6).
3. Hold the five shaver head part and the hair chamber under hot running water for cleaning (Fig 7).

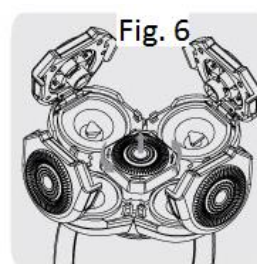


cleaned regularly.

product is to
water each time

hot to avoid

Make sure the inside of the shaver head parts and the hair chamber have been cleaned thoroughly.


4. Wash the product's surface (Fig 8).

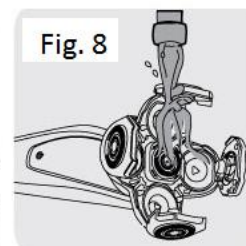

5. Close the shaver head part and shake off excess water.

Do not wipe the shaver head part with a towel or paper tissues, which may cause damages to the shaver head.

6. Open the shaver head part again and leave it open to let the product dry completely (Fig 9).

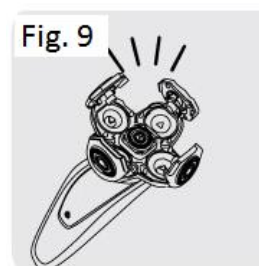



You can also use the brush included to clean the hair chamber.

Do not wet the brush.

Trimmer:

Clean the trimmer each time after use.

1. Switch off the shaver, then unplug the charger and also unplug the product's plug from the shaver.
2. Clean the trimmer with the brush included (Fig 11).
3. Lubricate the trimmer teeth with a drop of sewing machine oil once every six months (Fig 10).

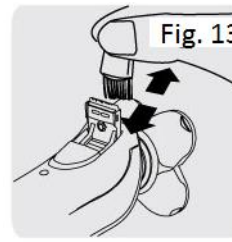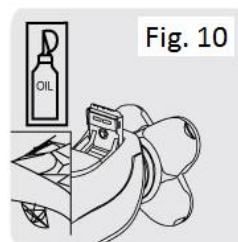

Cleaning the nose trimmer and face cleansing brush

Nose trimmer

Pull apart the 2 sections and the nose trimmer comes apart for cleaning.



Face cleansing brush

The 2 sections can be pulled apart.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.

DO NOT use If the socket outlets in your home or office are not suitable for this product's mains adaptor/ charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

**COOPERS
OF STORTFORD**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.

Please check with your telephone supplier.

DO NOT use with any other mains transformer/charger than the one that is supplied with this product.


BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 PVC
Type of Plastic	Polyvinyl Chloride
Commonly used for	Pipes, construction material, flooring, windows, guttering, blister packs
Notes	Not usually collected from household recycling bins, Sometimes recycled at local waste management centres.

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

UK
CA**COOPERS**
OF STORTFORD

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.

Please check with your telephone supplier.