

Easy to Read Radio Control Clock



Features:

- ✦ Hour, minute display
- ✦ Calendar (date, week, year: 2004-2053)
- ✦ 12/24hr display
- ✦ Weekday in 8 languages: English, German, Italian, French, Dutch, Spanish, Svenska, Polski.
- ✦ Dual alarms & Snooze
- ✦ Thermometer in °C/°F
- ✦ Radio controlled (MSF)

| SPECIFICATION | |
|---------------------|--------------------------------|
| Working Temperature | +14 to +122 °F (-10 to +50 °C) |
| Temperature Range: | +14 to +122 °F (-10 to +50 °C) |
| Power Supply: | DC 3V, 2 * AA, IEC: LR6 / R6P |
| Accuracy | ±1°C; ±2 sec/Day |

Overview of the Press Button

| Keys | Main function |
|-------------|--|
| RCC | Turn on the wave receiving OR turn off the wave mode |
| MODE | 1) At time mode to view the alarm 1 and alarm 2; 2) Hold for 3 sec. to enter into setting |
| UP | 1) Turn on/off alarm1 and alarm 2; 2) At setting mode, upwards setting value |
| DOWN C/F | 1) At time mode, toggle the temperature display °C/°F 2) At setting mode, downwards setting value |
| SNOOZE | To turn on snooze function |



A. Battery Settings

 
Insert 2 x AAA batteries (not included) into the battery compartment.

With a "BI BI BI" sound, the screen will be displaying time with 12hr display mode. Temperature will be present value in °F.

B. WAVE :

Once batteries are inserted and the wave tower appears and is flashing in 1Hz in the display, the product has entered the Wave receiving mode automatically.

Follow below steps:

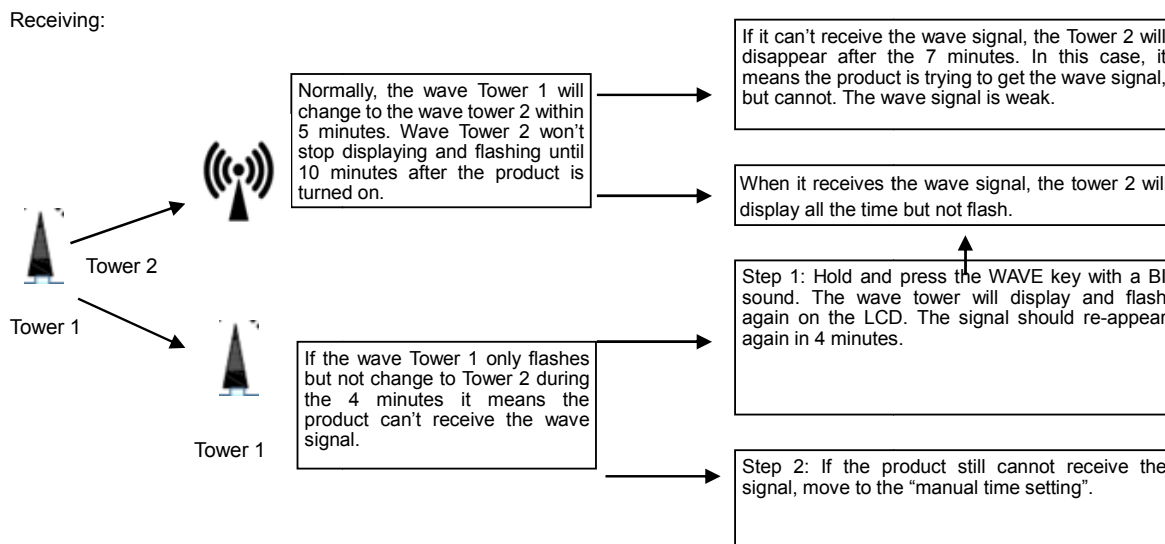

1. Automatic Receiving RCC Function: The clock would enter RCC Automatic Receiving whether or not RCC signal is received at AM. 1:00, 2:00, 3:00, 4: 00, 5:00 every day.
2. Press WAVE key to exit the receiving mode.
3. During the receiving mode, there is no function for the buttons.
4. During the receiving mode, when alarm on, it would exit the receiving mode and enter into alarm function.
5. When receiving the DST signal, the DST would be set automatically and if receive the DST, the icon **S** will display on.
6. When WAVE icon displays on the screen, press WAVE key, then WAVE icon would be turned off.

Once the MSF is received, the display would be in Germany language.

The default time is 0:00(time zone:00, time format 24hr.), default date:01 January 2016, default week is Freitag (Germany)

Then you can long press the MODE to change the language.

If the wave tower does not appear in the display or can't receive the wave, please go to the manual setting.

C. Languages setting(After the receiving mode is finished)

1. Hold the MODE key steadily for around 3 seconds, the "DEUTSCH" would flashing in 1HZ. Press UP/DOWN key to adjust.
Re: 8 languages of weekday: DEUTSCH > ITALIANO > ESPRNOL > NEDERLANDS > SVENSHR > POLSKI > ENGLISH > FRANCAIS >

D. Manual Time setting

2. Press MODE key again " 12hr" would flashing, press UP/DOWN to switch 12hr/24hr, then press the MODE key again, then the screen will display " RCC ON", press UP or DOWN to turn on/off RCC. Press MODE again to go to the next display, When screen appear "00", you can adjust the time zone through UP key or DOWN key. Finally enter into time setting mode and use UP/DOWN to choose the value. The order of setting is hour, minute, year, month, date and day of week. If you change to another time zone, the time would change automatic.


 




| Weekday | | | | | | | |
|-----------|----------|------------|-----------|-----------|------------|----------|--------------|
| English | Francais | Deutsch | Italiano | Espanol | Nederlands | Svenska | polski |
| SUNDAY | DIMANCHE | SONNTAG | DOMENICA | DOMINGO | ZONDAG | SÖNDAG | NIEDZIELA |
| MONDAY | LUNDI | MONTAG | LUNEDI | LUNES | MAANDAG | MÅNDAG | PONIEDZIALEK |
| TUESDAY | MARDI | DIENSTAG | MARTEDI | MARTES | DINSDAG | TISDAG | WTOREK |
| WEDNESDAY | MERCREDI | MITTWOCH | MERCOLEDI | MIÉRCOLES | WOENSDAG | ONSDAG | SROOA |
| THURSDAY | JEUDI | DONNERSTAG | GIOVEDI | JUEVES | DONDERDAG | TORS DAG | CZWARTEK |







| | | | | | | | |
|--------------|-----------|-----------|-----------|------------|------------|-----------|-------------|
| FRIDAY | VENDREDI | FREITAG | VENERDI | VIERNES | VRIJDAG | FREDAG | PIATEK |
| SATURDAY | SAMEDI | SAMSTAG | SABATO | SÚBADO | ZATERDAG | LÖRDAG | SOBOTA |
| Month | | | | | | | |
| English | Francais | Deutsch | Italiano | Espanol | Nederlands | Svenska | polski |
| JANUARY | JANVIER | JANUAR | GENNAIO | ENERO | JANUARI | JANUARI | STYCZEN |
| FEBRUARY | FEVRIER | FEBRUAR | FEBBRAIO | FEBRERO | FEBRUARI | FEBRUARI | LUTY |
| MARCH | MARS | MAERZ | MARZO | MARZO | MAART | MARS | MARZEC |
| APRIL | AVRIL | APRIL | APRILE | ABRIL | APRIL | APRIL | KWIECIEN |
| MAY | MAI | MAI | MAGGIO | MAYO | MEI | MAJ | MAJ |
| JUNE | JUIN | JUNI | GIUGNO | JUNIO | JUNI | JUNI | CZERWIEC |
| JULY | JUILLET | JULI | LUGLIO | JULIO | JULI | JULI | LIPIEC |
| AUGUST | AOUT | AUGUST | AGOSTO | AGOSTO | AUGUSTUS | AUGUSTI | SIERPIEN |
| SEPTEMBER | SEPTEMBRE | SEPTEMBER | SETTEMBRE | SEPTIEMBRE | SEPTEMBER | SEPTEMBER | WRZESIEN |
| OCTOBER | OCTOBRE | OKTOBER | OTTOBRE | OCTUBRE | OKTOBER | OKTOBER | PAZDZIERNIK |
| NOVEMBER | NOVEMBRE | NOVEMBER | NOVEMBRE | NOVIEMBRE | NOVEMBER | NOVEMBER | LISTOPAD |
| DECEMBER | DECEMBRE | DEZEMBER | DICEMBRE | DICIEMBRE | DECEMBER | DECEMBER | GRUDZIEN |

3. The week will be automatically set.
4. If you do not touch any key for 20 seconds, it'll be back to the time mode.

D. Alarm setting:

1. There are two alarms for any time: Alarm 1 and Alarm 2 shows with icon  and icon  .
 - 1.1 At time mode, press MODE key one time to swift to Alarm 1 mode.
 - 1.2 Hold and press MODE key steadily for around 3 seconds to enter setting mode. Press UP/ DOWN key to adjust.
 - 1.3 The setting sequence is hour, minute. Then press ALARM key to confirm.
 - 1.4 In time mode, Press UP to turn on/off alarm 1/2.
 - 1.5 When alarm on, if you don't press any key to stop the alarm, it lasts for 1 minute. Or you can press any key to stop the alarm.
 - 1.4.1 0-10 seconds with BI only;
 - 1.4.2 11-20 seconds with BIBI sound;
 - 1.4.3 21-30 seconds with BIBIBIBI sound,
 - 1.4.4 after 31 seconds with continuing BI sound.
2. **To turn on/off the alarm:**
 - 2.1 At normal mode, press UP key one time to turn on the alarm 1, the icon  would appear.
 - 2.2 At normal mode, press UP key two time to turn on the alarm 2. the icon  would appear
 - 2.3 Press the UP key three time the icon  and  are all disappear. All the alarm off.

E. Snooze



1. When alarm on, the icon  or  would flashing, press SNOOZE to go into the snooze mode. Icon  would appear in the display.
3. When snooze on the  would flashing .

F. Temperature

At normal mode, press DOWN key to change temperature display unit in °F or °C.

G. Safety lock

Long press both the "UP" key and "DOWN" key to turn up/off safety lock.

The  would appear in the display. Under the  circumstances, the display was fixed, press the key do not have any effect on the functions.

General Safety Instructions

Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

- In order to prevent the risk of damage to the unit, you should not expose the unit to rain or moisture. Consequently, do not use the device in the immediate vicinity of water – for example near a bath tub, a swimming pool or in a damp cellar.
- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use.
- When using external mains supply, pay attention to the correct polarity and voltage. Always place the batteries in the correct direction.
- Assemble the device in such a way that the available ventilation openings are not covered.
- Never open the housing of the device. Incorrect repairs can constitute a considerable risk for the user. Should the unit become damaged, do not operate the unit, but have it repaired by an expert.
- If the unit is not in use for long periods of time, remove the batteries.

Children and Frail Individuals



- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
- This device is not intended to be used by individuals (including children) who have restricted physical, sensory or mental abilities and/or insufficient knowledge and/or experience, unless they are supervised by an individual who is responsible for their safety or have received instructions on how to use the device.
- Children should be supervised at all times in order to ensure that they do not play with the device.

Special Safety Instructions

- Do not use the device in locations that are extremely hot, cold, dusty or moist.
- Ensure that the device is sufficiently ventilated!
- Do not cover any ventilation slits with objects such as magazines, tablecloths, curtains etc.
- Keep the device away from vases, baths, wash basins etc. If liquid enters the device this may cause serious damage.

Battery Warning:

Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (including hydride)

Do not mix old and new batteries

Exhausted batteries are to be removed

The supply terminals are not to be short-circuited

Only batteries of the same or equivalent type as recommended are to be used

Batteries are to be inserted with the correct polarity

Battery Disposal:

The wheellie bin symbol indicates the product and batteries must not be disposed of in the domestic waste as they can contain substances that are damaging to the environment. Please use designated collection points or recycling facilities when disposing of the item or batteries. Batteries should be removed from the product. Contact your local waste disposal agency or your retailer for further information

Batch No: 4568068

Product Code: M192129

Made in China for S&S Enterprises Ltd, 26 Perivale Park Middlesex UB6

