

## Dimensions:

165cm x65cm x112cm

- RECLINE IN SUPER RELAXATION WITH OUR DELUXE RECLINING GARDEN CHAIR
- THANKS TO THE UNIQUE DESIGN OF THE CHAIR YOU FEEL LIKE YOU ARE FLOATING ON AIR
- THE BUILT IN SUN SHADE PROTECTS YOU FROM STRONG GLARES MAKING IT THE PERFECT CHAIR TO HAVE A LITTLE AFTERNOON SIESTA IN YOUR GARDEN!
- REMOVABLE HEADREST
- FOLDS AWAY FLAT FOR EASY STORAGE
- STRONG STEEL FRAME
- UV RESISTANT AND WEATHER RESISTANT
- Max. weight load: 110kg

Please ensure the chair is fully unlocked before unfolding. See Image 2 for details.

- Carefully unwrap the chair.
- Do not climb or stand on any part of this chair or allow children to stand or play on or around the chair.
- Always use the chair on level ground ensuring the legs remain in contact with the ground at all times.
- Under each armrest there is a locking lever which moves up and down in a slight arched motion to lock and unlock the position of the back and foot rest. See images below for correct use.
- Please ensure the chair is fully open and ensure that the locking devices are correctly positioned before use.
- **Please note: The sunshade does not provide complete protection from the sun/UV light and is not 100% water resistant.**
- Care must be taken when opening or closing the chair to avoid entrapment of fingers or clothing.
- Periodically check the tightness of the locking devices. Do not modify the chair in any way.

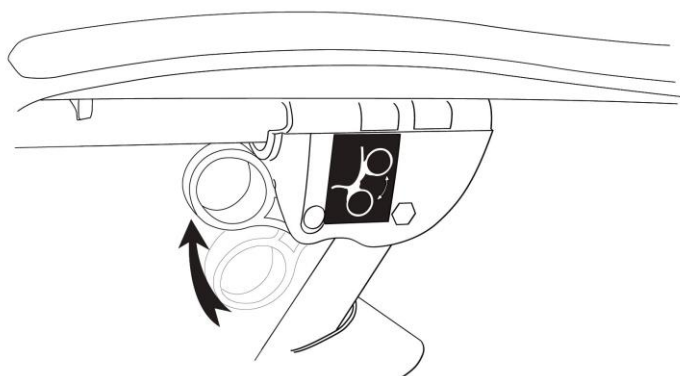 


Image 1

To alter the position of the backrest when sitting down, firstly ensure that both adjuster levers are in the unlocked position – see image 2 then place your feet on the base bar, slowly exert pressure on the back of the chair whilst pushing out with your feet. When the required position is achieved, re-lock the adjuster levers.

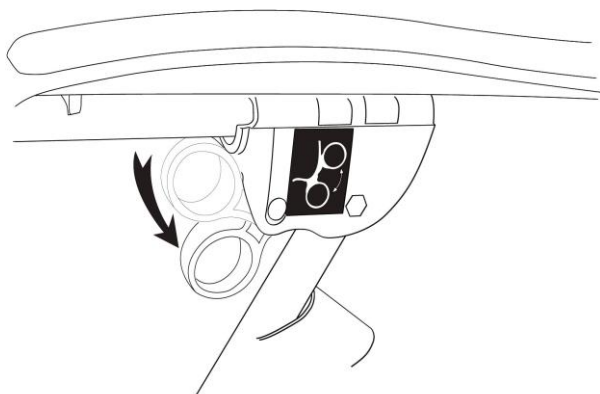 


Image 2

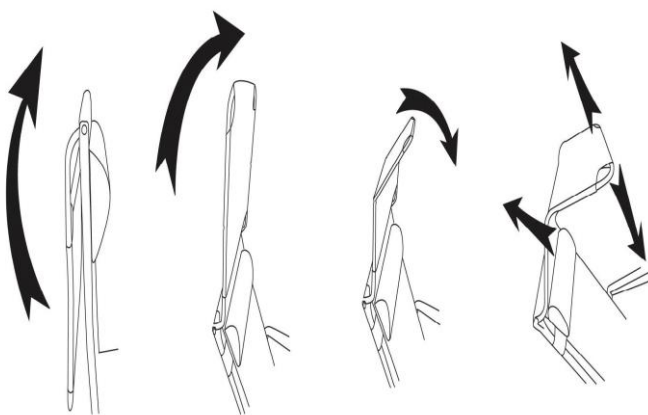 


Image 3

To use the sun shade, first pull the shade from behind the back of the chair. Once the shade is forward it can be angled in the centre to give the shade required.

To fold away, first straighten the shade and then fold it back behind the chair, taking care not to trap your fingers or clothing.

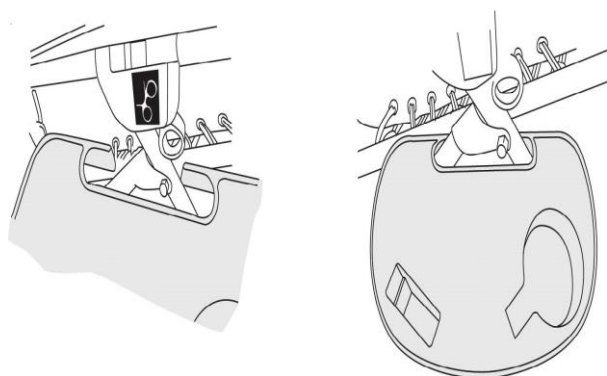 


Image 4

The drinks tray can be fitted either side of the chair. To fit hook over the legs of the chair as shown in image, then push downwards until the tray is secure.

Ensure the tray is removed before attempting to fold the chair away.

Failure to do so could result in damage to the chair.

Please take care when using the chair near barbecues, lanterns or heaters.

## Care and Maintenance

- Always place on a smooth and flat surface.
- Protect from adverse weather such as rain and snow.
- The fabric can be cleaned with a damp sponge or for stubborn stains a suitable fabric cleaner. Do not use bleach, acid, solvents or abrasive cleaners on this chair. For mildew or mould stains use of a proprietary

brand of cleaner or Anti Bacterial Spray is recommended. As with any cleaning product, spot test a small area first and follow the manufacturer's instructions.

- Any accumulation of dirt or leaves should be removed using a soft brush and soapy water, then rinsed clean.
- To minimise corrosion, wash the metal parts on a regular basis and then use car polish or a similar product to provide extra protection. If the painted finish of the frame should become chipped or scratched exposing bare metal, remove any surface rust and treat with a suitable touch-up paint.
- If the lounge is not to be used for longer periods during the winter, store inside or under a suitable cover. Before putting into storage, ensure the lounge is clean and dry.

## DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.