

Rechargeable Power Washer

Item codes: M800

Instructions for Use

v001: 02/04/24

Please read and retain these instructions for future reference



Power Details: Voltage	20V CDA1167 20V, 2Ah Lithium-Ion (Included)
Max. pressure water supply	5 bar
Max. water temperature	40 °C
Max. flow rate	3.3 l/min
Max. pressure	24 bar
Weight	1.5 kg
Lpa (sound pressure)	71.9dB(A) K=3dB(A)
Lwa (sound power)	82.9dB(A) K=3dB(A) Vibration 1.075 m/s ² , K=1.5 m/s ²

Use: This item requires two hands to use safely.

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Rechargeable Power Washer.

RECOMMENDED FOR PERSONS OVER 18 YEARS OF AGE.

ALWAYS USE HEAD, EYE AND EAR PROTECTION EQUIPMENT AND SAFETY SHOES AND HAND GLOVES

User instructions:

DESCRIPTION

1. Pressure washer
2. Lance extension
3. Adjustable spray nozzle
4. Water inlet
5. Hose connector
6. Hose connector ring
7. Suction hose
8. Floating ball
9. Suction filter
10. Switch lever
11. Release button
12. Battery
13. Battery unlock button
14. Battery indicator LED
15. Charger
16. Brush
17. Bottle



Fig. 1

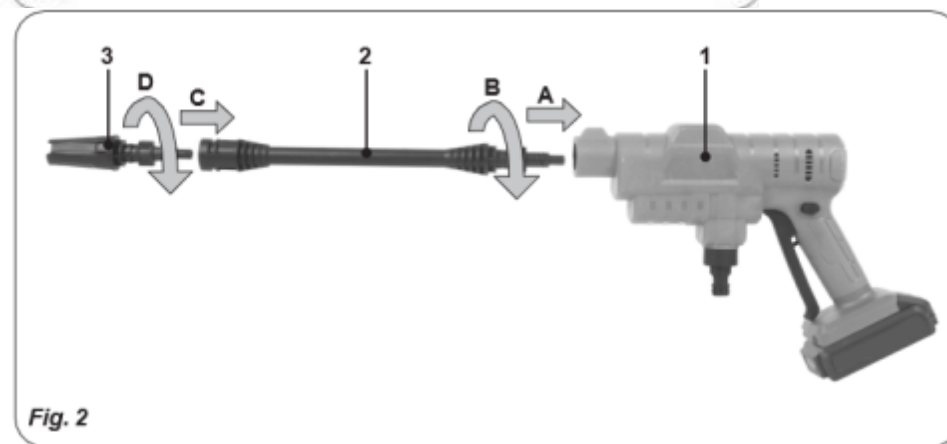 


Fig. 2



Fig. 3A

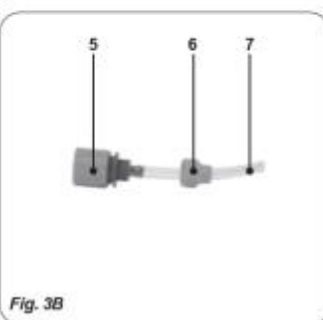 


Fig. 3B

 
 
 
 
 
 
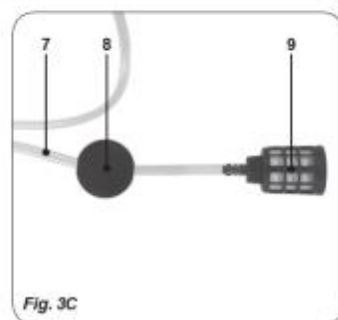 



Fig. 3C

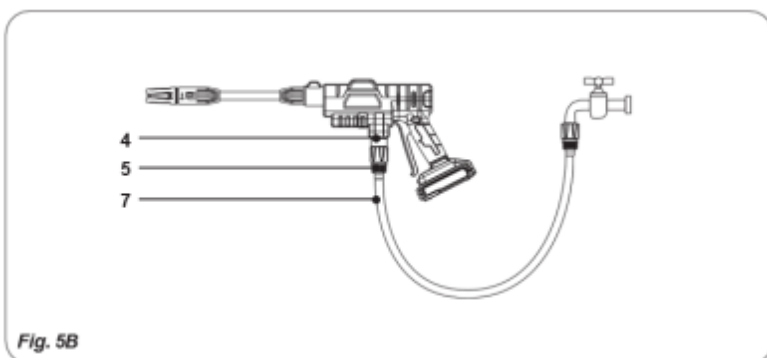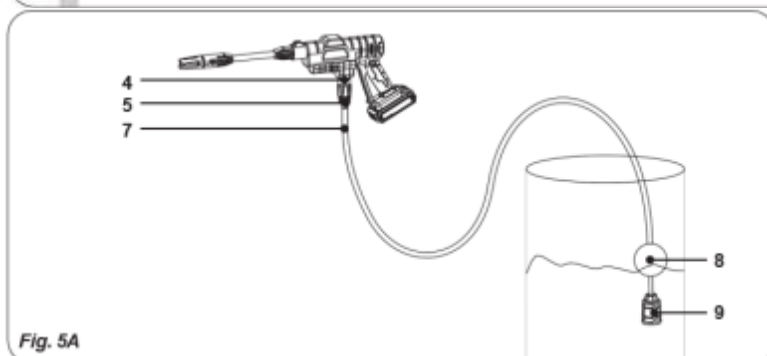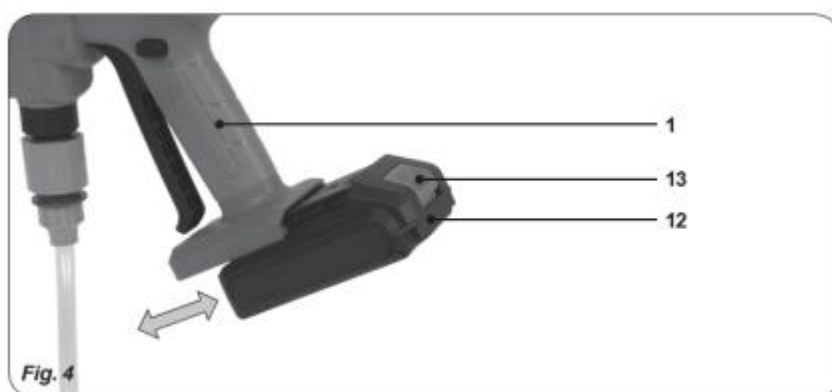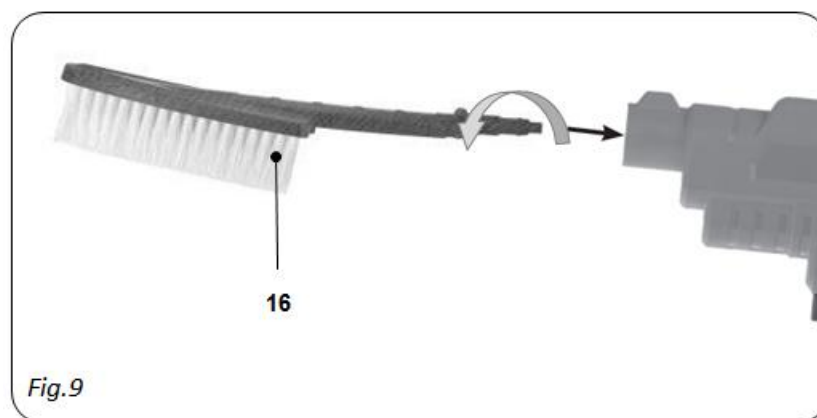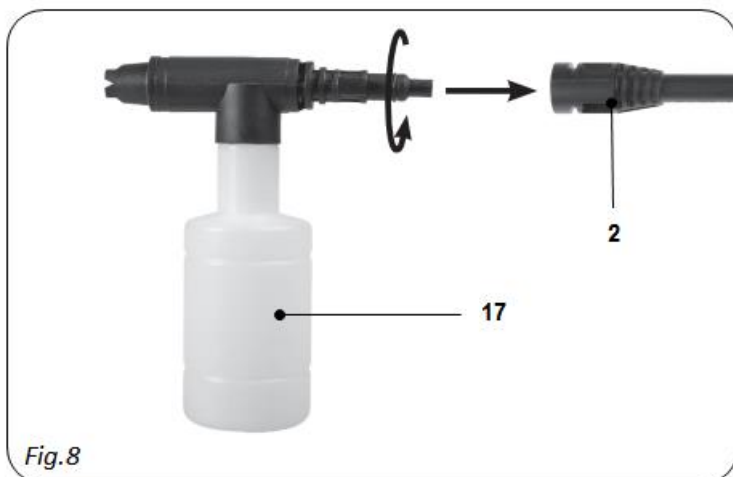

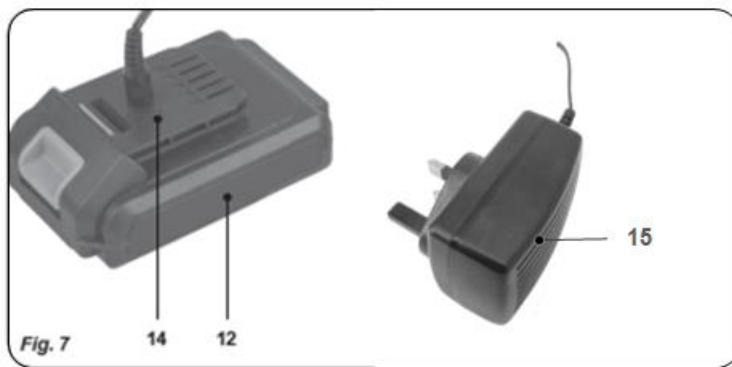

Assembly:

 The battery must be charged before first use.

Removing the battery from the machine (Fig. 4)

- Push the battery unlock buttons (13) and pull the battery out of the machine.

Inserting the battery into the machine (Fig. 4)



Ensure that the exterior of the battery is clean and dry before connecting to the charger or machine.

- Insert the battery (12) into the base of the machine.
- Push the battery further forward until it clicks into place.

Charging the battery (with the charger) (Fig. 7)

- Plug the charger plug into an electrical outlet and wait for a while. The LED indicator on the battery (14) will lighten up and show the charging status.
- Plug the output of the charger into the round socket of the battery.

LED indicator (14) (Fig. 7)

The battery has 1 LED indicator (14) which indicates the status of the charging process:

LED Charger status

Red Battery charging in progress.

Green Battery charging finished, battery fully charged.

Before assembly, always switch off the machine and remove the battery from the machine.

Assembly adjustable spray nozzle and lance extension Fig. 2

1. Assembly the lance extension (2) on to the pressure washer (1).
2. Assembly the adjustable spray nozzle (3) on to the lance extension (2).

Assembly the suction hose

Fig. 3A/B/C

1. Remove the hose connector ring (6) from the hose connector (5).
2. Place the ring (6) over the one end of the hose (7).
3. Push the same end of the hose into the hose connector, as shown on Fig. 3B.
4. Turn the ring back on the hose connector and tightly secure by hand.
5. Place the other end of the hose (7) through the hole in the floating ball (8).
6. Push the same end of the hose on to the suction filter (9), as shown on Fig. 3C.

Inserting the battery into the machine Fig. 4

Ensure that the exterior of the battery is clean and dry before connecting to the charger or machine.

1. Insert the battery (12) into the base of the machine as shown in Fig. 4.
2. Push the battery further forward until it clicks into place.

Removing the battery from the machine

Fig. 4

1. Push the battery unlock button (13).
2. Pull the battery out of the machine like shown in Fig. 4.

OPERATION:

Connecting the water supply



This unit is to be used with a cold-water source only!



The pressure washer must only be used with clean water; use of unfiltered water or corrosive chemicals will damage the pressure washer.



Ensure that you have a suitable water supply to feed the pressure washer. Check that all connections are tight and there are no leaks in the hose.

You can enable the water supply via a water tank (or pond, rain barrel, etc.) or via a water tap.

Water tank (water suction function) Fig. 5A



Clean the suction filter (9) at regular intervals and check it for damage. Otherwise, its function can be impaired.

When water is supplied via a water tank, pond, rain barrel, etc. , the assembled suction hose (7) must be used. Only clear fresh water may be used.

1. Connect the assembled suction hose (7) to the pressure washer, place the hose connector (5) on to the water inlet (4).
2. Lower the suction filter (9) into water. Ensure there are no obstructions around the suction filter (9). Move the float ball (8) in such a way that the suction filter (9) does not touch the water bottom. The suction filter (9) must be placed at least 20 cm from the water bottom to prevent the suction of sand.
3. Check that the hose has no kinks in it.

4. The pressure washer is now ready for use.

Water tap Fig. 5B

Removing the battery from the machine Fig. 4



Use the device on a domestic water connection with maximum pressure of 5 bar.



The supply tap should be fully open.

1. Ensure that you have a suitable water supply to feed the pressure washer.
2. Connect the water supply hose (not included) to the water inlet (4).
3. Connect the water supply hose (not included) to the water supply.
4. Turn on water and check that the hose has no kinks in it.
5. The pressure washer is now ready for use.

Switching the pressure washer on/off Fig. 1



The motor of this pressure washer will NOT run. It will only operate when the trigger is squeezed.



Before starting make sure the pressure washer is connected to a water source. Dry running will damage the pressure washer!

- To start the pressure washer, press and hold the release button (11) and press the switch lever (10).
- To stop the pressure washer, release the switch lever (10).

Adjusting the nozzle (3) Fig. 6

Water may be sprayed out of the nozzle (3) either linearly or in a fan shape. Turn on the pressure first, and then adjust the nozzle (3).

Finish operation Fig. 1

1. After use (when water is supplied via a water tank, pond, rain barrel, etc.) allow the pressure washer to run using clean water for 2 - 3 minutes in order to remove residues and particles that may have accumulated in the machine and hose. This is not necessary when used with clean tap water.
2. To stop the pressure washer, release the switch lever (10).
3. Turn off the water supply.

4. Remove the battery from the machine.
5. Press and hold the release button (11) and press the switch lever (10) to depressurize and drain the system.
6. Disconnect the hose from the pressure washer.
7. Wipe all surfaces of the unit and accessories with a damp clean cloth.



WARNING! PLEASE READ THESE OPERATING INSTRUCTIONS CAREFULLY AND OBSERVE THE NOTES GIVEN. USE THESE OPERATING INSTRUCTIONS TO FAMILIARISE YOURSELF WITH THE POLE HEDGE TRIMMER, ITS PROPER USE AND THE NOTES ON SAFETY.










FOR SAFETY REASONS, CHILDREN UNDER THE AGE OF 18 AND PEOPLE NOT FAMILIAR WITH THESE OPERATING INSTRUCTIONS MUST NOT USE THIS POLE HEDGE TRIMMER. PERSONS WITH REDUCED PHYSICAL OR MENTAL ABILITIES MAY USE THE POLE HEDGE TRIMMER ONLY IF THEY ARE SUPERVISED OR INSTRUCTED BY A RESPONSIBLE PERSON.



IF NOT USED PROPERLY THIS PRODUCT CAN BE DANGEROUS. THE WARNINGS AND SAFETY INSTRUCTIONS MUST BE FOLLOWED TO ENSURE REASONABLE SAFETY AND EFFICIENCY IN USING THIS PRODUCT.

Explanation of Warnings and Symbols on your product.

	<p>WARNING!</p>
	<p>Read the user instructions carefully to make sure you understand all the controls and what they do.</p>

	Remove plug from the mains immediately if the cable is damaged or cut.
	Do not expose to rain. Do not leave the product outdoors while it is raining.
	The use of eye protection is recommended.
	Head protection must be worn.
	Keep away from electric cables, whether overhead, on the ground or along outdoor buildings.

1) Work area safety

Only use the product in the manner and for the functions described in these instructions. The operator or user is responsible for accidents or hazards occurring to other people or their property.

- Keep work area clean and well lit. Cluttered or dark areas invite accidents. Remove all stones, leaves, twigs, branches, debris from the work area before using this tool.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2) Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.

- a) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- b) Do not use / expose power tools in bad weather or wet conditions. especially when there is a risk of lightning. This decreases the risk of being struck by lightning.
- c) Do not use electrical garden equipment, hedge trimmers, loppers near any electrical power lines or overhead cables as risk of serious injury or electric shock.
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep the cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.
- g) Before use, examine cable for damage, replace it if there are signs of damage or ageing.
- h) Do not use the product if the electric cables are damaged or worn.
- i) Immediately disconnect from the mains electricity supply if the cable is cut, or the insulation is damaged. Do not touch the electric cable until the electrical supply has been disconnected.
- j) Your electric cable must be untangled, tangled cables can overheat and reduce the efficiency of your product.
- k) Always switch off at the mains before disconnecting any plug, cable connector or extension cable.
- l) Switch off, remove plug from mains and examine electric supply cable for damage or ageing before winding cable for storage. Do not repair a damaged cable, replace it with a new one.
Always wind cable carefully, avoiding kinking.
- m) Use only on AC mains supply voltage shown on the product rating label.

3) Personal safety

- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Prevent unintentional starting. Ensure the switch is in the off position before connecting to power source and /or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or power tools that have the switch on invites accidents.
- d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tools may result in personal injury.
- e) Always wear suitable clothing, gloves, and stout shoes.
- f) Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving.
- g) parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- h) Thoroughly inspect the area where the product is to be used and remove all wires and other foreign objects.
- i) All adjustments (turning the blade unit, inclining the blade head) have to be made with the sheath/protect cover in place, and the Hedge Trimmer must not rest on the blade in the process.

- j) Before using the machine and after any impact, check for signs of wear or damage and repair.
- k) as necessary.
- l) Before using any electrical garden equipment and pole hedge trimmer, always make sure that all guards and/or hand guards provided are fitted.
- m) Never attempt to use an incomplete product or one with an unauthorised modification.
- n) Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- o) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.
- p) Do not use on or near ladders.
- q) If the garden product hits an object then stop immediately, switch off and disconnect from the mains supply. Check the product for any damage and repair before continuing use.

4) Power tool use and care

- a) Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- b) Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c) Disconnect the plug from the power source and /or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d) Store idle power tools out of the reach of children and do not allow anyone unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- e) Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f) Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

5. Service

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

- Keep all parts of the body away from any blades / cutter blades. Do not remove cut material or hold material to be cut when blades are moving. Make sure the switch is off when clearing jammed material. A moment of inattention while operating the hedge trimmer may result in serious personal injury.
- Carry the pole hedge trimmer by the handle with the cutter blade stopped. When transporting or storing the pole hedge trimmer always fit the cutting device cover. Proper handling of the pole hedge trimmer will reduce possible personal injury from the cutter blades.

- Hold the power tool by insulated gripping surfaces only, because the cutter blade may contact hidden wiring or its own cord. Cutter blades contacting a “live” wire may make exposed metal parts of the power tool “live” and could give the operator an electric shock.
- Keep cable away from the cutting area. During operation the cable may be hidden in shrubs and can be accidentally cut by the blade.

Additional Safety Recommendations

Personal safety

- ALWAYS WEAR SUITABLE CLOTHING, GLOVES, AND STOUT SHOES.
- THOROUGHLY INSPECT THE AREA WHERE THE PRODUCT IS TO BE USED AND REMOVE ALL WIRES AND OTHER FOREIGN OBJECTS.
- BEFORE USING THE MACHINE AND AFTER ANY IMPACT, CHECK FOR SIGNS OF WEAR OR DAMAGE AND REPAIR AS NECESSARY.
- BEFORE USING THE POLE HEDGE TRIMMER, ALWAYS MAKE SURE THAT THE HAND GUARD PROVIDED IS FITTED.
- NEVER ATTEMPT TO USE AN INCOMPLETE PRODUCT OR ONE WITH AN UNAUTHORISED MODIFICATION.
- ALWAYS USE AN RCD WHEN USING ANY ELECTRICAL GARDEN EQUIPMENT.

Power tool use and care

- Know how to stop the product quickly in an emergency.
- Never hold the product by the guard/protect cover.
- Do not use ladders whilst operating the product.

1) Work area safety

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

2) Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

3) Personal safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or

medication. A moment of inattention while operating power tools may result in serious personal injury.

- b. Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- c. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and /or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or power tools that have the switch on invites accidents.
- d. Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tools may result in personal injury.
- e. Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- f. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- g. If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.

4) Power tool use and care

- a. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- b. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c. Disconnect the plug from the power source and /or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d. Store idle power tools out of the reach of children and do not allow anyone unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- e. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- g. Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

5. Service

Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

Only use the following batteries of the FX-POWER 20V battery platform. Using any other batteries could cause serious injury or damage the tool.

Additional Safety Recommendations

Work area safety

Only use the product in the manner and for the functions described in these instructions.

The operator or user is responsible for accidents or hazards occurring to other people or their property.

MAINTENANCE AND STORAGE



RISK OF INJURY !

Do not touch blades.

When finishing or interrupting work, push up protection cover.

Keep all nuts, bolts and screws secure to be sure the pole hedge trimmer is in safe working condition.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC OUTDOOR USE ONLY.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS GARDEN EQUIPMENT IS RECOMMENDED FOR USE BY PERSONS OVER 18 YEARS OF AGE.
- KEEP AWAY FROM CHILDREN
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT SUPPLIED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE OR STORE NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- ALLOW THE ITEM TO COOL THOROUGHLY BEFORE PUTTING ON OR TAKING OFF ACCESSORIES.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER.

- WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ALWAYS USE AN RCD DEVICE WHEN CONNECTING ELECTRICAL GARDEN EQUIPMENT TO THE MAINS SUPPLY.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.








BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 PETE	 HDPE	 PVC	 LDPE	 PP	 PS	 OTHER
Type of Plastic	Polyethylene Terephthalate	High-Density Polyethylene	Polyvinyl Chloride	Low Density Polyethylene	Polypropylene	Polystyrene	Please Specify (includes ABS, Nylon)

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
-

UK & EU DECLARATION OF CONFORMITY

We, Coopers of Stortford hereby declare under our sole responsibility, that the product named below has been designed to comply with all relevant sections of the below referenced standards and directives: -

Description & item Number: _____M800_____

Model No: _____WSR01_____

Serial Numbers: _____

Conforms to the following UK Regulations and EU Directives: -

- Supply of Machinery (Safety) Regulations 2008 and Machinery Directive 2006/42/EC.
- The Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001 & amendments and Noise Directive 2000/14/EC & 2005/88/EC.
- The Electrical Equipment (Safety) Regulations 2016 & Low Voltage Directive 2014/35/EU.
- Electromagnetic Compatibility Regulations 2016 & EMC Directive 2014/30/EU.
- Restriction of Hazardous Substances (RoHS) Regulations & RoHS Directive 2011/65/EU & 2015/863/EU.

The conformity assessment procedure followed was in accordance with the following Standards:-

Machinery Directive & LVD Directive Standards: _____

EMC Standards: ____EN 55014 – 1:2017/A11:2020, EN55014 -2: 2015, EN IEC 55014-1:2021, EN IEC 55014-2:2021_____

RoHS Standards: __RoHS Directive 2011/65/EU and its amendment Directive (EU) 2015/863_____

Measured Sound Pressure Level: LPA = __71.9__dB(A)

Measured Sound Power Level: LWA = _82.9__BA)

Vibration Level: __1.075__ m/s²

The Test reports for this item are available from:

Coopers of Stortford, 11 Bridge Street, Bishop's Stortford, Hertfordshire, CM23 2JU

Distributed by / Verteilt durch / Distribué par.

UK:

The Enterprise Department Ltd.

11 Bridge Street, Bishops Stortford

Herts, UK, CM23 2JU

Tel: 0330 331 0300

NI/EU:

D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

DE/FR/CZ/SK:

hergestellt für 3Pagen

Sankt-Joeris-Strasse 16-28 52477 Alsdorf

Tel: +49(0)2404/980-204

