

Power Washer Spray Set

G352 v03: 12/12/22

Please read and retain these instructions for future reference



Advisory: We recommend this is used by persons over 18 years.

Technical Data

Battery charger

Input: 100-240Va.c; 50-60Hz, 0.4A

Output Volt: 16.8V, 0.6A, 10.0W

Battery: Li-ion 2000mAh

Input voltage: 16.8V DC.

Output Speed: 4700(r/min)

Max Water Flow: 3-5L/min

Max Water Pressure: 1.0Mpa

30min runtime on full charge

3 hours charging time

Only use with the battery and charger provided.



5m PVC Hose



Battery Charger



Spray gun



Watering can



Brush

Product Safety

General safety warning



Warning! Please read all warnings and instructions. Failure to comply with the following warnings and instructions can result in electric shock, fire and serious injury.

Keep all instructions

Safety Warning

1. Do not spray water to device containing electrical components.
2. Only use accessories supplied or approved by the manufacturer.
3. Disconnect the battery pack after use or before maintenance or cleaning.
4. Keep the machine away from children.
5. Stop using the machine when it accidentally falls to the ground and causes visible damage or leakage.
6. The machine should not be left unattended when connecting the battery pack

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595





www.coopersofstortford.co.uk


EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

Symbols

	Warnings.
	Read the instructions.
	Do not throw into water.
	Do not throw into fire.

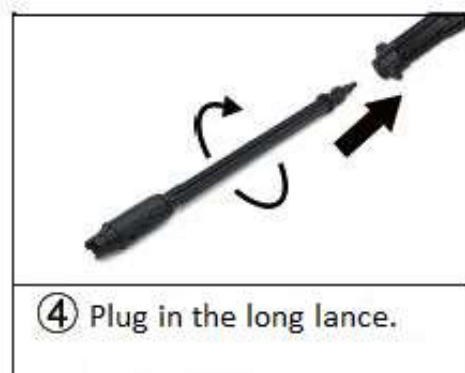



Safety Warning

Battery Pack Instruction

1. Do not disassemble, open or shred battery pack
2. Do not expose battery pack to heat, flame, or sunshine.
3. Do not short-circuit.
4. Do not take battery cell out of battery pack.
5. No mechanical impact to battery pack.
6. If the battery leaks, do not expose the leaked liquid directly to the eyes or skin. If a leak occurs, rinse with plenty of water and seek medical help.
7. Do not use non-device-specific charger.
8. Mind the POSTIVE(+) and NEGATIVE(-) signs.
9. Do not use non-device-specific battery pack.
10. Keep battery pack away from children.
11. Medical help should be obtained if battery pack is swallowed.
12. Choose the right battery pack for the product.
13. Keep battery clean and dry.
14. If there is dust on the interface of the battery pack, wipe it with a clean, dry cloth.
15. Charge before use; Use correct charger
16. Do not charge the battery pack if washer is not to be used for a long time.
17. After long-term storage, the battery pack should be subjected to multiple charge and discharge cycles to achieve optimal performance.
18. Use within temperature range of between 20-25 °C for optimum performance.
19. Keep the manual for future reference.
20. The battery pack is for intended use only.
21. Remove the battery when not in use.
22. Correctly handle battery pack.
23. Do not expose battery to water or rain.
24. After using the product, unplug it and then clean it. If the product is used to clean a swimming pool please ensure there is no water in the pool.

User Instructions

Preparation

- Install the battery pack (see Image 1).

Installation

- Install long lance (see image 4)

Tip: After the long lance is installed, shake it left and right to check if it is firmly fixed.

Connect PVC hose

Tip: After connecting PVC hose, gently pull the hose to check if it is firmly connected to the machine. If the hose does not fall off, the installation is in place.

Connect your own hose

1. Remove the hose connector
2. Connect the machine to the hose with right connector

It will work with any hose so long as you use the right sized female connector.

The Power Washer Spray Set will work with any hose with the right size female connector. It comes with a male connector and short hose to use when taking water out of buckets, water butts. When using with your main garden hose a female connector that is no bigger than 35mm external diameter is required in order for it to fit the male connector it comes with.

Operation

Select water pressure

Start up

Note: When using for the first time, the air in the water pipe must be drained. Put the washer at about waist height (<1.5 m) and then select high voltage mode. Water enters the water pipe and sprays from the washing machine then starts cleaning. The entire process takes about 20 seconds.

Choose water spray effect

Note: The water effect should be selected according to the working condition. Rotating nozzle, 0-40° for cleaning and watering.

Warning: Do not rotate nozzle after turning on the machine

Cleaning

Warning: Do not use turbid, muddy or corrosive water sources (including window cleaning fluid, plant nutrients, fertilizer etc.) Note: Please rinse with water after using the sea water.

Optional accessory use

This product comes with some accessories. Do not use the machine when there is no accessory attached.

1. Watering can

To provide deep cleaning cleaner; connect to the machine

2. Brush Attachment

To wash irregularities of a car's outline.

Maintenance and Repair

Please remove the battery pack from the machine before maintenance and repair.

Maintenance of water pipe filter maintenance and repair.

First take the filter cover down, then remove dirt on it, rinse all parts with clean water and finally put the cover back.

Cleaning and Preservation

Please wipe the machine with a soft brush or a clean cloth. Do not use water, solvent or polish. Keep the machine in a safe and dry place, away from children. Do not place other items on machine.




Troubleshooting

Problem	Cause	Solution
When the machine starts working but cannot absorb water or there is not enough pressure.	The machine is too high from the water surface.	Please lower the machine within 1.5m from the water surface.
	The water pipe filter is blocked.	Please remove the water hose filter and clean the debris with water.
	The hose connector of the machine is loose.	Please tighten the hose connector with a wrench.
	Pumps, water hose or other spare parts are frozen.	Please use after thawing.
	The water pipe is bent.	Please straighten the pipe.
After the machine is turned off, there is water flowing out.	After the machine is turned off, there is still water in the pump.	Please drain the water completely before storing it.
The watering can cannot spray the cleaner.	The watering can is blocked.	Wash it with water.
The machine cannot be started.	1. The battery is not correctly installed. 2. The battery is exhausted. 3. The battery is broken.	1. Install the battery again. 2. Replace or charge the battery. 3. Replace the battery.
The pressure is not stable.	1. There is air inside the machine. 2. The machine is in low pressure mode.	1. Check the machine and water pipe whether they are connected or not.
The machine stops automatically.	1. The battery is exhausted. 2. The nozzle of the long lance is blocked.	1. Replace the battery. 2. Check the long lance.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 PP	 PS	 OTHER
Type of Plastic	Polypropylene	Polystyrene	ABS, TPE, PA6
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	Insulation boxes, water cups, protective packaging inserts, take away containers	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)	Not commonly recycled but waste management centres will recycle it.	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU
 Tel: 0844 4824400*, Fax: 01279 756595
www.coopersofstortford.co.uk
 EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France
 Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access. Please check with your telephone supplier.