



Warning:

DO NOT FILL WITH WATER.

Batteries required: 2x AA batteries
(not included)

Instructions

- Remove the string lights from the vase and remove the cover from the battery case. Insert 2x AA batteries (not included), observing correct polarity, as shown inside the battery case.
- Replace cover and turn the switch on the battery compartment. Then return the string lights to the vase.

CARE AND CLEANING INSTRUCTIONS

- Always switch off before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

