

Oakley Extra Wide High Back G476 Instructions for Use

Please read and retain these instructions for future reference

v001: 27/03/20



Dimensions
112cm x65cm x40cm

Composition
PVC coated polyester fabric provides tough and durable finish

- HIGH BACK
- 3 RECLINING POSITIONS
- HEADREST
- SEAT HEIGHT 338CM
- **SUPPORTS UP TO 100KG**
- WEIGHT 4.5KG
- LIGHTWEIGHT AND FOLDS FLAT SO ITS EASY TO TAKE WITH YOU WHEREEVER YOU GO, OR YOU CAN SIMPLY RELAX SITTING ON IT IN YOUR GARDEN
- BREATHABLE MESH FABRIC
- STABLE DESIGN

Max. load: 100kg

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Advisory Notes

- This furniture comes fully assembled. Before using please ensure all components and fixings are secure.
- Setting up this furniture should be carried out by a competent adult.
- Take care when opening and closing the chair and keep hands away from the folding mechanism to prevent entrapment.
- Care should be exercised so as not to trap finger in any of the hinged parts of this furniture.
- Pregnant women should take extra care when using this product.
- Always use on firm level ground, ensuring that all legs remain in contact with the ground.
- Never stand on the fabric.
- Maximum weight: 100kg
- Do not let children play with this furniture.
- Periodic structural checks of this furniture should be undertaken, do not use if you have any doubts about its fitness for purpose.
- This furniture should be stored under cover during prolonged spells of adverse weather (wet or cold) and also during the winter (ideally in a garden shed or garage). Always clean and dry thoroughly before storage.

Care of outdoor leisure furniture

Please follow the care instructions in order to maintain the appearance and life of this outdoor furniture.

Use warm soapy water and a damp cloth to clean the frame and the fabric slings of the furniture. Pad out excess moisture with a dry towel after rinsing and allow to air dry.

Never use any solvents, scourers, abrasives, bleach, acids, strong detergents, aggressive chemical cleaners or solvent type cleaning solution on the furniture.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

*Calls cost 7 pence per minute plus your telephone company's network access charge

Oakley Extra Wide High Back G476 Instructions for Use

Please read and retain these instructions for future reference

v001: 27/03/20


Do not use high-pressure washer for cleaning of this product.

To help maintain its appearance and to avoid scratches, never place sharp pointed objects directly onto the surface of the furniture.

This furniture has been treated during production with a high quality coating; it is important that deep scratches or scores are avoided, as these could break through to the bare metal and lead to an onset of rust.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.
- This product contains the following plastic:

Code & Symbol	
Type of Plastic	Polypropylene
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

*Calls cost 7 pence per minute plus your telephone company's network access charge