

**Dimensions:**

25cm x8.4cm x8.4cm

Weight: 130g

Composition:

Plastic

- YOU CAN FINALLY ENJOY EATING OUTSIDE THIS SUMMER WITHOUT BEING BOTHERED BY TIRESOME FLIES
- THESE FLY REPELLER FANS WORKS THANKS TO THE HOLOGRAPHIC FLEXIBLE BLADES THAT SPIN AROUND. THE DOTS ON THEM AFFECT THE FLY'S VISION AND KEEPS THEM AWAY
- IT'S THE EFFECTIVE AND CHEMICAL FREE WAY TO REPEL FLIES
- ALSO GREAT FOR KITCHENS
- USES 2XAA BATTERIES (NOT INCLUDED)

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

- This product is a safe and environmentally friendly device for keeping flies off food.
- The soft flexible blades rotate quietly and they are completely safe to touch. Reach over for food and the blades will stop.
- The on and off switch is located at the bottom of the device along with a battery compartment. Requires 2 x AA batteries (not included).
- **This is not a toy. Whilst blades are soft and will not hurt hands. It is advisable to avoid facial contact especially the eyes. Keep away from children.**

CARE AND CLEANING INSTRUCTIONS:


- Always switch off and remove batteries when not in use.
- Do NOT immerse in water.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Store the item in a cool, dry place.
- Wipe with a clean dry cloth.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- Plastics – This is made from the following plastic.

Code & Symbol	 OTHER
Type of Plastic	ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

