Please read and retain these instructions for future reference

v001: 11/03/20



Dimensions

10cm (H) x13cm (diameter)

Material

PS Plastic
3 stainless steel blades

Caution:

Blades are very sharp! Please use with caution! Keep blades away from body.

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Function:

Use to chop fruits and vegetables for salads, meat, ice cube etc. Blades are on 3 levels for more even chopping.

Caution:

Do not chop too great quantities at a time. Chop up in batches.

Steps:

- Insert the blades at the centre piece in the transparent bowl.
- Remove skin and bone from meat, remove fish bones. Cut food into strips or slices. Add ingredients to
 the clear bowl, being careful not to overfill. Some ingredients may need to be cut to fit in the bowl. Fill
 up to the top blade.
- Place the cover on the clear bowl and turn clockwise until it stops. Place one hand on top of the lid and the other hand in the handle. Pull the handle out and back in until your food is cut into desired pieces.
 DO NOT PULL THE ROPE OUT FURTHER THAN 35cm.
- Food that contains little water or are frozen are harder to be minced. In order to mince easily, an appropriate amount of water or oil may be added.
- Store left-over perishable food in the refrigerator.

CARE AND CLEANING INSTRUCTIONS:

• Dishwasher safe

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.





- This is made from the following plastic PS (Polystyrene)
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

