

# Copper King Microwave Cooker 6588 Instructions for Use

Please read and retain these instructions for future reference

v001: 28/10/20



Product size: 25 x4cm

- COOKS CHIPS, BACON AND MORE QUICKER THAN IN THE OVEN
- COPPER PARTICLES AID FASTER COOKING
- SILICONE BOTTOM TO PREVENT BURNING

## WARNING

The Microwave Cooker has a diameter of 25cm (10") and requires a clearance of 1.5cm (3/4") to all side of the microwave oven. It must not be used in an oven smaller than this as there is a possibility of arcing which could damage the oven using the microwave cooker – always make sure that it is situated in the middle of the microwave oven.

Please ensure there are no scratches or damages to the cooking surface prior to each use.

## INSTRUCTIONS FOR USE:

Use your Microwave Cooker to cook chips, pizzas, bacon, steaks, chicken pieces, fish and omelettes. For best results the Microwave Cooker should be placed in microwave on full power for 1-1 1/2 min before use. Please note timings will vary according to your microwave and quantity of food to be cooked. We suggest that you experiment to get the best timings for your microwave oven. Ideal for combining microwave to oven or grill, allowing you to crisp and brown not only the bottom but the top of the food also.

## METHOD

Spread the required amount of frozen oven chips evenly over the preheated base of the Microwave Cooker. Microwave on full power for 6 min, turning the chips halfway through, using plastic utensils only. Stand for 1 min before serving. For thick oven chips, increase the cooking time.

## NOTE

The Microwave Cooker may be washed in a dishwasher or by hand. Always wash thoroughly before use. Never use scouring pads or brushes which may damage the non-stick coating. Always use oven gloves when removing the Microwave Chip Maker from the Microwave, Oven or Grill as the surface reaches a temperature of around 200C very quickly and always place on a mat to protect work surfaces

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
www.coopersofstortford.co.uk

**Coopers**  
OF STORTFORD

\*Calls cost 7 pence per minute plus your telephone company's network access charge

# Copper King Microwave Cooker 6588 Instructions for Use


Please read and retain these instructions for future reference

v001: 28/10/20

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	Silicone
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglasses lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

\*Calls cost 7 pence per minute plus your telephone company's network access charge

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

**Coopers**  
OF STORTFORD