




## THUNDERBELL / SUPERBELL ALARM CLOCK SERIES

### OPERATING INSTRUCTIONS

Congratulations on your purchase of this quality loud bell alarm clock.  
Please read these instructions carefully and keep in a safe place for future reference.

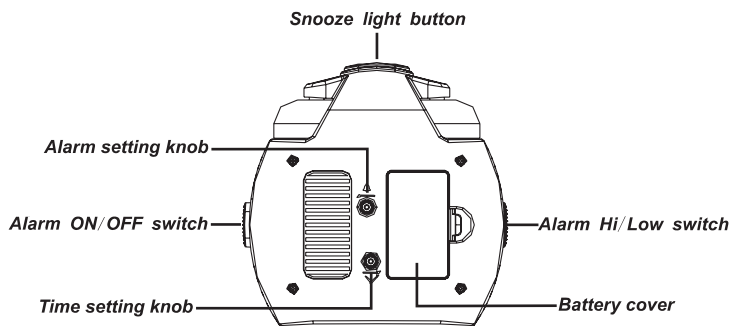

#### FEATURES:

1. Loud bell alarm
2. Repeating snooze
3. Hi/Low alarm switch
4. Snooze
5. Light

#### To activate the clock

Open the battery compartment cover located at the back of the clock and insert 2 x "AA" batteries into the battery compartment, taking care to observe the polarity.

#### To set the time

Turn the 'Time setting knob' in the direction of the arrow to set the hour and minute hands to the correct time.

#### To set the alarm time

Turn the 'Alarm setting knob' in the direction of the arrow to the desired wakeup time.

#### To set the Hi/Low alarm feature

Slide the 'Alarm Hi/Low switch' to the 'Hi' position for high sounding alarm feature. For a quieter sounding alarm, slide the 'Alarm Hi/Low switch' to the 'Low' position.

#### To turn on/off the alarm

Slide the 'Alarm on/off switch' to the "ON" position to activate the alarm. To deactivate the alarm, slide the 'Alarm on-off switch' to the "OFF" position.

#### To use the snooze

When the alarm sounds, press the 'Snooze light button' to stop the alarm. The alarm will sound again after 5 minutes. The snooze feature can be repeated until the 'Alarm ON/OFF switch' is turned OFF.

#### To activate the backlight

Press the 'Snooze/light button' to light the dial.

#### CHANGING THE BATTERIES

- It is recommended that you replace the batteries annually, even if the product is still running.
- Do not mix new and used batteries, different types or brands.
- Only use AA (1.5V) Alkaline batteries in this clock.
- Please dispose of used batteries in a responsible manner.

#### MAINTENANCE

A soft cloth may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

#### YOUR GUARANTEE

Your clock is guaranteed for 12 months from the date of purchase against any faults arising from defective materials or manufacture. Damage caused through careless handling, misuse or in transit is expressly excluded. Should this clock fail within 12 months please return it in the first instance to your retailer.

**If you have any queries, problems or do not understand any part of these instructions please contact:**

Locall 0845 1207208 or Customer Help Line (01908) 220020 Mon - Fri 9.00am - 4.30pm  
email for service: [service@acctim.com](mailto:service@acctim.com) or visit [www.acctim.com](http://www.acctim.com)

#### Environmental Protection



##### Disposal of electrical & electronic equipment.

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate collection point. If you are unsure of where this is contact your local authority. Improper disposal may be harmful to the environment.

