

Viper Cam

G658 v01: 08/06/20

Please read and retain these instructions for future reference



Dimensions:

5.5cm x 8.2cm x 23.5cm

Material:

Plastic

4x AA batteries required (not supplied)

Accessories:

Magnetic tip, hook, mirror

1.2m long cable

Can be used to inspect:

- Pipes
- Sinks/Toilets
- Engines
- Air ducts
- Appliances
- Inside walls
- Chimneys
- Gutters



WARNING:

 
Contains magnet!

Not suitable to those who have pacemaker, defibrillator or other medical implants. Failure to follow this warning can result in serious injury.

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

PARTS

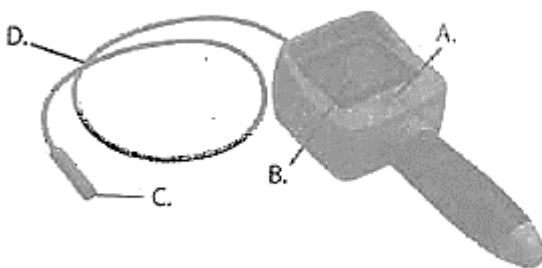


- A. ON/OFF button
- B. LCD Screen
- C. Camera with light
- D. Flexible cable
- E. Hook attachment
- F. Mirror attachment
- G. Magnet attachment

*Calls cost 7 pence per minute plus your telephone company's network access charge


The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Battery installation

 
Important! Dry your hands before installing or replacing batteries.

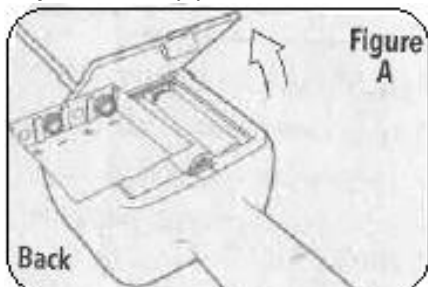

 1. Remove battery compartment cover.
(Figure A)

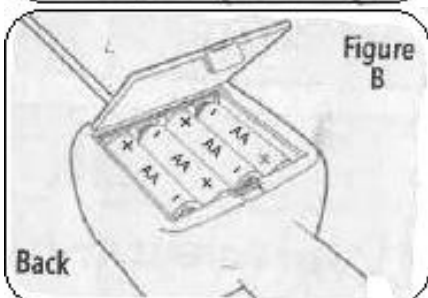

 
Insert 4x AA batteries (not included) into the battery compartment. Make sure to line up the positive (+) and negative (-) markings on the battery compartment (Figure B).

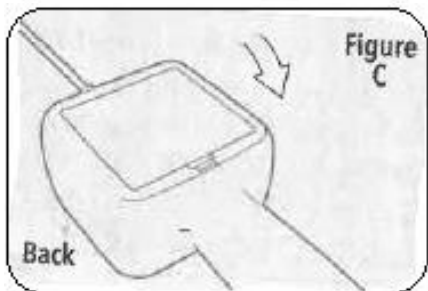

Once the batteries are installed, put the battery cover back on (Figure C).


NOTE: Make sure the batteries are secure before reinstalling the battery cover to ensure optimal functionality.

 HOW TO USE

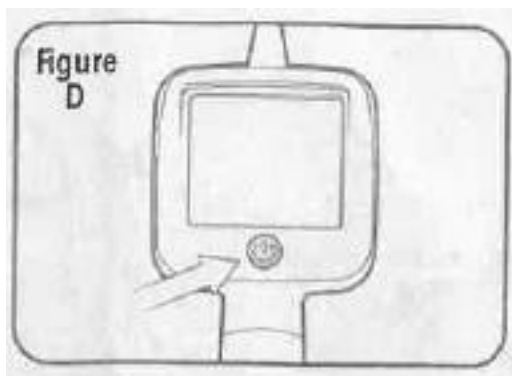

1. Turn the Flex Cam on by holding down the power button (Figure D). The screen will become viewable when on.

 To turn off the Flex Cam hold down the power button until screen is blank.

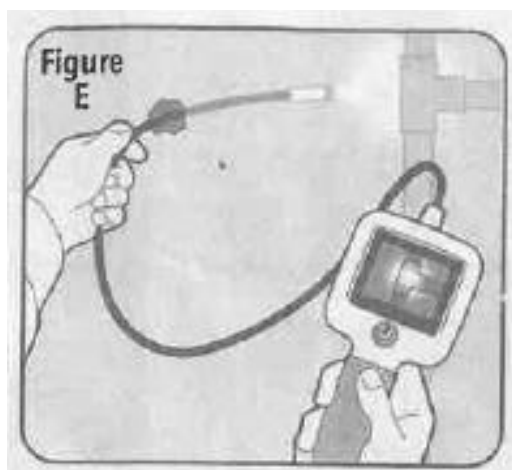

2. Position the camera at the end of the flexible cable (Figure E) to desired location for inspection. Slowly insert the flexible cable into inspection location. Do not apply force!

NOTE: The flexible cable can be bent into numerous shapes that may help you explore areas you otherwise thought were impossible to see.

 
3. Included are 3 attachments to help better view and retrieve objects from inspection locations (see "Attachment Installation" section).

Note: Do not point camera toward any person or property without their permission.

IMPORTANT: Do not immerse the monitor in water. Store in a dry place. Such measures reduce the risk of electric shock and damage.
Only the lens and cable are water resistant.

ATTACHMENT INSTALLATION

Flex Cam includes 3 attachments, mirror, hook and magnet. All the accessories screw onto the end of the camera cable as illustrated below:

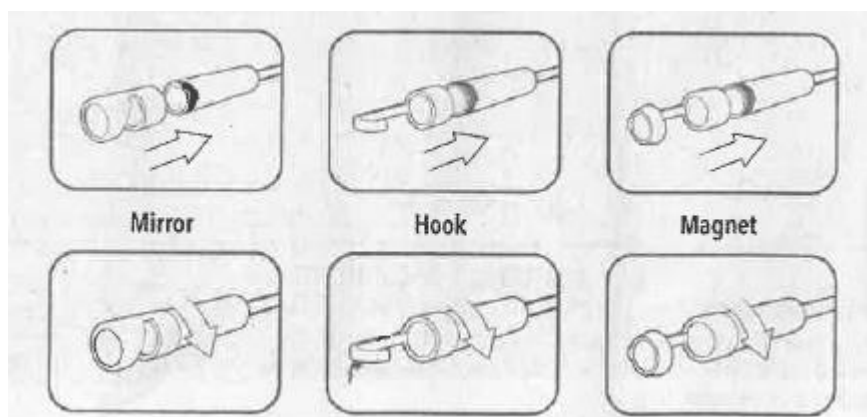


BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – contains the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

