



## Dimensions

Cockerel  
13.5cm (H) – crowing  
alarm  
Cow  
11.5cm (H) – moo  
alarm

## Material

ABS



LR44 button cell batteries (included)

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

### To Set Timer

Turn the knob clockwise all the way to 0 minutes and then turn the knob counter-clockwise to the number of minutes required. A bell will ring (moo) when all the minutes have elapsed.

Example: to set the timer for 15 minutes, first turn the knob clockwise all the way to 0 minutes and then turn it back counter-clockwise to 15 minutes.

## CARE AND CLEANING INSTRUCTIONS:

- This is not a toy. Keep away from children. Contains small batteries.
- Wipe with a clean dry cloth.


## BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	Type of Plastic	Commonly used for	Notes
	ABS	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses	Not often or widely recycled

- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

