Bird Garden Clock G683

Instructions for Use

Please read and retain these instructions for future reference





Dimensions

20cm in diameter

Material

Resin

- WHETHER YOU ARE A BIRD LOVER OR NOT ITS HARD TO RESIST THIS CHARMING ENGLISH BIRD DESIGN CLOCK
- SUITABLE FOR OUTDOORS AS IT IS WEATHER RESISTANT BUT EQUALLY AS PRETTY IN A CONSERVATORY, KITCHEN ETC
- MADE OF HAND PAINTED RESIN
- USES 1XAA BATTERY (NOT INCLUDED)

Occasionally during transit, the hands on the clock may be found to have come loose away from their fixing on the spindle. This is a design feature to protect the mechanism and is easily rectified by simply pushing the hour hand onto its spindle and then the minute hand.

Should this be necessary, once the hands have been pushed back onto the spindle they should be manually moved to read 12 o'clock before following the procedure below.

- Remove the rear battery compartment cover from the clock movement by pulling it away from the casing.
- Fit a 1.5V (AA or equivalent) battery into the battery compartment taking care to observe the correct polarity.
- Adjust the time by turning the wheel on the movement in the required direction until the current time is displayed.
- The rear cover may now be replaced by pushing back over the movement.

Fixing and Location instructions

Preferably fix the clock so that it is out of direct heat and sunlight.

Fix to a wall using suitable fixings such as wall plug and screw (not provided) by means of the bracket at the rear ensuring that it is firmly held in place.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.



Bird Garden Clock G683

Instructions for Use

Please read and retain these instructions for future reference

v001: 30/03/20

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household wa centre.

