v001: 23/03/20

Please read and retain these instructions for future reference



Dimensions 20.5cm (L), face is 4.5cm X3.8cm X1.2CM

Weight 41g

Material **SILICONE AND ABS**

- **ADJUSTABLE EASY FIT BRACELET**
- **BUILT IN 120 DECIBEL ALARM AND** FLASHING LIGHT SO YOU WILL BE HEARD AND SEEN!
- WHEN NEEDED SIMPLY PRESS THE ALARM BUTTON AND THE ALARM AND **LIGHT WILL GO OFF**
- **COMFORTABLE AND DISCREET DESIGN**
- **ONE SIZE FITS ALL**
- **USES 3XLR44 BATTERIES NOT INCLUDED**

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:


Unpack the components carefully

Instruction

- 1. This is a personal alarm, when you need help, just slide the switch on the side of the unit to turn the alarm on or off. It will emit 120 decibel alarm sound.
- 2. The silicon wristband is suitable for everybody. Simply adjust the length according to your wrist size.

Replace battery:

Push the battery cover and take out empty battery, then replace new battery as shown below:

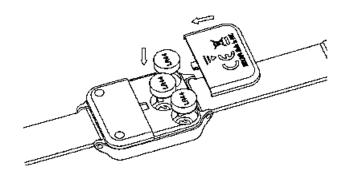

CARE AND CLEANING INSTRUCTIONS:

Wipe with a clean dry cloth.

Please read and retain these instructions for future reference

v001: 23/03/20

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.







Plastics – This is made from the following plastic OTHER ABS.

