G725 Instructions for Use

Please read and retain these instructions for future reference

v001: 27/01/20




~				•	
SI	ne	citi	cat	ions	•
-			cut		•

Power supply	2x AA batteries (not included),	
Power supply		
	any USB port power supply (5V	
	DC USB cable) (included)	
USB disk	Support 128M-32GB (FAT 32)	
Working time	Up to 2 hours with 2x AA	
	batteries	
Audio channel	Stereo L/R	
Bit rate	128Kbps	
Dimensions	11.3cm x8.2cm x3.2cm	
Weight	180g (without batteries)	

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Features

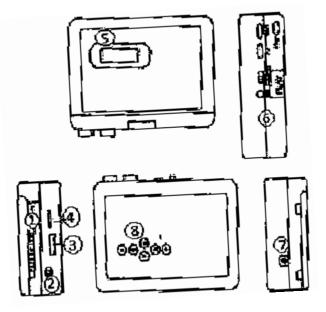

- Press to start/stop recording
- Press to start/stop playback
- 🕣 Last

Next function on playback/Mode switch on standby

+/- Playback volume up/down

1. Lid switch – slide down to open the lid to insert cassette

2. AUX port – Audio output to speaker, can also be used as audio input to record from other audio source

- 3. OTG To plug in USB flash drive, to save recorded music
- 4. Volume control
- 5. Small observation window. To check if cassette is running.
- 6. Cassette operation buttons:
- PLAY press to play cassette
- STOP press to stop playing cassette
- FF Fast forward
- REW Rewind

DIR – Change direction of cassette playing

Auto reverse switch – slide to 'C is auto-reverse mode

- 7. DC port 5V DC
- 8. Conversion operation buttons:

LED indicator:

Keep on – Standby Quick flash – (twice per second) – Recording Slow flash (once per second) – Playback Green – Manual mode Blue – Automatic mode

Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400* Fax: 01279 756 595 www.coopersofstortford.co.uk



*Calls cost 7 pence per minute plus your telephone company's network access charge

Please read and retain these instructions for future reference

How to play cassettes

- 1. Put 2x AA batteries into batteries case.
- 2. Fit the cassette in position and close the door.
- 3. Plug speaker or earphones to AUX.
- 4. Press PLAY button to play cassette.
- 5. Adjust the volume.
- 6. Press STOP on the top to pause.

How to record cassette into USB flash drive (manually)

- 1. Put 2x AA batteries into batteries case.
- 2. Fit the cassette in position and close the door.
- 3. Plug speaker or earphones to AUX.
- 4. Insert USB flash disk, and green LED is on.
- 5. Press PLAY button to play cassette.
- 6. Maximize the volume.
- 7. Press to record, and LED turns green and flashing.
- 8. Press ⁽ pause, and green LED stops flashing.
- 9. Press STOP on the top to end.

 
How to record cassette into USB flash drive (AUTO)

On auto mode standalone cassette to MP3 converter will detect each interval between two songs, and will save the two files. So normally, if you have 6 songs on side A (or B) of your cassette, just put cassette in and play, then press RECORD button. After 6 songs played, 7 mp3 files will be automatically saved on your USB drive. There will be 7 files for a 6 songs tape, the rec00000-rec00006 will be the effective MP3 files for 6 songs, the last one rec000006 is an empty one due to the short space between the end of 6th song to the end of whole tape.

The Converter will create a new folder name "jlrec" in your USB flash drive, and save each MP3 name "rec00000 to rec999999".

- 1. Connect 5V DC USB cable to computer or push the right-side switch to open, then fit 2xAA batteries in battery case.
- 2. Fit the cassette in position and close the door.
- 3. Plug speaker or earphones to AUX.
- 4. Insert USB flash drive, and green LED is on.
- 5. Press 🐽 about 3-5 seconds, until LED turns blue from green.
- 6. Press PLAY button to play cassette.
- 7. Maximize the volume.
- 8. Press ^(IIII) to record, and LED turns blue and flashing. It will identify each song and record them separately.
- 9. Press • to pause, and blue LED stops flashing.
- 10. Press STOP on the top to end.

Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400* Fax: 01279 756 595 www.coopersofstortford.co.uk





Please read and retain these instructions for future reference

How to play audio file in USB flash drive

This device support to playback, so you could easily check the recorded files. When it is standby, please press 🗩 button, then it will start playing the recorded music, and LED will flashing slowly. Press 🗭 button again,

then it will turn back to standby.

You can also copy other MP3 files to the USB flash drive and insert it into our device for playback.

- 1. Connect 5V DC USB cable to computer or push the right-side switch to open the battery compartment and put 2x AA batteries into batteries case.
- 2. Press STOP to stop playing cassette.
- 3. Plug into USB flash drive, the LED turns green.
- 4. Press 💷 to start or stop playing.
- 5. Press 🕶 and 座 to select audio file.
- 6. Press + and to adjust volume.
- 7. Unplug USB flash drive to stop playing.

Note: Please do not play music in the USB flash drive and cassette at the same time.

Use AUX port to also record music from other sources with a 3.5mm audio cable (such as: radio, MP3 players, anything with an audio line out).

Known problems in Auto mode

Due to the auto function being based on detecting the level of music, when the level is lower than the setting in firmware, standalone cassette to MP3 converter will take it as space between two songs, so there will be a chance to encounter the following situations:

If there is a long pause in a song, standalone cassette to MP3 converter may take it as two songs, and save 2 files for it.

If the space between two songs is too short which Cassette to MP3 Converter cannot detect, the converter will take them as one song, and save the two songs in one file. When you encounter such a situation, you can use the Audacity software to edit the files.

Please use the following link:

https://www.audacityteam.org/

Note: We do not suggest to power off (unplug the power supply or unplug the USB Flash drive during recording.

If you wish to edit your recorded MP3 titles, you can use the Audacity software.

Note: To save energy, the converter circuit only works when a USB flash drive is connected. You can still play a cassette even without a USB flash drive inserted.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.

Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400* Fax: 01279 756 595 www.coopersofstortford.co.uk



*Calls cost 7 pence per minute plus your telephone company's network access charge

G725 Instructions for Use

Please read and retain these instructions for future reference

- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics This is made from the following plastics.

	OTHER
Low Density Polyethylene	ABS`
(Polybag)	(Plastic of cassette)

• At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.



Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400* Fax: 01279 756 595 www.coopersofstortford.co.uk





v001: 27/01/20