

Cassette Player and Recorder

G777 v01: 10/06/20

Please read and retain these instructions for future reference

BERGSTRÖM



- BRING BACK HAPPY MEMORIES BY PLAYING ALL OF YOUR FAVOURITE CASSETTES
- SMALL AND PORTABLE SO YOU CAN TAKE ANYWHERE
- RECORDING FUNCTION SO YOU COULD RECORD YOURSELF AND FAMILY TALKING AS YOU CREATE NEW MEMORIES, AS WELL AS RECORDING REMINDERS, NOTES ETC
- FIVE CASSETTE KEYS; PLAY, FORWARD, BACK, STOP

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Company for the Disabled
Head Office: 10 Bridge Street
Bishop's Cleeve, LONDON
Tel: 0944 667 8807
Fax: 01274 746100
www.crip.org.uk

AND RECORD

- BUILT IN SPEAKER
- REMOVABLE BELT CLIP
- AUTO STOP MECHANISM
- 3.5MM PHONE JACK
- 3v DC IN-JACK (CABLE NOT INCLUDED)
- HEADPHONES INCLUDED
- USES 2XAA BATTERIES (Not included)

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Important!

Before using your Personal Cassette Player and

Recorder for the first time, please take the time to read these instructions carefully.


- The Personal Cassette Player is intended for indoor, domestic use only. It should not be used for commercial applications.
- This appliance contains no user serviceable parts. All repairs must be carried out by a qualified person. Incorrect repairs may place the user at risk of harm, and will invalidate any guarantee.
- Do not operate this appliance after it has malfunctioned, or if it has been dropped or damaged in any way.
- Do not expose to dripping or splashing.
- Never place any heavy objects, or any containers filled with liquid on top of the Personal Cassette Player.
- Do not leave the Personal Cassette Player near heat sources, or in direct sunlight, or anywhere that is excessively dusty, sandy or humid.
- Never insert any foreign objects into any of the outlets on the Personal Cassette Player.
- The Personal Cassette Player is not a toy. It

should only be used by children more than eight years of age.

- The Personal Cassette Players should not be used by anyone with reduced physical, sensory or mental capabilities, unless they have been given supervision or instruction on how to use it safely.

Getting to know your Personal Cassette Player

LOCATION OF CONTROLS

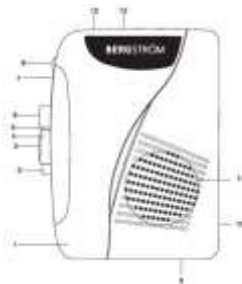

1. Cassette Door
2. Stop Button
3. Fast Forward Button
4. Play Button
5. Rewind Button
6. Record Knob
7. Built-in Microphone
8. Volume Control Knob
9. DC Jack
10. Battery Compartment
11. Speaker
12. Phone Jack
13. External Microphone Jack

Powering your Personal Cassette Player/Recorder

The Personal Cassette Player and Recorder is powered with either two AA (UM-3) batteries or an AC/DC adaptor. Please note: Both the batteries or AC/DC adaptor are not supplied.

IMPORTANT!

Only use an AC/DC adaptor with an output voltage rated as 3V DC, 300mA, with a centre negative plug (Not Included)

Using batteries (NOT SUPPLIED)

1. Open the Battery Compartment (10) on the back of the unit by sliding open and gently pulling upwards the battery door.
2. Check the polarity (+/-) inside the battery compartment.
3. Insert two AA (UM-3) batteries according to the polarity.

4. Close the battery door.

For best performance and extended operating time, we recommend using alkaline batteries.

IMPORTANT!

- Please always ensure batteries are correctly installed. Incorrect polarity can damage your Personal Cassette Player and Recorder.
- Never mix old and new batteries.
- Never mix alkaline, standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.
- If you are not planning to use your Personal Cassette Player for an extended period of time, always remove the batteries. Old or leaking batteries can cause damage to the unit.
- Never dispose of batteries in a fire - batteries can leak or explode.

Using an AC/DC adaptor (NOT SUPPLIED) - Only use an 3VDC, 300mA adaptor

1. Insert the DC plug (at the end of the AC adaptor cord) into the DC Jack (9) on the side of the unit.

2. Plug the AC adaptor into a 230V~ 50Hz AC power socket.
3. The Personal Cassette Player will automatically disconnect from using battery power and operate using the AC/DC adaptor.

Always switch OFF before disconnecting and unplugging the adaptor when not in use.

Playing cassette tape

1. Insert the provided Earphones plug into the Phone Jack (12).
2. Put on the Earphones.
3. Open the Cassette Door (1) and insert a pre-recorded cassette tape face upwards.
4. Close the Cassette Door (1).
5. Press the Play Button (4).
6. Adjust the Volume Control Knob (8) to your preferred sound level.

Press the Fast Forward Button (3) if you wish to rapidly advance the cassette tape.

Press the Stop Button (2) after you have advanced to the desired point on the cassette tape.

7. Press the Rewind Button (5) if you wish to rapidly rewind the tape.
8. Press the Stop Button (2) after you have rewound to the desired point on the cassette tape.
9. Press the Play Button (4) to start to listen to the cassette tape again.

Recording into cassette tape

1. Insert an empty cassette tape as previously described. Press the RED Colour Record Button (6) (the Play Button (4) is depressed with it). You are now recording. If the Record Button (6) cannot be pressed down, it is on "PREVENT ACCIDENTAL ERASURE".
2. Talk normally into the Built-in Microphone (7). To obtain optimum recording quality, place the unit with the Built-in Microphone (7) freely exposed and as close as convenient to the sound source.
3. You can press the Rewind Button (5) to go back to the beginning of the cassette tape, make another recording to cover the previous recording.

Recording with an external microphone (excluded)

1. Insert an external microphone with 3.5mm jack to (13).
2. The internal microphone recording function may switch to external microphone.
3. You may now follow steps 1 – 3, mentioned above in **“Recording into cassette tape”**.

IMPORTANT!


- Do not use your cassette player while walking, especially when crossing roads.
- Avoid listening to your cassette player at high volume. Hearing experts advise against continuous, loud and extended play.
- Always keep volume at a moderate level so you are able to hear outside sounds and take those around you into consideration.
- Keep clean using a soft, dry cloth.
- Never immerse in water.

Automatic stop

- To protect your cassette tapes and prevent unnecessary wear to the cassette mechanism, this unit is equipped with an automatic stop system.
- When the tape ends during playing, the Play Button (4) automatically releases, which stops the cassette from running.


Cassette tape operating tips

- Tapes with a playing time of 120 minutes (C-120) are not recommended. These contain thinner and longer tape, which has a greater chance of malfunctioning and/or jamming, and may damage the cassette mechanism.
- To ensure good reproduction, please clean the head after every 10-20 hours of use.
- Keep the Cassette Player away from excessive heat or cold.
- If there is slack in the tape, remove the slack prior to inserting the cassette. To remove the slack, insert a pencil into the hub and rotate clockwise (see below).

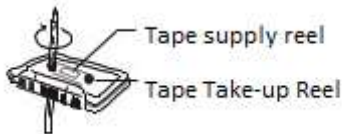

Leader tape

- There is a 'leader tape' at the beginning on each cassette tape. There is no recording on this area. Always allow the tape to run for about five seconds to reach the recording tape.
- Always keep the tape head clean. A dirty head can cause distorted sound or improper tape speed.
- To clean, simply depress the PLAY button (4) and use a small cotton swab with tape head cleaner or alcohol to clean the tape head, capstan and pinch roller (see diagram below).

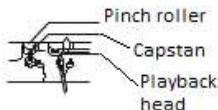

WARNING!

Any changes or modifications to the Personal Cassette Player and Recorder that are not expressly approved by the party responsible for compliance could void the

user's authority to operate the equipment.

Care & Maintenance

- Clean with a soft, damp cloth slightly moistened with water or a mild detergent.
- Do not use any chemical cleaners such as alcohol, benzine or thinners.
- Never leave the Stereo Cassette Player in direct sunlight or in hot, humid or dusty places.
- Keep the Cassette Player away from heating appliances and sources of electrical noise such as fluorescent lamps and motors.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in



compliance with local regulations. For detailed information, contact your local authority.

- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 LDPE	 ABS
Type of Plastic	Low Density Polyethylene	ABS
Commonly used for	Shopping bags, bread bags, squeeze bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

