

Rechargeable Wet & Dry Hand Vac

H007 v003: 03/07/23

Please read and retain these instructions for future reference

BERGSTRÖM



Dimensions

38 x 10 x 11cm

Lightweight and versatile - Weighs only 1kg
Rechargeable and cordless
For both dry and small wet spillages
Comes complete with charger crevice tool, upholstery brush, regular nozzle head
7.4V/50W 2000Mah Rechargeable Battery
0.05l wet capacity
0.15l dry capacity
Easy empty dust and liquid bin
Working time 20 minutes on each charge
Washable and re-usable filter inside
3KPA
Ideal for cleaning cars, caravans, dust, crumbs, pet hair, small liquid spillages, stairs etc
Charging time: 4-5 hours

Technical data

DC 7.4V 2000mAh 50W


Charger input 100-240V, 50/60Hz 0.4A
Max

Charger output 9V DC logo 500mA

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Parts

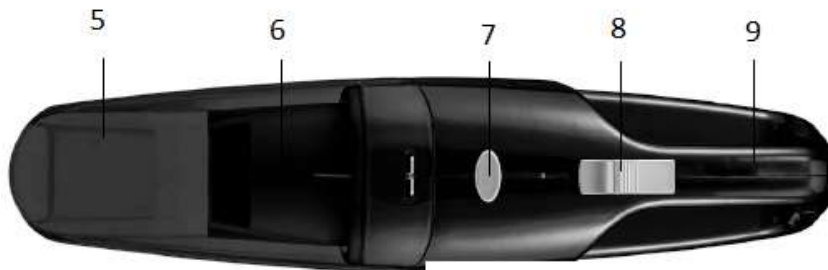

1. Long nozzle
2. Charger
3. Wet nozzle
4. Brush attachment
5. Dust container
6. Filter
7. Dust container release button
8. On/Off switch
9. Handle



The Enterprise Department

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU
Tel: 0330 331 0300 Fax: 01279 756595
www.coopersofstortford.co.uk
EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France
Tel: (+44) 1279 701269

Rechargeable Wet & Dry Hand Vac H007 Instructions for Use

Please read and retain these instructions for future reference

v003: 03/07/23

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU
Tel: 0330 331 0300 Fax: 01279 756595
www.coopersofstortford.co.uk
EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France
Tel: (+44) 1279 701269

Rechargeable Wet & Dry Hand Vac H007 Instructions for Use

Please read and retain these instructions for future reference

v003: 03/07/23

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.
- Not suitable for carpets with long fibres as the bristles will damage the fibres.
- Keep the vacuum cleaner moving over the carpet surface at all times to avoid damaging the carpet fibres.
- Keep hair, loose clothing, fingers and all body parts away from moving parts.
- Do not use to pick up flammable liquids such as gasoline or use in an area where they might be present.
- Do not use the appliance without the dust container filter in place.
- Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.
- Use extra care when cleaning on stairs.

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU
Tel: 0330 331 0300 Fax: 01279 756595
www.coopersofstortford.co.uk
EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France
Tel: (+44) 1279 701269

Rechargeable Wet & Dry Hand Vac H007 Instructions for Use

Please read and retain these instructions for future reference

v003: 03/07/23

- Use only manufacturer's recommended accessories.
- Do not run vacuum cleaner over the cord. Keep cord away from heated surfaces.
- This product is fitted with a thermal cut-out which will activate if the motor overheats due to blocked air inlets. If the appliance cuts out, allow to cool for 1 hour, then empty the dust container and clean all of the filters.

Before First use

- Remove the product from the box.
- Remove any packaging from the product.

Using the Appliance

Charging the Wet & Dry Hand Vac

1. This unit can be charged directly from the mains using the included mains adaptor.
2. To charge the vacuum, connect the mains adaptor to the corresponding jack at the back of the unit and plug the other end into an active mains socket.
3. The LED indicator on the body of the charger will light up green to show the charger has been plugged into the mains, red to show the unit is charging and go out when the unit is fully charged.

The average charging time for this unit is 16 hours on first use and 4-5 hours for subsequent uses.

Turning the Hand Vac on and off

1. Push the On/Off switch on the body of the unit to the ON position to turn the unit on. Air will begin emitting from the unit to indicate it has been powered up.
2. Release the On/Off switch when the unit is in operation to turn it off. Air will stop emitting from the unit to indicate it has been powered down.

Using the Accessories

1. The Hand Vac comes complete with a full range of accessories including
 - Long nozzle, to vacuum hard-to-reach areas.
 - Wet nozzle for vacuuming up liquids
Note: After vacuuming liquids hold the nozzle facing downward to prevent water leaking out.
 - Brush attachment for cleaning upholstery or delicate fabrics.
2. To use any of the accessories, attach them to the suction end of the vacuum, ensuring they sit flush within the opening.
3. To remove an attached accessory pull it firmly away from the main body of the unit until it detaches.

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU
Tel: 0330 331 0300 Fax: 01279 756595
www.coopersofstortford.co.uk
EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France
Tel: (+44) 1279 701269

Rechargeable Wet & Dry Hand Vac H007 Instructions for Use

Please read and retain these instructions for future reference

v003: 03/07/23

Troubleshooting

Problem	Solution
The vacuum will not work	<ul style="list-style-type: none">• Ensure the vacuum cleaner is fully charged. To charge the unit, plug the AC adaptor into it, connect it to the mains socket and wait until the LED indicator on the charger goes out.• Check that there are no blockages to the dust tank or filter and remove as necessary.
The vacuum will not pick up or the suction power is weak.	<ul style="list-style-type: none">• The dust container may be full, or the filters may require cleaning. Empty the dust container and clean the filters.• There may be blockages in the filters or dust tank. Check for blockages and clean the filters and dust tank as detailed in the "Cleaning and Maintenance" section.
Dust is escaping from the vacuum	<ul style="list-style-type: none">• The filter may not be installed correctly or the dust container may be full. Empty the dust container and reassemble the filter system.
The vacuum is making an unusual sound or humming	<ul style="list-style-type: none">• The airflow may be restricted or blocked. Check for blockages and clean the filters and hose as detailed in the "Cleaning and Maintenance" section.

Cleaning and Maintenance

Emptying the Dust tank

Note: Ensure the vacuum cleaner is turned off and unplugged from the mains before emptying the dust tank.

1. To remove the dust tank from the vacuum cleaner, press the release button on the main body of the unit, pull the tank firmly towards you and away from the main body of the vacuum.
2. Once the dust tank has been removed, pull out the filter from inside. To do this, grip the small tab marked "Pull" on the lip of the filter and pull it firmly upwards and away from the dust tank.
3. Once the filter has been removed, tap it over a rubbish bin or similar surface to remove any dust residue inside, rinse it under running water and leave it to dry.

Note: Ensure the unit is thoroughly clean and the filter is completely dry before attempting to use or store it.

4. Ensure the filter is inserted back into the unit before using it again.

Clearing Blockages

If the dust tank is overfilled, the filter is clogged up, or the vacuum picks up a larger piece of debris, the vacuum may become clogged.

Should this occur, carry out the following steps to unclog the vacuum:

1. Check the dust tank and empty it if necessary.

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU
Tel: 0330 331 0300 Fax: 01279 756595
www.coopersofstortford.co.uk
EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France
Tel: (+44) 1279 701269

Rechargeable Wet & Dry Hand Vac H007 Instructions for Use

Please read and retain these instructions for future reference

v003: 03/07/23

2. Check the filter for any debris and rinse it under running water if necessary, as detailed in the sections above.
3. Detach any attachment from the unit and check for blockages.

Storing the Appliance

- Unplug the appliance from the mains and remove any attachments from the front of the unit.
- Store the appliance in a cool, dry place and out of the reach of children.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.


DO NOT use if the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	
Type of Plastic	ABS, AS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

UK
CA

CE



**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU
Tel: 0330 331 0300 Fax: 01279 756595
www.coopersofstortford.co.uk
EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France
Tel: (+44) 1279 701269