

## Deluxe Plug in Wireless Doorbell

H020 v002: 15/02/21

Please read and retain these instructions for future reference



**Voltage:** 240VAC, 50Hz, 13A, 3120W Max,

**Frequency:** 433.92MHz

**Battery:** 12VDC, 23A (included)

**Working environment:** -10°C~ to +40°C

**THE BATTERIES HAVE A FILM ROUND THE BATTERIES SO THERE IS NO CONTACT. THIS IS TO PREVENT BATTERY DRAIN DURING TRANSIT. PLEASE NOTE THE FILM NEEDS TO BE REMOVED BEFORE USE.**

### Dimensions

10.5cm x5.8cm x7.8cm

### Composition


PP, copper, PCB & components

- HEAR THE DOORBELL NO MATTER WHERE YOU ARE IN THE HOUSE! SO YOU NEVER MISS A VISITOR AGAIN
- DELUXE PLUG IN WIRELESS DOORBELL THAT HAS 52 DIFFERENT RINGTONES TO SELECT FROM.
- ADJUSTABLE RINGER VOLUME FROM 25Db UP TO A SUPER LOUD 110Db
- SIMPLY PLUG THE DOORBELL INTO A MAINS SOCKET ANYWHERE IN YOUR HOUSE AND THANKS TO THE INBUILT SOCKET YOU WON'T EVEN LOSE A PLUG POINT
- THE PUSH BUTTON BELL TRANSMITS UP TO 30 METRES AND WILL EVEN WORK THROUGH WALLS AND CEILINGS AND IS POWERED BY 1X12V BATTERY (INCLUDED)
- SIMPLE AND QUICK INSTALLATION

### ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

#### Parts

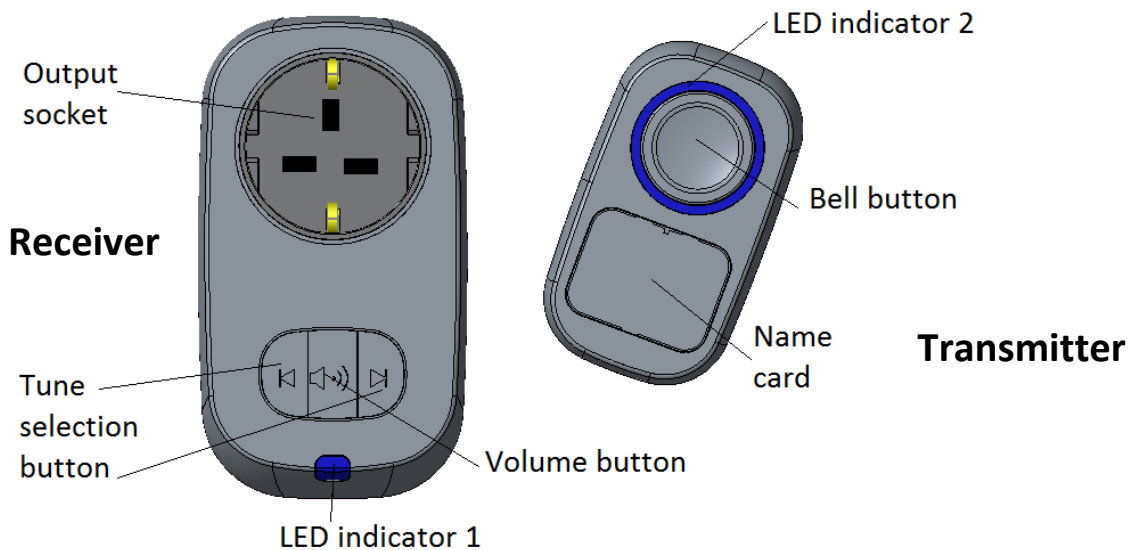

\*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department  
Head Office: 11 Bridge Street  
Bishop's Stortford, CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

# Deluxe Plug in Wireless Doorbell H020 Instructions for Use

Please read and retain these instructions for future reference

v002: 15/02/21

## Operating instructions :

- A. Plug in the receiver. A "Ding dong" sounds and the LED Indicator 1 will flash about 4 seconds to show the output socket is energised;
- B. Put the battery (12V 23A) into the transmitter;
- C. Pairing: press the Volume button on the receiver for 5 seconds until the music sound stops and the LED Indicator 1 does not flash. Then press the Bell Button on the transmitter. After hearing 2 buzzes the receiver and transmitter are paired.
- D. When the bell button on the transmitter is pressed the receiver will play the selected music and the LED Indicator 1 flashes at the same time.
- E. If the transmitter did not pair with the receiver within 20 seconds, two buzzing sounds will be heard meaning the learning code is cancelled automatically. Please repeat step C to pair.
- F. Tune selection: Total 52 songs are available. Press Tune selection button to select a tune
- G. Volume adjust: The volume can be adjusted to 5 different levels. Press the Volume button to select the appropriate volume.



## Installation:

1. The transmitter of Wireless doorbell should be installed outside of the door at a height of 1.2 meters to 1.7 meters. The transmitter can be fitted with an adhesive 3M sticker (provided)
2. The receiver should to be plugged into any power outlet inside, preferably on the wall socket. Note that the distance between the transmitting and receiving parts should not exceed 30 meters. When the doorbell is not working properly, please adjust the distance between the transmitter and the receiver.

## CARE AND CLEANING INSTRUCTIONS:

- Wipe with a clean dry cloth.

## BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.




The Enterprise Department  
Head Office: 11 Bridge Street  
Bishop's Stortford, CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
www.coopersofstortford.co.uk

\*Calls cost 7 pence per minute plus your  
telephone company's network access charge

# Deluxe Plug in Wireless Doorbell H020 Instructions for Use

Please read and retain these instructions for future reference

v002: 15/02/21

- |                   |   |
|-------------------|---|
| Code & Symbol     |  |
| Type of Plastic   | PC (polycarbonate)  |
| Commonly used for | CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses    |
| Notes             | Not often or widely recycled  |

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



**BERGSTRÖM**

The Enterprise Department  
Head Office: 11 Bridge Street  
Bishop's Stortford, CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

\*Calls cost 7 pence per minute plus your telephone company's network access charge