

Deluxe Plug in Wireless Doorbell

Item No: H020

Instructions for Use

v008: 16/09/24

Please read and retain these instructions for future reference

BERGSTRÖM



Voltage: 240VAC, 50Hz, 13A, 3120W Max,

Frequency: 433.92MHz

Battery: CR2032 3V (included)

Working environment: -10°C~ to +40°C

Dimensions

10.8x6.0x6.9cm

Composition

 
PC, copper, PCB & components

THE BATTERY IS PRE-INSTALLED WITH A TAB TO ACT AS A PROTECTIVE COVER. PLEASE PULL THE TAB OUT TO OPERATE.

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

Parts

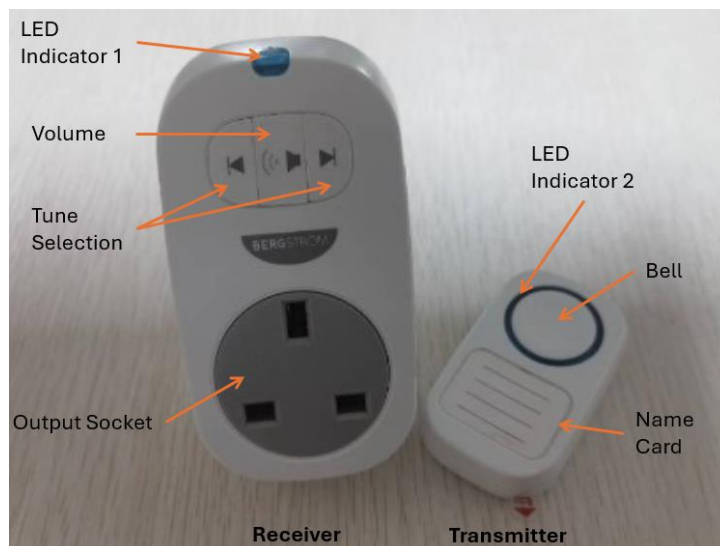

Operating instructions :

- A. Plug in the receiver. A "Ding Dong" sounds and the LED Indicator 1 will flash about 4 seconds to show the output socket is energised.
- B. The CR2032 3V battery is pre-fitted in the transmitter. Simply pull the red plastic tab until it is fully removed.
If needed, to open the bell transmitter, use a flat head screwdriver that fits the hole and gently push in the tap. The top part will then open. Figure 1 shows the inside of the bell transmitter you can see at the bottom where the battery goes. There is a correct way and wrong way. Inside the battery compartment shown in the photograph there is + and – make sure you put the battery in the correct way. Make sure you put the lid back on the correct way shown in Figure 2. Same again clip one of the tabs in first then very gently use the same screwdriver to push the tab in.
- C. **Pairing** - press the Volume button on the receiver for 5 seconds until the music sound stops and the LED Indicator 1 does not flash. Then press the Bell Button on the transmitter. After hearing 2 buzzes the receiver and transmitter are paired.
- D. Now it is time to find out what tune you would like by pressing the button either side of the volume button.
- E. When the bell button on the transmitter is pressed the receiver will play the selected music and the LED Indicator 1 flashes at the same time.
- F. If the transmitter did not pair with the receiver within 20 seconds, two buzzing sounds will be heard meaning the learning code is cancelled automatically. Please repeat step C to pair.
- G. **Tune selection:** Total 52 songs are available. Press Tune selection button to select a tune
- H. **Volume adjust:** The volume can be adjusted to 5 different levels. Press the Volume button to select the appropriate volume.

If you do decide to move the plug please reset.



Fig 1



Fig 2

Installation

1. The transmitter of Wireless doorbell should be installed outside of the door at a height of 1.2 meters to 1.7 meters. The transmitter can be fitted with an adhesive 3M sticker (provided)
2. The receiver should be plugged into any power outlet inside, preferably on the wall socket. Note that the distance between the transmitting and receiving parts should not exceed 30 meters. When the doorbell is not working properly, please adjust the distance between the transmitter and the receiver.

 
WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ANY APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE
- NOT FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- DO NOT LEAVE SWITCHED ON OR UNATTENDED.

BATTERIES

- **CONTAINS BUTTON CELLS**
- **BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN. IF SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY SEEK IMMEDIATE MEDICAL ATTENTION.**
- INSTALL BATTERIES IN ACCORDANCE WITH ITS POLARITY SYMBOLS. DO NOT FIT BATTERIES IN REVERSE.
- ENSURE THE BATTERY COMPARTMENT IS RE-SECURED BY THE SECURING DEVICE.
- IF THE BATTERY COMPARTMENT (DOES NOT CLOSE SECURELY, STOP USING THE PRODUCT AND KEEP IT AWAY FROM CHILDREN.
- DO NOT SHORT CIRCUIT THE BATTERY TERMINALS.
- REMOVE THE BATTERIES IF LEFT FOR LONG PERIODS.
- **KEEP BATTERIES AWAY FROM CHILDREN AND PETS.**
- DO NOT MIX USED AND NEW BATTERIES.
- **NEVER DISPOSE OF BATTERIES IN A FIRE.**
- BATTERY DISPOSAL, SPENT OR EXPIRED BATTERIES MUST BE DISPOSED OF AND RECYCLED IN COMPLIANCE WITH YOUR LOCAL AUTHORITY REGULATIONS.
- FOLLOW THE BATTERY MANUFACTURER'S SAFETY, USAGE, AND DISPOSAL INSTRUCTIONS.

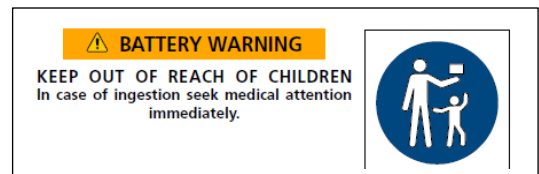

CARE AND CLEANING INSTRUCTIONS

 
- ALWAYS SWITCH OFF AND REMOVE BATTERIES BEFORE CLEANING.
- DO NOT IMMERSE IN WATER.
- DO NOT USE ABRASIVE CLEANERS OR SHARP UTENSILS TO CLEAN THIS APPLIANCE.
- WIPE SURFACES WITH A SOFT DRY CLOTH. DRY THOROUGHLY BEFORE FURTHER USE.
- STORE THE APPLIANCE IN A COOL, DRY PLACE.


BATTERY DISPOSAL

- SPENT OR EXPIRED BUTTON CELLS MUST BE DISPOSED SAFELY AWAY FROM CHILDREN ACCESS AND RECYCLED IN COMPLIANCE WITH YOUR LOCAL AUTHORITY REGULATIONS.
- FOLLOW THE BATTERY MANUFACTURER'S SAFETY, USAGE, AND DISPOSAL INSTRUCTIONS.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made from the following recyclable plastic.



Code & Symbol	 PVC
Type of Plastic	Polyvinyl Chloride

Distributed by / Verteilt durch / Distribué par.

UK:

The Enterprise Department Ltd.

11 Bridge Street, Bishops Stortford

Herts, UK, CM23 2JU

Tel: 0330 331 0300

NI/EU:

D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

DE/FR/CZ/SK:

hergestellt für 3Pagen

Sankt-Joeris-Strasse 16-28

53477 Alsdorf

Tel: +49(0)2404/980-204

kontakt@3pagen.de

UK
CA

CE

