

Film and Slide Scanner

H031 v01: 14/08/20

Please read and retain these instructions for future reference

BERGSTRÖM



Dimensions

24CM wide, 20CM deep 15CM high

- CONVERT YOUR PRECIOUS MEMORIES TO DIGITAL FILES TO KEEP FOREVER AND YOU DON'T EVEN NEED A COMPUTER IF YOU DON'T HAVE ONE!
- THIS SLIDE AND PHOTO SCANNER CAN CONVERT:
 - 35MM & 135MM NEGATIVES & SLIDES
 - PHOTOGRAPHS OF SIZES 3.5X5", 4X6" AND 5X7"
- ALL TO 8 MEGAPIXEL DIGITAL FORMAT
- SIMPLE SINGLE PASS SCANNING FOR FILMS
- WITH ITS 2.4" LCD COLOUR SCREEN YOU CAN VIEW YOUR IMAGES WHILST SCANNING
- COMES WITH SPECIALLY DESIGNED HOLDERS THAT YOU SIMPLY SLOT YOUR PHOTOGRAPHS, SLIDES OR NEGATIVES INTO, PUT INTO THE MACHINE AND JUST PRESS A BUTTON TO CONVERT.
- CHOOSE THEN WHETHER TO SAVE TO AN SD CARD (NOT INCLUDED), OR CONNECT THE SCANNER TO A PC, LAPTOP ETC USING THE USB LEAD INCLUDED.
- BUILT IN 32MB FLASH MEMORY
- MAINS POWERED COMES WITH MAINS PLUG, USB LEAD, HOLDERS FOR PHOTO'S, SLIDES AND NEGATIVES

* Illustrations are for instructional purposes only, and may be different from the actual product.

Technical Specifications

Lens :	2G3P F/NO=3.97 f=4.04 Film Range:51.5mm F/NO=4 f=3.93 Photo Range:170mm
Sensor :	8 mega pixels CMOS sensor
LCD:	2.4 inch LTPS LCD Display
External memory:	SD/MMC
Exposure :	Auto
Color balance :	Auto
Scan high resolution :	16M interpolation resolution
Data conversion :	12 bits per color channel
Scan Method :	Single pass
Light source :	Backlight Panel
LED light lifetime for on & off:	10000 times
Power :	Powered from USB/5V adapter included?
Interface:	USB 2.0
Dimension:	220 x 208 x 147mm
Weight:	890g
Language:	English, French, German, Italian, Spanish, Traditional Chinese, Simplified Chinese, Japanese

Contents

Technical Specifications	2
1: Safety precautions.....	3
2: Package contents.....	3
3. Description of Parts	4
4. Loading Slides	5
5. Loading Negatives.....	6
6. Loading photos	7
7: General operations.....	8
Operation Guide	9
Trouble shooting	20

1: Safety precautions

- **Important:** Do not expose this product to rain or moisture to preserve the life of your product.
- **Caution:** Do not disassemble this unit. To prevent the risk of electric shock, do not remove cover.
- **Ventilation:** The device should be situated so that its location or position does not interfere with its proper ventilation. For example, the unit should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings.
- **Heat:** The device should be situated away from sources of high heat such as radiators or stoves.
- **Cleaning:** We strongly suggest using a clean, dry, non-alcohol cotton swab to clean the glass surface periodically to produce a clear image.
- **No use period:** The USB cord for the device should be unplugged from the computer when the unit is left unused for a long period of time.
- **USB overloading:** Do not overload the USB connections on your computer. If you have too many devices connected to your computer such as a wireless mouse, media player, mobile phone or other USB powered devices there may not be enough power for the Film & Photo scanner to operate properly.
- **Servicing:** The user should not attempt to service the device beyond those means described in the operating instructions. All other servicing should be referred to qualified person.
- **Film Holder:** The design of the film holder follows ISO standard. In some cases the holes on the film will not match exactly to the alignment of the holder. This is caused by a non-standard camera. In this case there will be a small black line on the edge of the frame that can easily be cropped out using photo editing software.
- **ISO--** International Organization for Standardization
- For environmental protection and energy conservation, besides in PLAYBACK and USB mode, the device will be powered off automatically without any operation in 30 minutes of inactivity.

2: Package contents

- Film & photo scanner
- USB cable
- Negative Film Holder
- Positive Slide Holder
- 4 in 1 Photo Tray
- OCR CD
- AC/DC adapter
- User's Manual

Please remove the adaptor from the mains when not in use.

3. Description of Parts

Film and Photo Scanner



Positive Slide Holder



Negative Film Holder



Photo/Name card holder



USB Cable



4. Loading Slides

Hold up the slide toward the light. Face the trademark side of the slide away from you. Look through the slide and it should appear normally (not a mirror image).

Now turn the slide so the image is upside down while looking at the same side.



Open the slide holder at the marked spot on the top.

With the slide holder laid open place the slide into recessed area in the holder- the slide should fit perfectly.

Note: Handle slides with care. Any dust scratches or fingerprints will show up on your saved images. It is recommended to wear cotton gloves when handling slides. It is recommended to use compressed air to remove any dust on the slides. You can purchase it from an office supply or electronics retailer.



Close the slide holder and press the edges so that it locks in place.



Hold it in the position as shown in the film & photo scanner.

Insert the Slide Holder into the slot on the right side of the film & photo scanner as shown.



5. Loading Negatives

Hold up the negative toward the light. As you look through the negative you should be able to read the small negative numbers normally (not a mirror image).

Now turn the negative so the image is upside down while looking at the same side.



Open the negative holder at the marked spot on the top.

With the negative holder laid open place the negative into holder so the notches line up with the notches on the holder.

Note: Handle negatives with care. Any dust, scratches or fingerprints will show up on your saved images. If possible use cotton gloves when handling negatives. It is recommended to use compressed air to remove any dust on the negatives. This is not included with the film & photo scanner but can be purchased from an office supply or electronics retailer.



Close the negative holder and press the edges so that it locks in place



Hold it in the position as shown in the film & photo scanner.

Insert the negative holder into the slot on the right side of the film & photo scanner as shown.



Film Holder: The design of the film holder follows ISO standard. In some cases the holes on the film will not match exactly to the alignment of the holder. This is caused by a non-standard camera. In this case there will be a small black line on the edge of the frame that can easily be cropped out using photo editing software.

ISO-- International Organization for Standardization

6. Loading photos


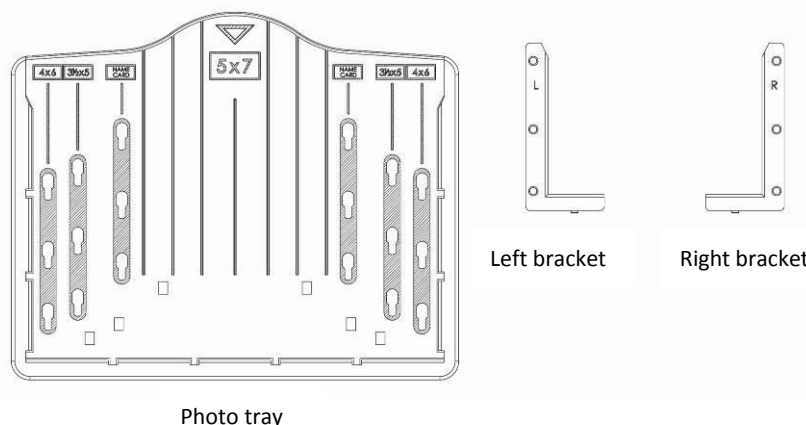



Photo tray

Position the brackets according to the marked dimensions on the photo tray. Note that for 5"x7" photographs, the brackets do not need to be fitted into the photo tray

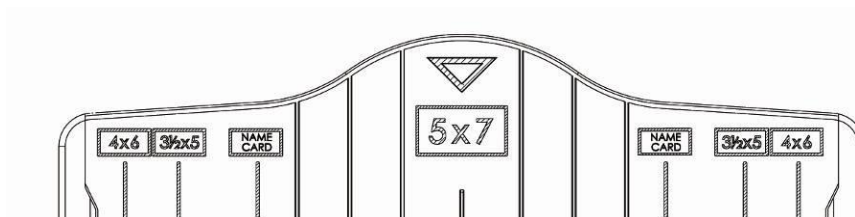


Place the brackets into the slots and slide the brackets downwards to secure. Check that they are securely fastened by turning the photo tray upside down. The brackets should not fall off.

1. Place brackets in photo tray
2. Slide brackets downwards to secure

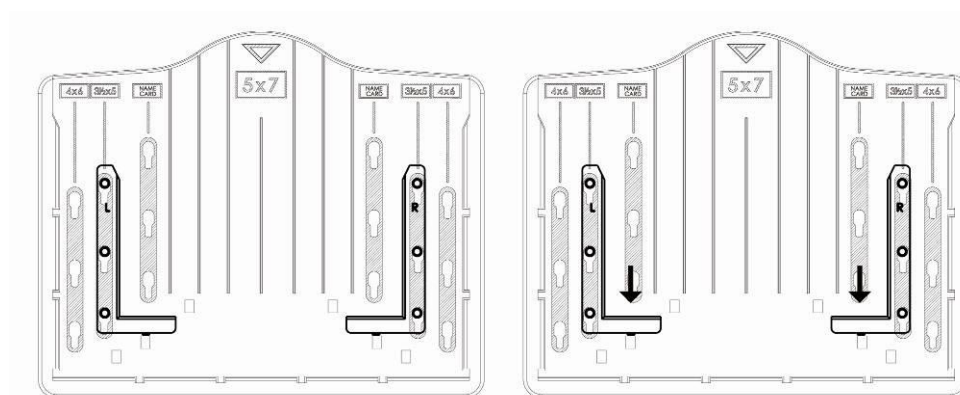

Insert the photo into appropriately sized photo tray (5"x7" (5R), 4"x6" (4R), 3 1/2"x5" (3R), name card)

Insert the photo tray into the photo tray slot from the top of the film & photo scanner as shown

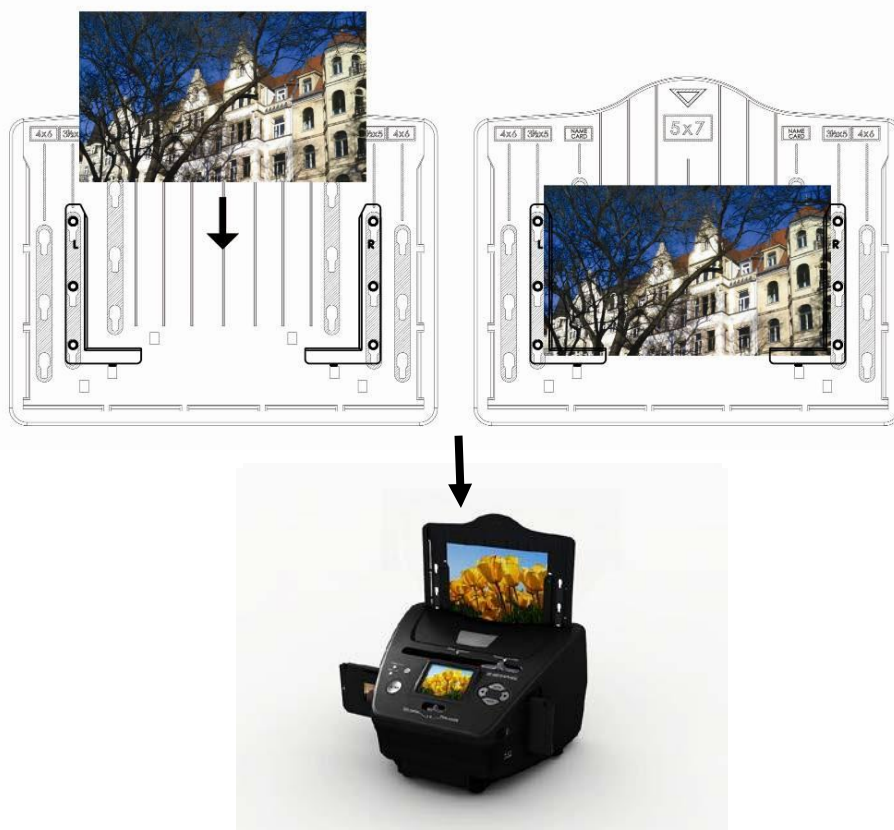

Note:

- Please use the provided OCR CD to organize the name cards.
- Handle photos with care. Any dust scratches or fingerprints will show up on your saved images.
- Scanned name cards will capture a standard dimension of 91x55mm. The scanned image will have a slight border around the name card.

7: General operations

Note: Maybe there is some difference between the preview image and saved image, please subject to the image that you saved in SD card.

◆ Quick Start

1. If you want to scan film, please switch two switches on the top of the device to the left side. Otherwise if you want to scan photos, please switch to the right side.
2. Put Slide/Negative onto the Slide/Negative Holder or insert photo into appropriately sized photo tray (5"x7" (5R), 4"x6" (4R), 3 1/2"x5" (3R), name card)

3. Insert the Slide/Negative Holder into the slot on the right of the device or insert photo tray into photo tray slot from the top of the device.
4. Apply the power to the film & photo scanner in two ways:
 - (1) USB: Connect the film & photo scanner to PC with USB cable
 - (2) 5V adapter: Connect the adapter to the device with USB cable
5. Press POWER button to turn on the film & photo scanner.

Note: (1) When the Film scanner mode is selected, the Film scan indication LED is on.

2) When the Photo scanner mode is selected, the Photo scan indication LED is on.

6. Follow the menu on screen for scanning.
7. After finishing scanning, take out the memory card.

Note: The film & photo scanner has a built-in memory for recording, when there is a memory card inserted data will be saved onto the memory card.

8. Or read pictures from PC by USB mode
9. When capturing in either photo or film modes, please remember to push both slide switches to the correct placement.

A notification will appear on-screen as a reminder to carry out the following:

1. Photo: push both sliders to the right

1. Push the slider above to the right (photo scanning)
2. Please remove film tray for photo scanning


2. Film: push both sliders to the left.

Push the slider above to the left (film scanning)

Operation Guide

◆ Operation Guide Home/MODE: Main Menu


When the Film scanner mode is selected, the following main menu will appear:

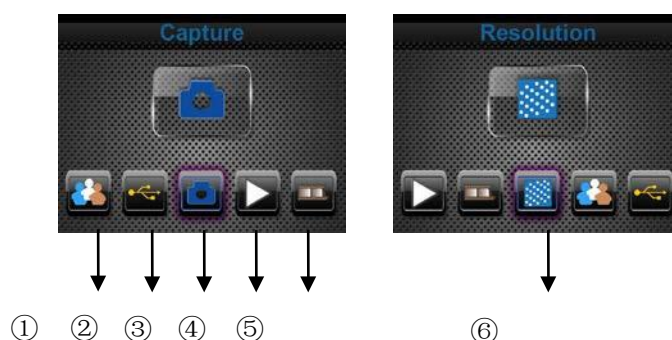

- ① Language mode
- ② USB mode
- ③ Capture mode

- ④ Playback mode
- ⑤ Film Type
- ⑥ Resolution


When the Photo scanner mode is selected, the following main menu will appear:

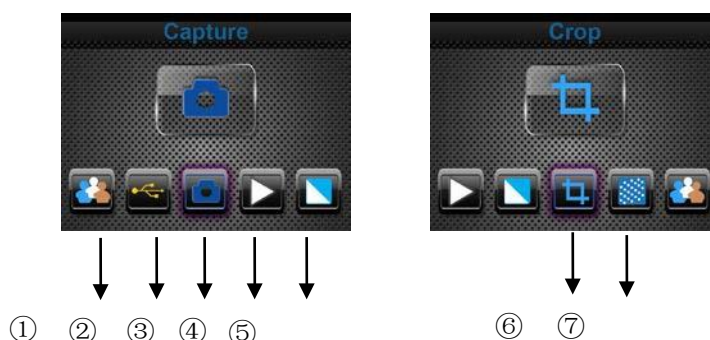

- ① Language mode
- ② USB mode
- ③ Capture mode
- ④ Playback mode

- ⑤ Effect: multicolor, B&W
- ⑥ Crop proportion: (5"x7" (5R), 4"x6" (4R), 3 1/2"x5" (3R), name card)
- ⑦ Resolution

Home/MODE: No memory card

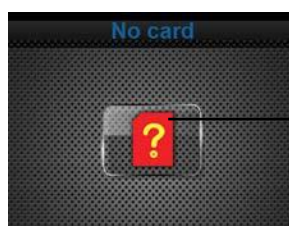

No memory card indicator

If there is no memory card inserted into the device, a warning icon will be shown on screen when entering the main menu
SD / SDHC card slot up to 128GB

1: Capture




After the welcome page, the above menu will appear. User can press LEFT/RIGHT button for desired menu, then press ENTER button to confirm the selection.

Adjust brightness and color of image

You can adjust brightness and color of image in capture mode.

When entering into capture mode, press ENTER button, following picture will show on:

EV means brightness. R means red; G means green; B means blue.

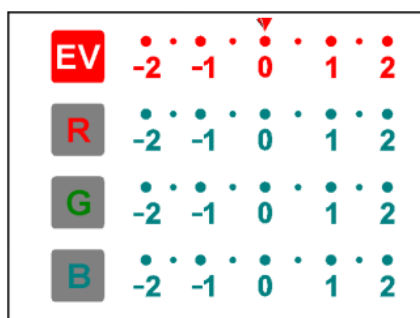


Press ENTER button to switch, press LEFT/RIGHT button to adjust data Press SCAN button back to image preview mode


Capture: Mirror/Flip(Hard Key)

If any image requires for Mirror or Flip before capture, press LEFT/RIGHT button for Mirror/Flip function, the live view will be adjusted accordingly (This step is to correct user misplacing the film/photo either upside down or flipped).

Mirror and Flip function can only be used while in the live view mode.

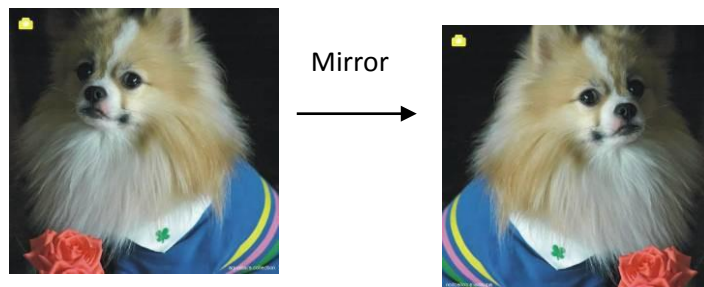

Press LEFT button to change image left to right

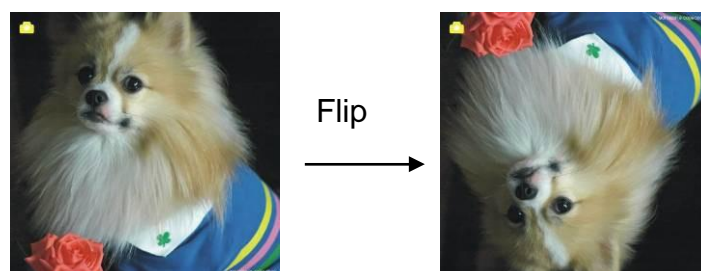

Press RIGHT button to upside down image

Capture mode

live view indicator



Once entering capture mode, there will be an indicator on the left top corner to indicate it is in live view mode.

User can also press ENTER button, then press LEFT/RIGHT button to adjust EV value, press SCAN button again to confirm and back to live view mode.

Capture: Edit Menu

①



②




Selected image

- ① Save: save captured image
- ② Cancel: cancel any editing with this image
- ③ Home: back to main menu


Live view

Capture/Edit menu

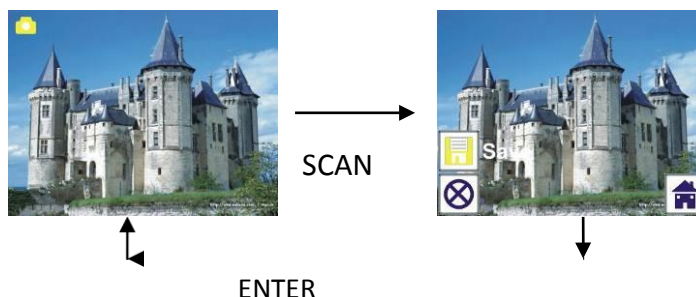


Press SCAN button once in live view, the edit menu will appear. When user presses ENTER button, the current image will be saved to internal memory or memory card when there is a memory card inserted, the display will return to live view again.

1.1 Capture: Save

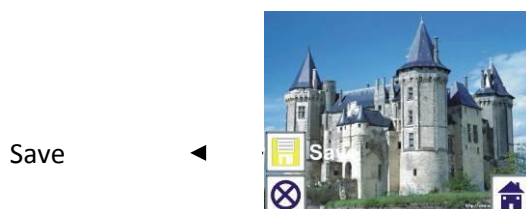

Press SCAN button once preview (live view) image will be selected and shown on the TFT which will take between 1-2 second with 2 icons shown on the left side of the screen. Save icon will be highlighted for user to confirm by ENTER button, after the above step, the display will go back to live view mode (preview)

1.2 Capture: Cancel

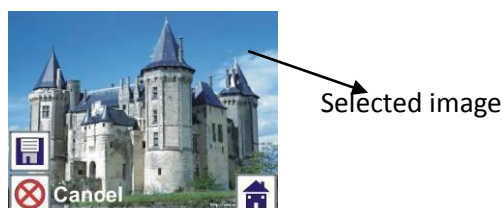

Select Cancel icon with LEFT/RIGHT button and press ENTER button to cancel any editing step with present selected image and the display will return to live view mode (nothing will be saved)

Capture: Home




Select Home icon with LEFT/RIGHT button, then press ENTER button or press MODE button on top of the device anytime to return to main menu

Exit from Edit mode back to Capture mode (live view)

Once user presses ENTER button for save or cancel option, the display will return to capture mode/live view. Then user can move the film holder to next target film or change to another photo to capture.

Memory full

Once the internal memory or memory card is full, a memory full icon will be shown on screen when pressing SCAN button. User has to download the images to PC or replace another memory card to continue.

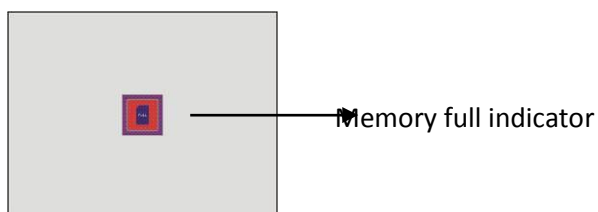

Playback



Press LEFT/RIGHT button to playback mode when power on the device or access the main menu by Home icon/MODE button anytime. Press ENTER button to confirm the selection.

Playback: Auto Slide Show

Slide show mode



Once user enters playback mode (default to slide show), TFT will auto display all images stored in internal memory or memory card with 2 seconds interval from previous captured image. User can also stop the slide show by press ENTER button (Only the images captured by the film & photo scanner are available in playback mode)

Playback: Edit Menu




- ① Rotate +90: captured image rotate +90 degrees
- ② Rotate -90: captured image rotate -90 degrees
- ③ Delete: delete this picture stored in internal memory or memory card
- ④ Exit: return to Slide show mode
- ⑤ Save: save the modified image to internal memory or memory card
- ⑥ Home: return to main menu

Playback: Slide Show/Single Picture/Edit mode

User can interrupt (stop) slide show mode to stand alone playback mode (single picture playback) by pressing ENTER button. (Pause slide show) Then user is able to scroll to each picture by LEFT/RIGHT button. Once user selects the picture stored in internal memory or memory card which intended to be modified, pressing ENTER button again brings out the edit mode for modification.

If there is no memory card inserted or no image in internal memory, TFT will auto display 20 frames stored in internal memory when enter playback mode, but they will not be edited.

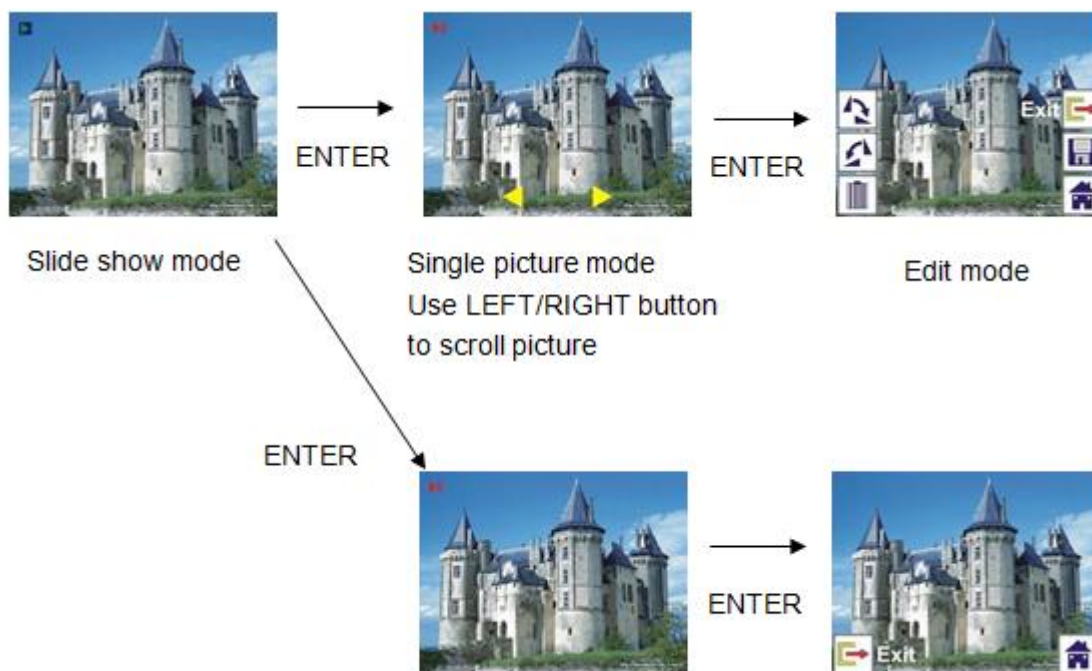

Playback: Rotate/Save



If user wants to rotate +90 degrees by ENTER button, the image will be rotated +90 degrees and cursor will remain at Save. Press ENTER button again to save modified result and next picture will be shown. For continuously rotate +90 degrees, move cursor to rotate again and press ENTER button. (Same for Rotate -90 function)

Playback: Exit



Once user selects Exit function in edit menu, the display will go back to slide show starting with the current picture without any change

Playback: Delete



Select delete icon with LEFT/RIGHT button then press ENTER button, that will delete the present selected picture and next picture will be shown. Cursor will remain at Exit icon. If user intend to process continuously delete, just move cursor to delete icon again and press ENTER button to confirm.

Playback: Home



Select Home icon with LEFT/RIGHT button, then press ENTER button or press MODE button on top of the device anytime to return to main menu


Playback: No Picture



If there is no picture when enter playback mode, a No picture symbol will show on screen

Film Type

When the Film scanner mode is selected, user can change film type by enter Film Type menu when power on the device or access the main menu by Home icon/MODE button anytime. Press LEFT/RIGHT button for Film Type and press ENTER button to confirm.

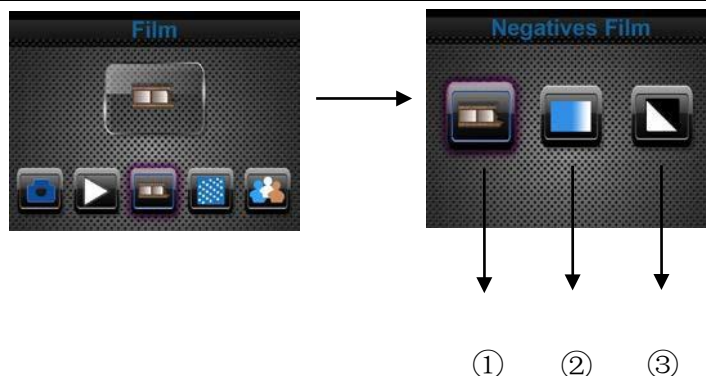


- ① Negatives Film: select Negatives film when load color negative film in holder
- ② Slides: select Slides when load slide in holder
- ③ B&W: select B&W when load B&W negative film in holder

User can press LEFT/RIGHT button to select film type, then press ENTER button to confirm

Effect

When the Photo scanner mode is selected, user can change color effect by enter Effect menu when power on the device or access the main menu by Home icon/MODE button anytime. Press LEFT/RIGHT button for Effect and press ENTER button to confirm

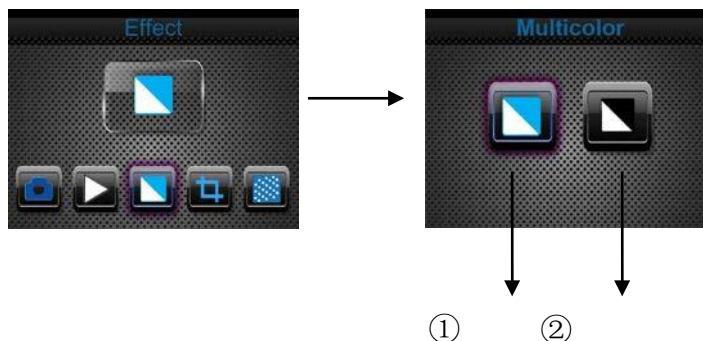


- ① Multicolor effect
- ② B&W effect

User can press LEFT/RIGHT button to select color effect, then press ENTER button to confirm

Crop proportion

When the Photo scanner mode is selected, user can change crop proportion by enter Crop menu when power on the device or access the main menu by Home icon/MODE button during operation. Press LEFT/RIGHT button for Crop and press ENTER button to confirm

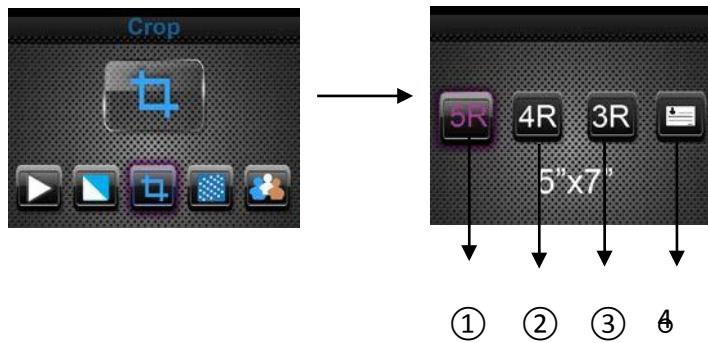

- ① 5R (5"X7") crop proportion
- ② 4R (4"X6") crop proportion
- ③ 3R (3 ½ "x5") crop proportion
- ④ Name card crop proportion

User can press LEFT/RIGHT button to select crop proportion, then press ENTER button to confirm

Resolution

Change resolution by enter Resolution menu when power on the device or access the main menu Home icon/MODE button anytime. Press LEFT/RIGHT button for Resolution and press ENTER button to confirm



- ① 8M resolution
- ② 16M resolution

User can press LEFT/RIGHT button to select resolution, then press ENTER button to confirm

Language

Change language definition by entering language menu when power on the device or access the main menu by Home icon/MODE button anytime. Press LEFT/RIGHT button for language and press ENTER button to confirm.




User can press LEFT/RIGHT button to select language, then press ENTER button to confirm

USB mode

After finishing scanning, please take out the memory card from the film & photo scanner to download the stored images from the memory card.

When the device is connected with USB cable to PC, User can also press MODE button to main menu, then press LEFT/RIGHT button to select USB mode, then press ENTER button to confirm, the film & photo scanner will become a mass storage device and user can review or edit images on PC.

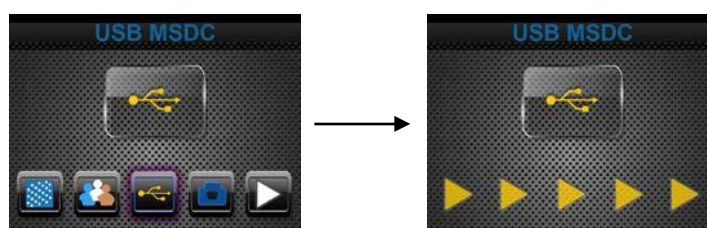

User can also press MODE button to go back to main menu.

Trouble shooting

Question: There is unwanted stripe appearance at the edge of the image.

Answer: If it is slight stripe, move the slide holder gently to and fro in the device until the stripe is no longer visible in the preview window. If the stripe is still, please contact with our retailer.

Question: The device cannot connect to the computer.

Answer: Please check if the cable has already connected to the USB port of the computer. Or connect the cable to another USB port. It is recommended that connect it to the motherboard directly, not to the front panel.

Turn on the power button, enter USB mode, it acts as a mass storage device.

Cleaning: We strongly suggest using a clean, dry, non-alcohol cotton swab to clean the glass surface periodically to produce a clear image.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.



DO NOT use If the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 LDPE	 OTHER
Type of Plastic	Low Density Polyethylene	(includes ABS, Nylon)
Commonly used for	Shopping bags, bread bags, squeeze bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

