

# Spinning Duster

H043 v01: 02/11/20

Please read and retain these instructions for future reference



## Dimensions

Main body is 23.8cm long x4.2cm wide, small duster length 13cm, large duster length 25cm, extensions poles 19cm each and there are 2 of them

- OUR SPINNING DUSTER USES STATIC ELECTRICITY TO COLLECT DUST LIKE A MAGNET
- EACH BRUSH HEAD HAS THOUSANDS OF DUST GRABBING SOFT BRISTLES
- POWERED BY BATTERIES JUST PRESS THE BUTTON AND THE DUSTER WILL SPIN QUICKLY AND POWERFULLY SO ALL YOU NEED TO DO IS GLIDE OVER THE AREAS THAT NEED DUSTING
- COMES WITH 2 BRUSHES HEADS A LARGE AND A SMALL AS WELL AS AN EXTENSION POLE FOR USE WITH THE SMALLER HEAD TO REACH THOSE OUT OF REACH PLACES.
- THE SOFT BRISTLES ADAPT TO ANY SHAPE, CREVICE OR CORNER
- WHEN DONE SIMPLY RINSE THE BRUSH HEADS WITH WATER AND LEAVE TO DRY READY FOR NEXT TIME
- GREAT FOR BLINDS, ORNAMENTS, LIGHTS, CEILING EDGES ETC
- Powered by battery: 4x AA (not included)

## Warning

- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- DO NOT USE NEAR WATER, OR WHEN THE DUSTER HEAD IS WET AFTER WASHING.
- DO NOT BEND DUSTER HEAD OR USE FORCE WHILE DUSTING. IF THE DUSTER HEAD SEEMS BENT, DO NOT USE. USE OF BENT DUSTER HEAD MAY CAUSE DAMAGE TO POWER HANDLE.
- REPLACE BATTERIES WHEN SPIN DUSTER BECOMES SLOW OR IT STOPS DURING USE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT FORCE SPINING DUSTER INTO EXTREMELY TIGHT PLACES.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.

## BEFORE THE FIRST USE:

Insert 4x batteries AA in the battery compartment on the top of the handle, inside the threaded openings


\*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department  
Head Office: 11 Bridge Street  
Bishop's Stortford, CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
www.coopersofstortford.co.uk

where joined to the rotating engine (positive part closer to the opening) Close by turning the rotating engine clockwise.

### Use

1. Before using the duster it is suggested to rotate the handle fast between your hands to create electrostatic charge (see fig.1)
2. Attach the desired dust feather on the top of the handle of the Spinning Duster by inserting it and slightly turning it until it clicks in place.
3. Move the blue switch ON/OFF to the ON position.
4. Move the Spinning Duster lightly along the desired surfaces in a way that the electrostatic fibres will catch the dust: Spinning Duster can be used also on most delicate objects.
5. To use the handle rotate the two parts of the handle in the opposite way one from the other: the upper part clockwise and the lower part anti-clockwise, do not pull both sides to extend. Lock it by turning the two extremities or the handle in opposite way.
6. To use the articulated feather duster set the engine arm according to the desired angle. You will hear a click.
7. NB: You can use the extendible part and the articulated part at the same time to be able to reach the most remote corner while Spinning Duster is active (ON position).

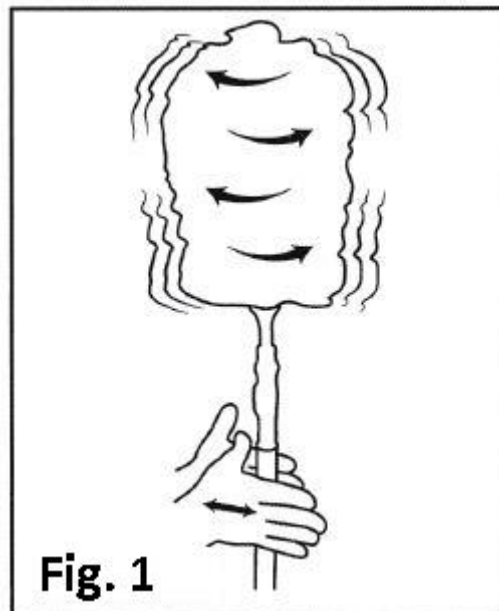

### Cleaning and Maintenance

- Switch off Spinning Duster by sliding down the switch into the OFF position.
- Gently pull off the duster head and shake it over a litter bin or outdoors to release the dust.
- Duster head may also be rinsed under the tap. Please air dry completely before next use or storing.
- Do not expose the handle to water. Wipe clean with a damp cloth.

### BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.


Please read and retain these instructions for future reference

v001: 02/11/20

### DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

