

Cordless Swivelling Sweeper

H047 v01: 12/10/20

Please read and retain these instructions for future reference

BERGSTRÖM



- RECHARGEABLE, CORDLESS SWIVELLING SWEEPER
- 4.8V Ni-mh BATTERY
- LONG RUN TIME ON EACH CHARGE 30 MINUTES
- 10 HOURS RECHARGE TIME
- WITH 100ml EASY OPEN DUST BIN
- SUITABLE FOR SHORT PILE CARPET
- WITH THE SWIVELLING HEAD AND THE ERGONOMIC TRIANGULAR SHAPE WITH BRUSHES ON ALL SIDES YOU CAN REACH EVERY CORNER OF THE ROOM & GIVE A THOROUGH CLEAN
- THE HEAD SWIVELS 130 DEGREES
- 3 LONG BRUSHES (1 ON EACH SIDE) & ROLLER BALL WHEELS TO AVOID SCRATCHING
- NO ANNOYING CABLES, JUST PICK UP TURN ON AND GO
- LIGHTWEIGHT AT JUST 1.1KGS IT'S A DREAM TO USE
- COMES COMPLETE WITH BATTERY AND MAINS POWERED CHARGER

Technical details

Input: 230-240V, 50Hz 9W

Output: 6V DC 200 mA

Dimensions

110 (fully extended) x29 x32cm

The sweeper is designed for use on wood, ceramic, tile and other smooth surfaces.

It can be used on very short hairless carpet but with limited functionality and battery life.

Not suitable for carpets with long fibres as carpet fibres may interfere with the brush. If this occurs, the sweeper motor will be turned off for protection.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.

*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department
Head Office: 11 Bridge Street
Bishop's Stortford, CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

 
Getting started

- Remove the appliance from the box.
- Remove any packaging from the appliance.
- Place the packaging inside the box and either store or dispose of safely.

In the box

- Swivelling sweeper head
- Lower extension pole with built-in battery
- Mid-section extension pole
- Top extension pole with handle
- Charger
- Cleaning tool
- Instruction manual

Parts

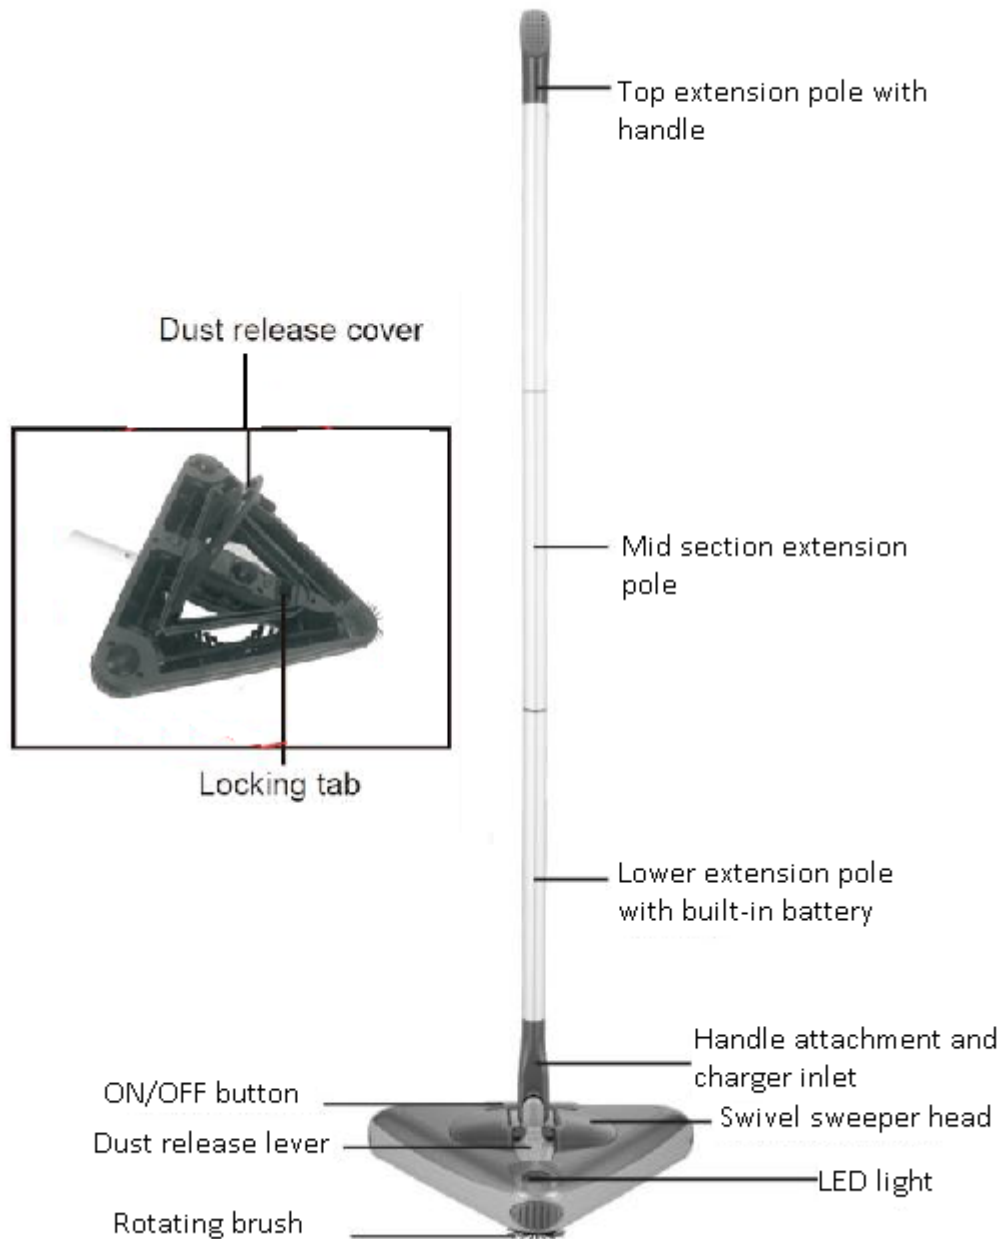

Before first use

- Step 1:** Place the swivelling sweeper head on the floor, ensuring that the handle attachment is facing upwards.
- Step 2:** Connect the lower extension pole with the built-in battery to the handle attachment and charger inlet. Ensure that the locking tab is aligned with the notch in the extension pole.
- Step 3:** Depending upon the length of the pole required, either connect the top section pole with the handle to the lower extension pole or for a longer reach also connect the mid-section extension pole.
- Step 4:** Plug the charger into the charger inlet at the base of the swivelling sweeper handle and plug the plug end into the mains power supply, then switch on. The indicator light will illuminate to indicate that the battery is charging.
- Step 5:** To use the swivelling sweeper, switch off the charger at the mains power supply and remove the charger from the charger inlet. Use the ON/OFF button located at the swivelling sweeper handle base to start the swivelling sweeper.
- Note:** Keep the brushes free of fibres, hairs, and other objects that could impede the proper functioning of the swivelling sweeper. Remove any hairs or fibres if this occurs.

Battery Charging

 
To maintain the battery's longevity:

The swivelling sweeper does not come charged. Ensure that prior to first use, the swivelling sweeper is charged for approximately 10 hours.

Discharge the battery fully, before recharging again on next use.

Subsequent charges should then only require approximately 5-6 hours.

Do not leave the appliance plugged in to the mains power supply on charge for extended periods of time when not in use as this will decrease the life of the battery.

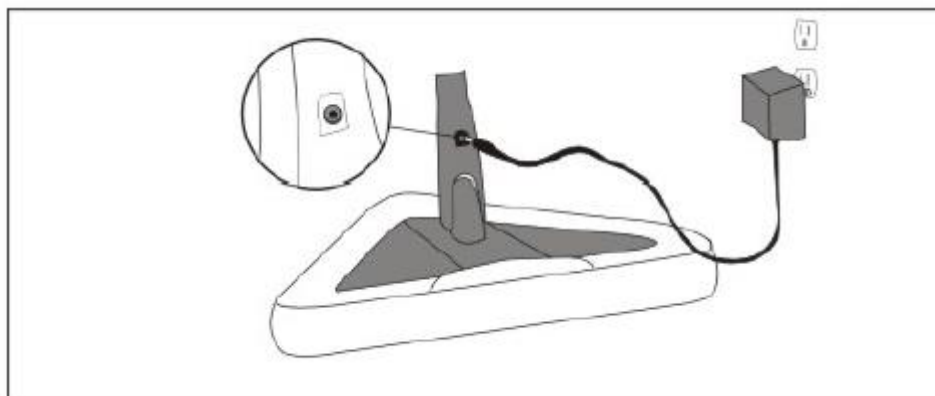

Care and Maintenance

The dust container must be emptied after each use or when it is full.

To empty the dust container, hold the swivelling sweeper over a bin and pull the dust release lever.

The dust release cover will automatically open.

 
Gently give the swivelling sweeper a shake to remove excess dust then press the dust cover container cover closed gently until it clicks.



Brush Cleaning Tool

Over time the appliance's cleaning brushes may accumulate fine debris such as hair, thread and other particles. It is recommended to clean the rotating brushes on occasion using the included "Brush Cleaning Tool".

1. Make sure the appliance is turned off before cleaning.
2. Use the cleaning brush tool to cut and remove tangled debris. Simply guide the blade along the shaft of the rotating cleaning brushes.
3. Dispose of debris in the bin.

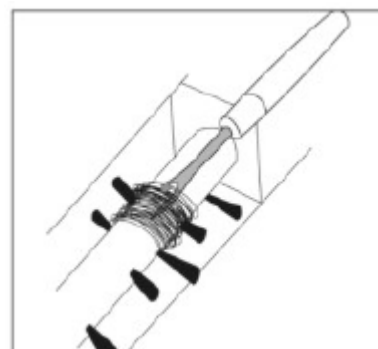

Troubleshooting

Symptom	Possible cause	Solution
The swivelling sweeper does not charge.	The charger is not connected properly.	Ensure that the charger is correctly fitted to both the charger inlet on the swivelling sweeper and the mains power supply and that the mains power supply is switched on.
The swivelling sweeper does not sweep efficiently.	Hair and fibres have covered the brushes. The dust container is full.	Remove any hair and fibres from the brushes. Empty the dust container.

Storage

To store the swivelling sweeper, push the handle forward until it rests securely in place.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.

- Follow the battery manufacturer's safety, usage, and disposal instructions.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.





DO NOT use if the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

DO NOT use with any other mains transformer/charger than the one that is supplied with this product.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 PVC	 LDPE	 PP	 OTHER
Type of Plastic	Polyvinyl Chloride	Low Density Polyethylene	Polypropylene	Please Specify (includes ABS, Nylon)
Commonly used for	Pipes, construction material, flooring, windows, guttering, blister packs	Shopping bags, bread bags, squeeze bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not usually collected from household recycling bins, Sometimes recycled at local waste management centres.	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.