 


# Feather-Light Cylinder Vacuum

**H048** v01: 11/9/20

Please read and retain these instructions for future reference

# BERGSTRÖM

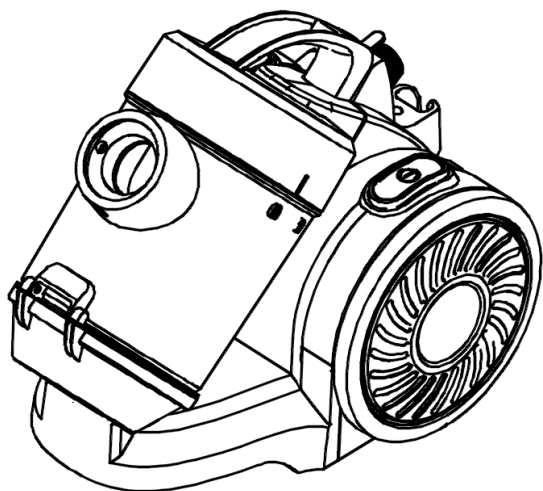

## Technical Details

220-240V a.c., 50/60Hz, 800W

## Weight

3.2kg

## Dimensions

 
34 x24 x28.5cm

- WEIGHING JUST 3.2KGS THIS VACUUM IS A BREEZE TO USE AND MOVE UPSTAIRS OR DOWNSTAIRS
- A DREAM TO STORE AS IT TAKES UP HARDLY ANY ROOM
- BAGLESS SO NO NEED FOR EXPENSIVE BAGS
- COMES COMPLETE WITH A 2 IN 1 BRUSH HEAD A CREVICE HEAD AND A BRUSH HEAD AS WELL AS A BONUS FREE HEAD ESPECIALLY DESIGNED TO PICK UP PET HAIR
- CYCLONIC TECHNOLOGY MEANS CONSISTENT AND GREAT SUCTION POWER
- SUITABLE FOR USE ON ALL TYPES OF FLOORS AND CARPETS
- EASY CARRY HANDLE
- BUILT IN WHEELS
- 1.2L EASY EMPTY DUST BIN
- EASY CLEAN WASHABLE FILTER
- 3.8M POWER LEAD
- MAINS POWERED

\*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department  
Head Office: 11 Bridge Street  
Bishop's Stortford, CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

## Parts

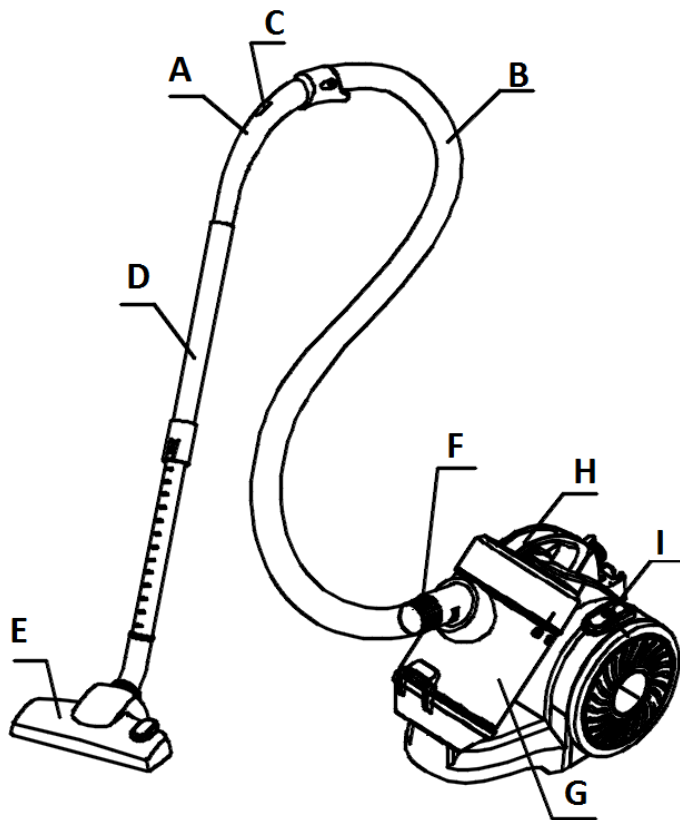

- A. Tube Handle
- B. Flexible hose
- C. Wind-force adjuster
- D. Tube
- E. Floor brush
- F. Flexible hose connector
- G. Dust bin
- H. Cord rewind button
- I. ON/OFF button

## SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

 
 

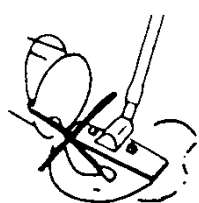 
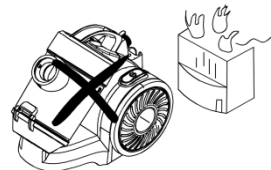 
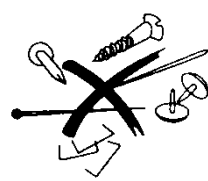 
- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CORD, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT USE OUTDOORS.
- DO NOT LET CORD HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- **DO NOT** COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.

# Feather-Light Cylinder Vacuum H048 Instructions for Use

Please read and retain these instructions for future reference

v001: 11/09/20

- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- DO NOT USE THE APPLIANCE TO VACUUM INFLAMMABLE SUBSTANCES, LIKE CIGARETTES AND HOT ASHES.
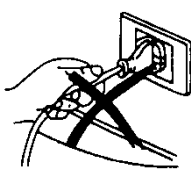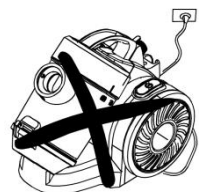
<p>Do not remove the plug from the socket by pulling the cable or the appliance itself.</p> 	<p>Do not run the appliance over the power cable.</p> 	<p>Do not use the appliance to vacuum lighted matches, cigarette ends or hot ash.</p> 
<p>Do not use the appliance on wet surfaces.</p> 	<p>Do not place it near a heat source</p> 	<p>Do not use the appliance to vacuum needles, drawing-pins or sharp items.</p> 

## Assembling the Vacuum Cleaner

Always remove the plug from the power socket before fitting or removing accessories!

## Fitting the flexible tube

Insert the flexible tube into the air intake duct on the appliance. To do this, slide the intake duct cover insert the tube and press until it clicks into position.

 
# Feather-Light Cylinder Vacuum H048 Instructions for Use

Please read and retain these instructions for future reference


v001: 11/09/20

## Removing the flexible tube

Remove the plug from the power socket. To release the flexible tube, press the button on the end of the tube firmly the air intake duct.

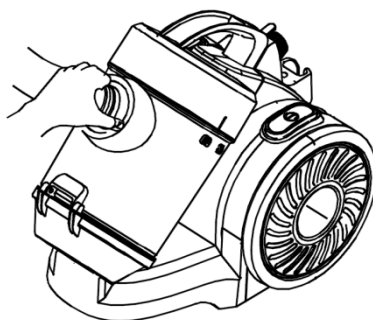

## Fitting the extension tubes and accessories

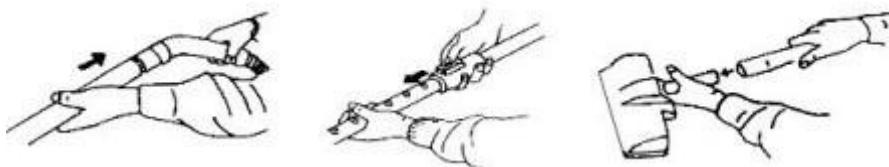 


## Removing the extension tubes and accessories

To remove the accessories, pull firmly apart.

## INSTRUCTION FOR USE

 Before using the appliance, unwind length of cable and insert the plug into the power socket, A YELLOW mark on the power cable shows the ideal cable length. **Do not extend the cable beyond the Red mark.** To rewind the power cable, press the rewind button switch with one hand, and guide the other hand to ensure that it does not whip causing damage. If the power cable cannot rewind completely please pull out the power cable slightly and press the rewriter button again. You can repeat the rewinding steps until the cable is rewound completely.

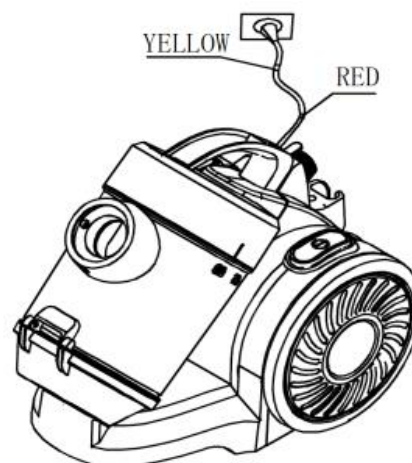


# Feather-Light Cylinder Vacuum H048 Instructions for Use

Please read and retain these instructions for future reference








v001: 11/09/20

 Press the ON/OFF button to switch the appliance on.

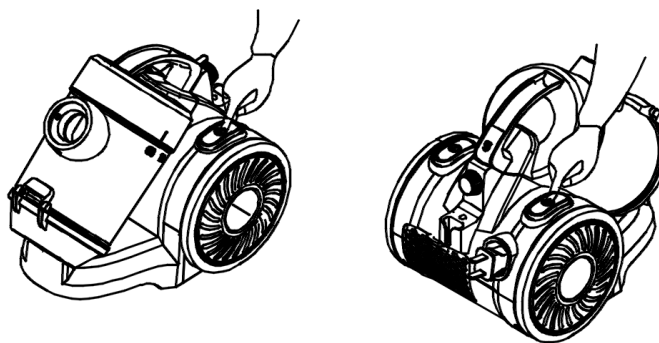

## How to Clean the Dust Cabin

       1. After removing the flexible tube, push on the dust bin release button.
2. Dust bin is released when the dust bin lock button is pressed.
3. Empty the dust bin.
4. Turn the cover of dust cabin, to take out HEPA filter to clean.
5. Take out and clean the cyclone segregator when the dust bin is full; re-assembled after cleaning.

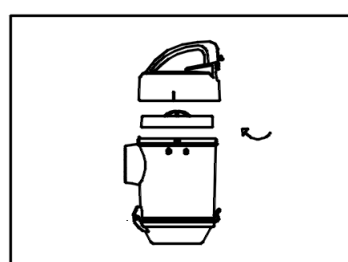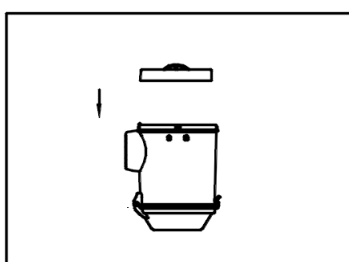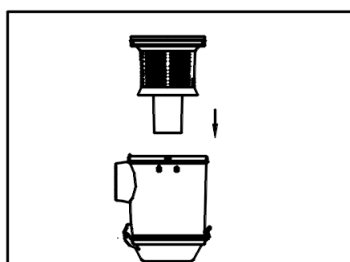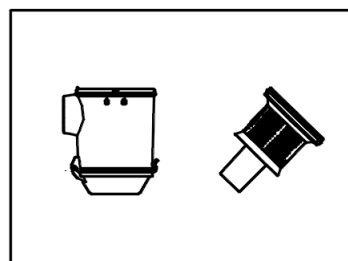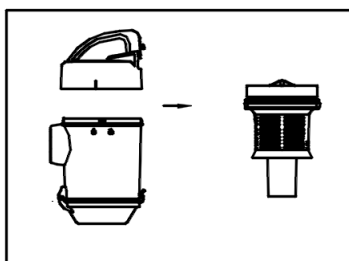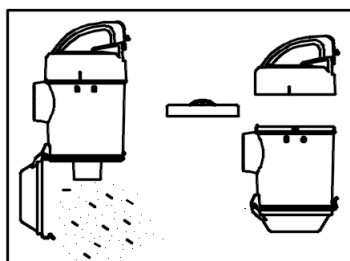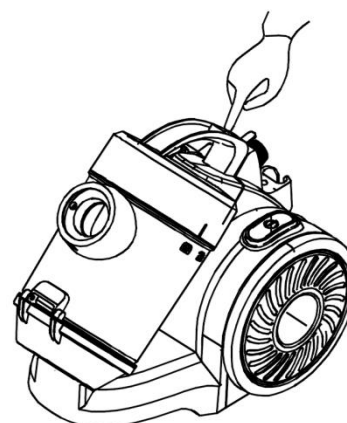

# Feather-Light Cylinder Vacuum H048 Instructions for Use


Please read and retain these instructions for future reference

v001: 11/09/20


## Using the Cleaning Accessories

### Dual position carpet/floor brush

 Position 1: Bristles extended for hard floors

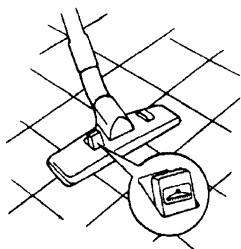


Position 2: Bristles retracted for carpets

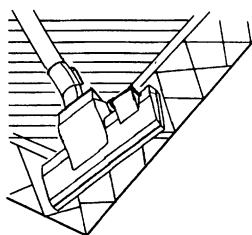 

### Narrow nozzle

 For cleaning radiators, corners, edges, drawers etc

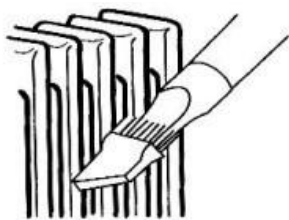

### Small Brush

For cleaning curtains, shelves, books, lamps and other delicate objects



 
 
### Pet Hair Brush

For removing pet hair from furniture etc.



## Cleaning and Storage

- Clean the floor brush regular.
- Floor brush can be fixed to stand onto the vacuum cleaner.

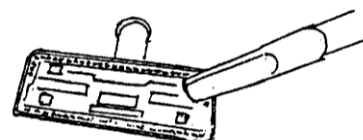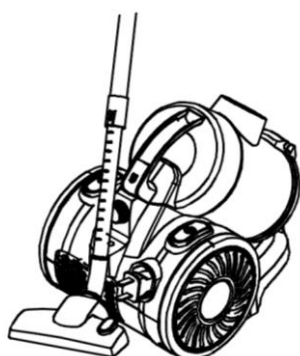

## PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amps should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to

\*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department  
Head Office: 11 Bridge Street  
Bishop's Stortford, CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
www.coopersofstortford.co.uk

# Feather-Light Cylinder Vacuum H048 Instructions for Use

 
Please read and retain these instructions for future reference

v001: 11/09/20

insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

## The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is double insulated; the wires in the cord set are colour coded in the following way:

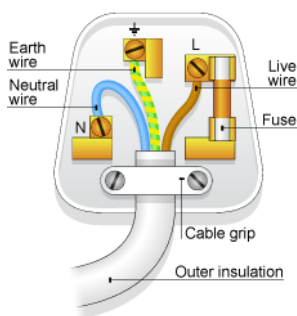

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH



The diagram shows the key features of a correctly wired three-pin mains plug.

**Note:**  
Double insulated appliances do not need the green & yellow Earth wire. They may only have the Brown and Blue wires.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 PP	 OTHER
Type of Plastic	Polypropylene	ABS
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



\*Calls cost 7 pence per minute plus your telephone company's network access charge



The Enterprise Department  
 Head Office: 11 Bridge Street  
 Bishop's Stortford, CM23 2JU  
 Tel: 0844 482 4400\*  
 Fax: 01279 756 595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)