

Electric Can Opener

H090 v03: 31/08/22

Please read and retain these instructions for future reference

Basilico 



Technical Data

220-240V 50Hz 80W

Dimensions

14 x14 x24cm

- EASY OPEN AT THE TOUCH OF A BUTTON
- NO MORE SHARP LID EDGES
- OPEN POP TOP AND REGULAR CANS
- EASY TOUCH OPENING LEVER
- SLEEK BLACK + CHROME DESIGN
- ALSO HAS CAN OPENER FUNCTION

Warning: Sharp blade

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.

**The Enterprise
Department**

UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU

Tel: 0844 4824400*, Fax: 01279 756595

www.coopersofstortford.co.uk

 
EU address: D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France

Tel: (+44) 1279 701269

*UK Calls cost around 7 pence per minute plus your telephone company's network access.
Please check with your telephone supplier.

- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.



Parts

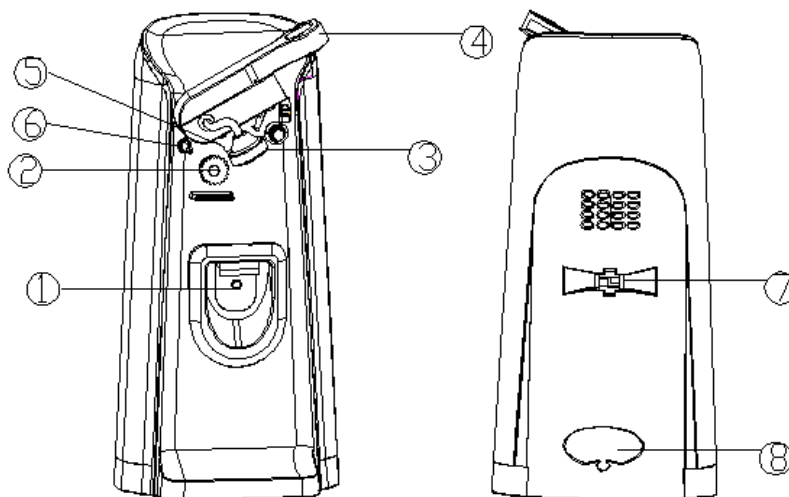


Key

1. Bottle opener
2. Drive wheel
3. Magnet
4. Lever
5. Cutter blade
6. Guide pin
7. Knife sharpener
8. Cord storage

  
Assembly instructions

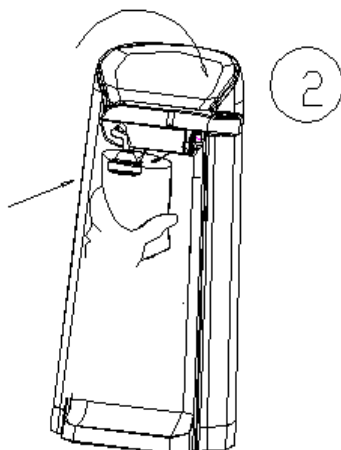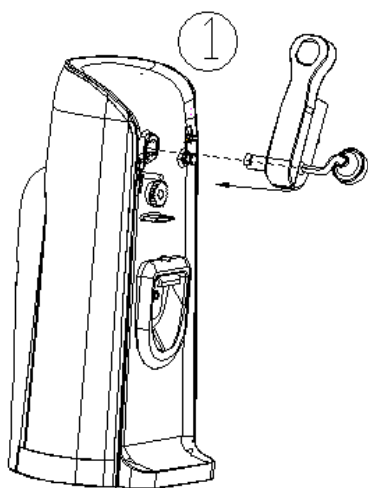


1. Attach lever
2. The can is held in place by a magnet which drives the drive wheel. Operate lever (not shown) to start the can to rotate.

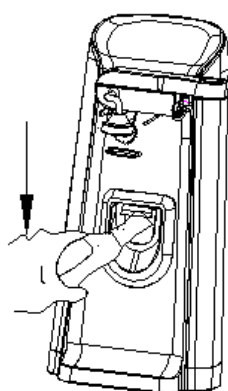 

 3. Bottle opener

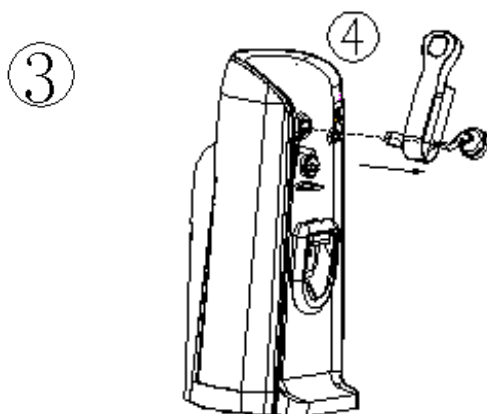

 4. Can opener

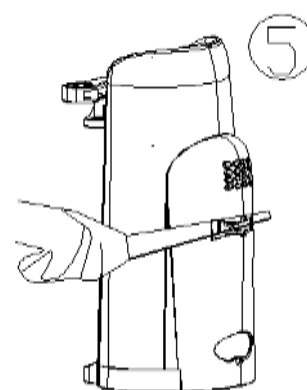

5. Knife Sharpener

Using your table top can opener

1. Ensure that the lever is in position with the magnet housing fully located **1&2**.
2. Plug the appliance into the power supply.
3. Lift the lever to the open position.
4. Hold the can with the top rim resting under the metal guide pin and the can resting on the drive wheel **3**.
5. Press the lever lightly down to start the motor. The self-starting blade will then pierce the can and commence cutting.

6. The can will be held fixed in position with the magnet resting against the lid. Large or wide cans may require extra support from the user.
7. Once the can is open, the motor will automatically stop ,retaining the can and lid safely in place.
8. To remove , lift the lever whilst holding the can.
9. With the exception of aluminium cans, the lid will be retained by the magnet.
10. For tidiness, any unwanted length of cord can be stowed inside the appliance.

Using the bottle opener

When opening tall bottles, the unit should be used towards the edge of a work top.

1. 1 Position the bottle with the cap under the front rim of the bottle opener ④.
2. 2 Push down the bottle to remove the cap whilst steadying the unit with one hand.

Using the knife sharpener

1. With the can opener sideways on, place the knife into the recess.
2. Press the knife down and gradually draw it towards yourself ⑤. Take care not to allow the knife to cut into the body of the can opener.
3. Repeat this cycle several times in order to sharpen the knife satisfactorily.



NOTE: Knives without a serrated edge, preferably carbon steel are most suitable for sharpening.

Care and cleaning

 
1. Disconnect the appliance by switching off and removing the plug from the power supply.
2. Lift the lever fully and withdraw the assembly from the can opener ⑥.
3. Wash the lever in hot sudsy water and dry thoroughly. Dish washing is not advised.
4. Replace the lever in the body.
5. Wipe over the body with a damp cloth and dry thoroughly.

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 3-amperes should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is double insulated; the wires in the cord set are colour coded in the following way:

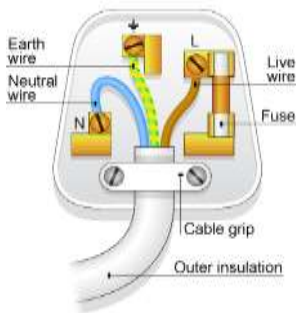

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram shows the key features of a correctly wired three-pin mains plug.


Note:

Double insulated appliances do not need the green & yellow Earth wire. They may only have the Brown and Blue wires.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 OTHER
Type of Plastic	ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

