



## Dimensions

D20cm xH19cm

- THIS STAINLESS STEEL KETTLE FEATURES A COPPER FINISH AND EMITS A LOUD WHISTLE WHEN WATER REACHES A BOIL. HINGED SPOUT FOR EASY POURING AND A COOL-GRIP ERGONOMIC HANDLE.
- AS THE WATER BOILS AND STEAM IS PRODUCED THIS FLOWS THROUGH THE SPOUT AND CREATES A WHISTLING SOUNDS TO INDICATE YOUR WATER IS BOILED AND IT'S TIME FOR TEA!
- COOL TOUCH HANDLE
- 2L CAPACITY
- CAN BE USED ON ELECTRIC OR GAS STOVES
- PULL CENTRE OPENING FOR WATER. PRESS BUTTON IN HANDLE WHEN POURING

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

### BEFORE FIRST USE

- Hand wash kettle with hot, soapy water. Rinse and dry the exterior thoroughly

### TEA KETTLE USE&CARE

- Remove lid and fill whistling kettle at least half full with clean water before placing on stovetop. Do not overfill. Maximum water level is just below the spout of the whistling kettle.
- Ensure that the lid is properly secured to the top of the whistling kettle.
- Use medium to medium-high heat only.
- Once the kettle begins to whistle, the water is boiled. Turn off heat, remove kettle from heat source and allow at least 10 seconds after boiling before pouring.
- To avoid hot water spills, pour water away from your body and at low angle to your cup or other vessel. Pouring from a high angle can cause hot water to splatter and cause burns.
- Allow kettle to cool naturally on a heat-resistant surface before refilling.
- To prevent warpage, always allow your kettle to cool before adding any cold water. If damage is apparent, the kettle should not be reused.

### DESCALING YOUR KETTLE

- Your kettle should be descaled on a monthly basis to lengthen the life of the kettle, maintain the energy efficiency and ensure a clean interior appearance.
- Fill the kettle up to the "MAX" level with a mixture of one part white vinegar and two parts water and bring to a boil. Allow to boil for 5 minutes.
- Let the mixture remain inside the kettle overnight.
- Throw the mixture away the next morning.
- Fill the kettle with clean, cold water up to the "MAX" level and bring to boil.

- Discard this boiled water and any remaining scale and vinegar.
- Rinse the inside of the kettle with clean water.
- The kettle is now ready to be used.


## CARE AND CLEANING INSTRUCTIONS

- This kettle is not recommended for the dishwasher.
- To maintain quality appearance, wash and dry the exterior of the kettle with a soft cloth. If stubborn stains persist, use a stainless steel cleaner and non-abrasive cloth, pad or sponge.

## DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – this is made from the following recyclable plastic.



|                   |  |
|-------------------|--|
| Code & Symbol     |    |
| Type of Plastic   | Polypropylene  |
| Commonly used for | Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups   |
| Notes             | Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard) |

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.