Microwave Scrambled Egg Cooker н101 Instructions for Use

Please read and retain these instructions for future reference

v001: 14/08/20



Dimensions 25 x10 x10cm

- 2 MINS FOR 2 EGGS
- CRACK, SHAKE, MICROWAVE FOR THE MOST DELICIOUS EGGS!
- EVEN COMES WITH AN EGG WHITE SEPARATOR.
 - FAST DELICIOUS EGGS WITHOUT THE MESS.
- COOKS UP TO 4 EGGS AT ONE TIME.
- HEALTHY MEAL IDEA
- ERGONOMIC HANDLE

To use (Scrambled Egg)

- 1. Simply crack your egg into the bowl. (Can cook up to 4 eggs).
- 2. Close the lid hold the handle and give it a shake and the in-built prongs will whisk for you.
- 3. Pop into the microwave (with lid on) and cook for 40 to 60 seconds (Note: time will vary depending on your microwave power).

Important

- Always take care when removing bowl from the microwave, as it may be hot.
- When lifting the lid be aware there might be hot steam coming from the bowl.
- Never leave your microwave unattended while cooking.

CARE AND CLEANING INSTRUCTIONS:

• Dishwasher safe

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.



• Plastics, polybags – this is made from the following recyclable plastic.

Code & Symbol	
Type of Plastic	Polypropylene
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable pltes and cups
Notes	Commonly recycled and collected from household recycling bins
	(packaging tape itself not recyclable but does not interfere with cardboard)

• At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400* Fax: 01279 756 595 www.coopersofstortford.co.uk

