

# Singing Robin

H308 v001: 04/01/21

Please read and retain these instructions for future reference

**GAINSBOROUGH**  
Garden & Wildlife



## Dimensions

10 x 7.5 x 20cm

- NOW YOU CAN ENJOY ONE OF BRITAINS FAVOURITE BIRDS ALL YEAR ROUND AND HAVE IT SING TO YOU WHILE YOU ENJOY YOUR GARDEN
- TRIGGERED BY THE BUILT IN MOTION SENSOR THAT WORKS UP TO A METER
- WONDERFULLY REALISTIC
- THE ROBIN IS HAPPILY PERCHED ON A LOG
- POWERED BY 2 x AA AKALINE Batteries (not included)

Position away from obstacles, shrubs or trees for best operation of the motion sensor.

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

Unpack the components carefully. Please check all parts have been removed from the packaging.

**The Robin has a shadow sensor function and will start singing automatically when shadow comes within 1 meter. Set the switch (circled below) to the ON position.**

## Battery replacement



Push the battery case in the direction of the arrow and open it to replace batteries as shown.



## BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.



\*Calls cost 7 pence per minute plus your telephone company's network access charge

The Enterprise Department  
Head Office: 11 Bridge Street  
Bishop's Stortford, CM23 2JU  
Tel: 0844 482 4400\*  
Fax: 01279 756 595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

**DISPOSAL**

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 PP	 OTHER
Type of Plastic	Polypropylene	ABS
Commonly used for	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



**GAINSBOROUGH**  
Garden & Wildlife